

User manual
NFD-3090-PNS-IOLM\W
netFIELD IO-Link Wireless Master PROFINET IO-Device



Hilscher Gesellschaft für Systemautomation mbH
www.hilscher.com

Table of contents

1	Introduction	5
1.1	About this document	5
1.2	List of revisions	5
2	Device description	6
2.1	Functional description	6
2.2	Device overview	7
2.3	Product software	9
2.4	Revisions and versions	9
2.5	Identification	10
2.6	Connectors and interfaces	11
2.6.1	Power supply	11
2.6.2	Ethernet	11
2.6.3	IO-Link, SMA antenna.....	12
2.7	Derating.....	12
3	Safety	13
3.1	General note	13
3.2	Intended use	13
3.3	Personnel qualification	13
3.4	Power drop during write and delete accesses in the file system.....	14
3.5	Exceeding the maximum number of permitted write and delete accesses	14
3.6	Information and data security.....	14
4	Getting started	15
5	Requirements	16
5.1	Hardware and system requirements	16
5.2	Software requirements	16
6	Mounting and demounting.....	17
6.1	Mounting	17
6.1.1	Grounding	19
6.2	Demounting.....	19
6.3	Disposal of waste electronic equipment.....	20
7	Connections	21
7.1	Connection example	22
8	Configuration	23
8.1	Configuration tools	23
8.2	Configuring PROFINET IO.....	27
8.2.1	Configuring ports / selecting modules	28
8.2.2	Setting parameters.....	30
8.3	Configuration with netFIELD Wireless Web Server	36
8.3.1	Functional overview	36
8.3.2	Open netFIELD Wireless Web Server	37

8.3.3	Dashboard	38
8.3.4	Licenses	39
8.3.5	Log in or User administration	39
8.3.6	Device settings.....	42
8.3.7	IO-Link Wireless Master settings	53
8.3.8	Device or port information, pairing, IOLWD update	61
9	Commissioning	80
9.1	Setting the IP address.....	80
9.2	Configuration with netFIELD Wireless Web Server	82
9.2.1	Configuring the IO-Link Wireless Master	83
9.2.2	Port settings for commissioning	85
9.3	Testing	89
9.4	Master reset	91
9.5	Indexed Service Data Units.....	92
9.6	Wireless	94
9.7	Setting date and time	94
9.8	Using OPC UA Client.....	95
9.8.1	Connecting with device	95
9.8.2	Setting date and time of the device via OPC UA	97
10	Communication.....	99
10.1	Process data of the PROFINET IO-Device	99
10.1.1	Process data of submodule „IO-Link Wireless Master“	99
10.1.2	Process data of submodules „IO-Link Wireless Device X I / X O + PQI“	100
10.1.3	Process data of submodules „IO-Link Wireless Device X I + PQI“	101
10.1.4	Process data of submodules „IO-Link Wireless Device X O + PQI“	102
10.1.5	Port Qualifier Information	103
10.1.6	Provider and consumer status	103
10.2	OPC UA	104
10.2.1	Device identification	105
10.2.2	Identification of connected IO-Link Devices	105
10.2.3	NTP Client configuration	106
10.3	MQTT topics.....	107
10.3.1	General parts of a topic.....	107
10.3.2	Gateway topics	107
10.3.3	Master topics.....	109
10.3.4	Device topics.....	113
10.3.5	MQTT topics	116
11	Diagnosis.....	117
11.1	Diagnosis via LEDs	117
11.1.1	System LED	117
11.1.2	APL LED	118
11.1.3	Supply voltage status.....	118
11.1.4	PROFINET IO-Device status	119
11.1.5	Wireless track status.....	120
11.1.6	Wireless port status	120
11.2	Diagnosis over IO-Link.....	121
11.2.1	Event Qualifier	121
11.2.2	IO-Link Wireless Master Event Codes	121
11.2.3	IO-Link Device Event Codes (common).....	122

12	Technical data	124
12.1	Technical data device	124
12.2	Technical data IO-Link Wireless Master	126
12.3	Technical data protocol	126
12.4	Technical data netFIELD Wireless Web Server	127
12.5	OPC UA Server	127
12.6	MQTT Client	127
13	Dimensions	128
13.1	Dimensions netFIELD IO-Link Wireless Master device	128
14	Approvals	129
14.1	FCC/ISED	129
15	Appendix	131
15.1	References	131
15.2	Conventions in this manual	132
15.3	Directives and standards	133
15.4	Legal notes	134
15.5	Registered trademarks	138
	Glossary	144
	Contacts	146

1 Introduction

1.1 About this document

This document describes the netFIELD IO-Link Wireless Master PROFINET IO-Device **NFD-3090-PNS-IOLM\W** device.

1.2 List of revisions

Index	Date	Revision
1	2020-11-12	Document created.
2	2021-08-31	<p><i>Description:</i> Section <i>Device description</i> [▶ page 6] updated, sections <i>Product software</i> [▶ page 9] and <i>Derating</i> [▶ page 12] added.</p> <p><i>Configuration:</i> Section <i>Configuration tools</i> [▶ page 23] updated. Section <i>Configuring PROFINET IO</i> [▶ page 27] updated, section <i>Setting parameters</i> [▶ page 30] updated.</p> <p>Section <i>Configuration with netFIELD Wireless Web Server</i> [▶ page 36] description updated (subsections <i>Device ISDU</i> [▶ page 74] and <i>Port settings for commissioning</i> [▶ page 85], and further updates).</p> <p><i>Commissioning:</i> Sections <i>Setting date and time</i> [▶ page 94], and <i>Using OPC UA Client</i> [▶ page 95] added.</p> <p><i>Communication:</i> Section <i>Process data of the PROFINET IO-Device</i> [▶ page 99] revised.</p> <p>Section <i>NTP Client configuration</i> [▶ page 106] added, and sections <i>MQTT topics</i> [▶ page 107] with <i>General parts of a topic</i> [▶ page 107] added.</p> <p><i>Diagnosis:</i> Section <i>PROFINET IO-Device status</i> [▶ page 119] updated; section <i>Wireless port status</i> [▶ page 120] updated.</p> <p><i>Technical data:</i> Section <i>Technical data device</i> [▶ page 124] updated. Sections <i>Technical data IO-Link Wireless Master</i> [▶ page 126], <i>Technical data netFIELD Wireless Web Server</i> [▶ page 127], <i>OPC UA Server</i> [▶ page 127] and <i>MQTT Client</i> [▶ page 127] added. Section <i>Technical data protocol</i> [▶ page 126] updated.</p> <p><i>Approvals:</i> Chapter <i>Approvals</i> [▶ page 129] added. <i>Appendix:</i> Section <i>Directives and standards</i> [▶ page 133] added.</p>
3	2022-02-25	<p>Product released.</p> <p><i>Description:</i> Section <i>Revisions and versions</i> [▶ page 9] and section <i>Identification</i> [▶ page 10] updated.</p> <p><i>Connections:</i> Section <i>Connection example</i> [▶ page 22] updated.</p> <p><i>Configuration:</i> Section <i>Configuration with netFIELD Wireless Web Server</i> [▶ page 36] description updated (subsections <i>Pairing</i> [▶ page 70] and <i>IOLWD Update</i> [▶ page 72] added, and further updates).</p> <p><i>Communication:</i> Section <i>OPC UA</i> [▶ page 104] updated, section <i>Device topics</i> [▶ page 113] updated, section <i>MQTT topics</i> [▶ page 107] corrected.</p> <p><i>Diagnosis:</i> Section <i>APL LED</i> [▶ page 118] updated.</p>

Table 1: List of revisions

2 Device description

2.1 Functional description

The IO-Link Wireless Master **NFD-3090-PNS-IOLMW** device is intended for use within a PROFINET network.

The device enables the operation of up to 16 IO-Link Devices via a wireless connection. An IO-Link Device could be an IO-Link sensor/actuator.

Parameterization, configuration

- The device is parameterized via PROFINET IO. The device stores the parameters.
- Alternatively, the IO-Link Wireless Master and the wireless IO-Link ports of the device can be configured using the integrated netFIELD Wireless Web Server. The netFIELD Wireless Web Server enables you to parameterize the IO-Link Devices connected via a wireless connection to the IO-Link Wireless Master device.
- Or, you can use the IO-Link engineering tool “IO-Link E.T.” to configure the IO-Link Wireless Master and the wireless IO-Link ports of the device, as well as IO-Link Devices parameters based on IODD file.
- OPC UA Server is also integrated and offers identification, and status.
- The device provides MQTT topics for device identification, device capabilities, configuration status, address data, process data, event logs or device parameters.



For further information see section *Configuration tools* [▶ page 23].

2.2 Device overview

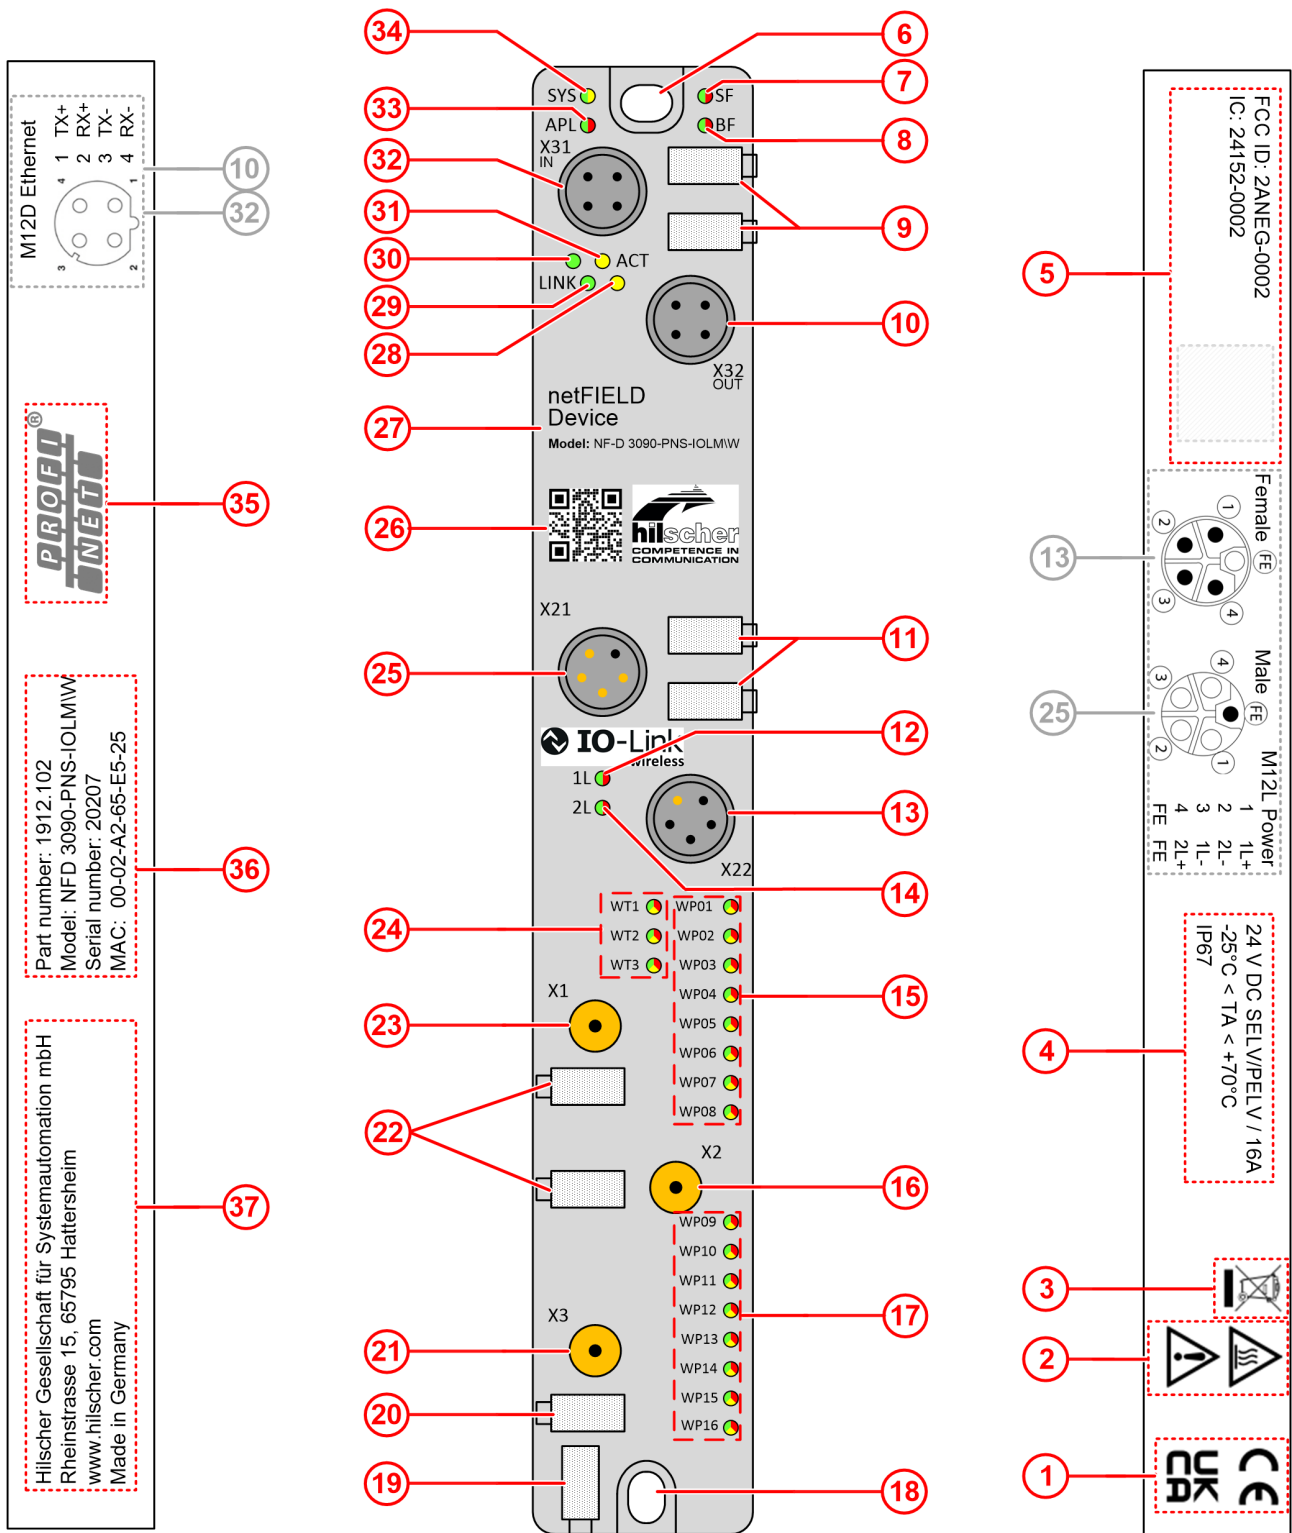


Figure 1: Device overview, NFD-3090-PNS-IOLMW

Manufacturer, product identification, and technical data can be found on the device housing as laser engravings.

Function	Pos.	Name	Description	For details, see section
Ethernet	(32)	X31	Ethernet interface, M12, D-coded, PROFINET IO port 1 (CH0)	<i>Ethernet</i> [▶ page 11]
	(10)	X32	Ethernet interface, M12, D-coded, PROFINET IO port 2 (CH1)	
	(30)	LINK (X31)	Link LED for connector X31	<i>PROFINET IO-Device status</i> [▶ page 119]
	(31)	ACT (X31)	Activity LED for connector X31	
	(28)	ACT (X32)	Activity LED for connector X32	
	(29)	LINK (X32)	Link LED for connector X32	
	(9)	-	Labeling fields Ethernet interfaces X31 and X32	-
LEDs	(34)	SYS	System status LED	<i>System LED</i> [▶ page 117]
	(33)	APL	Application status LED	<i>APL LED</i> [▶ page 118]
	(7)	SF	System Failure LED	<i>PROFINET IO-Device status</i> [▶ page 119]
	(8)	BF	Bus Failure LED	
Power supply	(25)	X21	Power supply input (PWR IN), M12, L-coded	<i>Power supply</i> [▶ page 11]
	(13)	X22	Power supply output (PWR OUT), M12, L-coded	
	(12)	1L (X21)	1L supply voltage status LED (DC 24 V)	<i>Supply voltage status</i> [▶ page 118]
	(14)	2L (X21)	2L supply voltage status LED (DC 24 V)	
	(11)	-	Labeling fields power supply input X21 and output X22	-
Antenna connectors and LEDs for IO-Link wireless radio module	(23)	X1	Connector for SMA antenna for IO-Link wireless connection to the IO-Link Devices 1 to 8	<i>IO-Link, SMA antenna</i> [▶ page 12]
	(16)	X2	Connector for SMA antenna for IO-Link wireless connection to the IO-Link Devices 9 to 16	
	(21)	X3	Connector for SMA antenna	
	(22), (20)	-	Labeling fields SMA antennas X1, X2, and X3	-
	(24)	WT1 ... WT3	IO-Link wireless track status LEDs	<i>Wireless track status</i> [▶ page 120]
	(15)	WP01 ... WP08	Port status LEDs for wireless IO-Link ports WP01 ... WP08	<i>Wireless port status</i> [▶ page 120]
	(17)	WP09 ... WP16	Port status LEDs for wireless IO-Link ports WP09 ... WP16	
Device identification	(26)	-	QR code	<i>Identification</i> [▶ page 10]
	(27)	-	Product group and model	
	(35)	-	Logo communication field bus	
	(36)	-	Part number, model, serial number, MAC address	
	(19)	-	Device labeling field	-
Manufacturer	(37)	-	Manufacturer address	<i>Contacts</i> [▶ page 146]
Technical data	(1), (5)	-	Space for certification signs and IDs	Technical data
	(4)	-	Power supply (SELV / PELV), fuse protection, temperature range, protection class	
Safety and disposal	(2), (3)	-	Signs on safety and environment (disposal)	<i>Mounting and demounting</i> [▶ page 17]
Mounting	(6)	-	Mounting hole and grounding	
	(18)	-	Mounting hole	

Table 2: Legend to the device overview, NFD-3090-PNS-IOLMW

2.3 Product software

All the information and software you need for your product can be downloaded free of charge at the web-link

<https://kb.hilscher.com/display/NFDIOLWM>

- Select the link for the current release for the product software.

After the download, you can start commissioning and configuring your device immediately.

- Check our website regularly for software updates for your product.

2.4 Revisions and versions

The hardware revision listed below, as well as the software and firmware versions belong together functionally. If a hardware installation is available, for the firmware update these specifications are relevant.

Model	Description	Part number	Hardware revision
NFD-3090-PNS-IOLMW	netFIELD IO-Link Wireless Master PROFINET IO-Device	1912.102	3

Table 3: Hardware

Software	Version
netFIELD Wireless Web Server	1.1
IO-Link ET	1.0

Table 4: Software

Protocol	File name	Note	Version
PROFINET IO-Device	U197D001.nxi, U197D001.nxe, U197D001.nai	nxi for COM CPU, with nxe for extension. nai for APP CPU.	2.2

Table 5: Firmware

Description	Version
IO-Link Wireless Master stack	8.3
Radio module revision	2.3

Table 6: IO-Link Wireless Master

2.5 Identification

On the front side of the NFD-3090-PNS-IOLM\W device housing a QR code is provided for device identification.



Figure 2: QR code (example)

The QR code includes product identification data in two lines:

1st line (with example data):

- Part number: 1912.102
- Character “R” and hardware revision number: R4
- Serial number: 020000
- MAC ID: 00-02-A2-02-20-E3

2nd line: URL link to product homepage

Example:

1912.102 R4 20000 00-02-A2-02-20-E3

<https://www.hilscher.com/netfield/netfield-device/>

To find the QR code in the device overview, see position (26) in section *Device overview* [▶ page 7].

2.6 Connectors and interfaces

2.6.1 Power supply

Connectors X21 and X22

The device is supplied via connector X21 (PWR IN). You can connect two supply lines to the connector:

- Supply line 1: 1L+ (U_{1L}) and the reference potential 1L-
- Supply line 2: 2L+ (U_{2L}) and the reference potential 2L-

Both supply lines are electrically isolated.

Each pin of connector X21 (PWR IN) is connected to the same pin of socket X22 (PWR OUT) and is used to forward the supply to the next device.

For identifying the connector X21 of the NFD-3090-PNS-IOLM\W device, see position (25), and connector X22, see position (13) in section *Device overview* [▶ page 7].

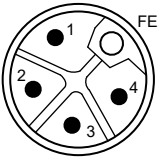
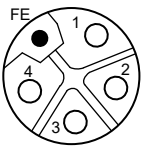
Supply voltage input	Supply voltage output	Pin	Signal	Description
 <p>M12, L-coded, plug, 5-pin (4 + FE)</p>	 <p>M12, L-coded, socket, 5-pin (4 + FE)</p>	1	1L+	24 V DC supply voltage U_{1L} for system and sensor/actuator
		2	2L-	Reference potential for 2L
		3	1L-	Reference potential for 1L
		4	2L+	24 V DC auxiliary/control voltage U_{2L}
		FE	FE	Functional earth

Table 7: Supply voltage

2.6.2 Ethernet

- Connector X31 for Ethernet interface port 1 (CH0)
- Connector X32 for Ethernet interface port 2 (CH1)

For identifying the connector X31 of the NFD-3090-PNS-IOLM\W device, see position (32), and connector X32, see position (10) in section *Device overview* [▶ page 7].

Connectors X31 and X32

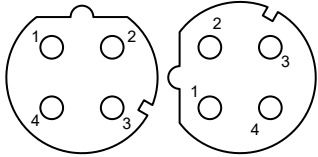
Ethernet	Pin	Signal	Description
 <p>M12, D-coded, socket, 4-pin</p>	1	TX+	Transmit data positive
	2	RX+	Receive data positive
	3	TX-	Transmit data negative
	4	RX-	Receive data negative

Table 8: Ethernet

2.6.3 IO-Link, SMA antenna

With the NFD-3090-PNS-IOLM/W device, two tracks with each up to 8 and together up to 16 IO-Link Devices simultaneously can be supported.

IO-Link Devices

The type of data transferred (length and data type, etc.) depends on the connected IO-Link Devices.

SMA antenna


Antenna SMA	Type	Manufacturer
	Wifi Antenna 2.4G rubber antenna, Model: TLW2.5A-SMA-Male Bandwidth: 1000 MHz Impedance: 50 Ohms	Silram Technologies Ltd., Kfar Saba, Israel

Table 9: SMA antenna type



Important:

The use of an SMA antenna other than the SMA antenna supplied with the product is not permitted. This could result in losing the approval for your device.

For proper device operation, all three SMA antennas X1, X2, and X3 must be mounted.

2.7 Derating

Note the derating when using the netFIELD IO-Link Wireless Master device, when you connect a device to Power Out at the device and thus a larger current is passed through the device. The ambient temperature and the current have influence on the heating of the device.

The derating curve was created with the operating conditions "without air flow or with air flow 0.5 m/s" as well as "mounting on poorly heat conducting wall". The real operating conditions can lead to a better heat dissipation of the device for example by a higher air flow or a better heat dissipation to the mounting wall.

The following figure shows the maximum permissible current (I) that may flow into the device as a function of the ambient temperature (T).

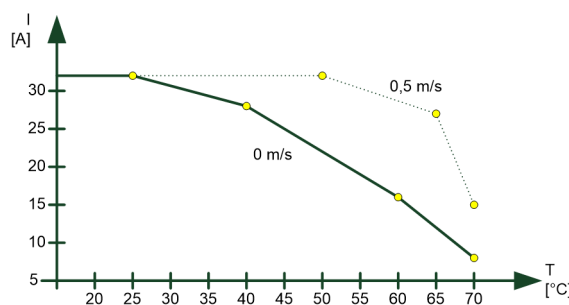


Figure 3: Derating netFIELD IO-Link Wireless Master device

3 Safety

3.1 General note

The documentation in the form of a user manual, an operating instruction manual or other manual types, as well as the accompanying texts have been created for the use of the products by qualified personnel. When using the products, all Safety Messages, Integrated Safety Messages, Property Damage Messages and all valid legal regulations must be obeyed. Technical knowledge is presumed. The user has to assure that all legal regulations are obeyed.

3.2 Intended use

The device netFIELD IO-Link Wireless Master PROFINET IO-Device NFD-3090-PNS-IOLMW is used to receive or send process data via IO-Link:

- The IO-Link Wireless Master device receives process data from the connected IO-Link Device (sensor) and sends this data to a higher-level control system.
- The IO-Link Wireless Master device sends process data received from the higher-level control system to the connected IO-Link Device (actuator).

3.3 Personnel qualification

The device may only be mounted, configured, operated or demounted by qualified personnel. Job-specific technical skills for people professionally working with electricity must be present concerning the following topics:

- Safety and health at work
- Mounting and connecting of electrical equipment
- Measurement and analysis of electrical functions and systems
- Evaluation of the safety of electrical systems and equipment
- Installing and configuring IT systems

3.4 Power drop during write and delete accesses in the file system

The FAT file system in the netX firmware is subject to certain limitations in its operation. Write and delete accesses in the file system (firmware update, configuration download etc.) can destroy the FAT (File Allocation Table) if the accesses cannot be completed if the power drops. Without a proper FAT, a firmware may not be found and cannot be started.

- Make sure that the power supply of the device does not drop during write and delete accesses in the file system (firmware update, configuration download etc.).

3.5 Exceeding the maximum number of permitted write and delete accesses

This device uses a serial flash chip to store remanent data such as firmware storage, configuration storage, etc. This device allows a maximum of 100,000 write/delete accesses that are sufficient for standard operation of the device. However, writing/deleting the chip excessively (e.g. changing the configuration or changing the name of station) leads to the maximum number of permitted write/delete accesses being exceeded and to device damage. For example, if the configuration is changed once an hour, the maximum number is reached after 11.5 years. If the configuration is changed even more frequently, for example once a minute, the maximum number is reached after approx. 69 days.

Avoid exceeding the maximum permitted write/delete accesses by writing too often.

3.6 Information and data security

Take all usual measures for information and data security, in particular, for devices with Ethernet technology. Hilscher explicitly points out that a device with access to a public network (Internet) must be installed behind a firewall or only be accessible via a secure connection such as an encrypted VPN connection. Otherwise, the integrity of the device, its data, the application or system section is not safeguarded.

Hilscher cannot assume any warranty or liability for damage due to neglected security measures or incorrect installation.

4 Getting started

Below you will find an overview of the steps required for installation and commissioning of your IO-Link Wireless Master device:

Step	Description	Refer to section
Requirements and preparation	<ul style="list-style-type: none"> • Prepare the device installation and commissioning according to the requirements on hardware, system, and software. • Prepare the required mounting tools. 	Requirements [▶ page 16] Mounting [▶ page 17]
Safety	<ul style="list-style-type: none"> • Read the mounting instructions and the safety instructions on connecting and commissioning the device. • Disconnect the system to which the device will be mounted from the power supply. 	Mounting [▶ page 17]
Mounting	<ul style="list-style-type: none"> • Mark the positions to fasten the device with screws and cut the M4 holes. • Fasten the device with the screws. • Ground the device. • Mount all three SMA antennas. 	Mounting [▶ page 17] Grounding [▶ page 19]
Connecting and booting	<ul style="list-style-type: none"> • Connect the Ethernet M12 cable to the NFD-3090-PNS-IOLM/W device and to the PLC (PROFINET IO-Controller). • Connect the +24 V DC SELV or PELV power supply to the NFD-3090-PNS-IOLM/W device. • Connect the +24 V DC SELV or PELV power supply to the IO-Link Device. • Switch on the power supply units of the device and of the IO-Link Device. 	Connections [▶ page 21]
Commissioning	<p>In the configuration software of the PROFINET IO-Controller:</p> <ul style="list-style-type: none"> • Configure the PROFINET IO-Controller: Import the GSDML file - GSDML-V2.35-HILSCHER-NETFIELD-WIRELESS-PDCT-YYYYMMDD.xml (if you use the netFIELD Web Server to perform the settings of the IO-Link Wireless Master parameters or the wireless IO-Link port parameters), - or GSDML-V2.35-HILSCHER-NETFIELD-WIRELESS-EXPERT-YYYYMMDD.xml (if you use the configuration software of the PROFINET IO-Controller for this purpose). • Create the configuration project with the PROFINET IO-Controller and PROFINET IO-Device, select the modules and submodules and set the parameters. <p>For the subsequent steps the following configuration tools can be used:</p> <ul style="list-style-type: none"> • Configure the IO-Link Wireless Master NFD-3090-PNS-IOLM/W using the netFIELD Wireless Web Server. • Configure the wireless IO-Link port parameters via the configuration software of the PROFINET IO-Controller or using the netFIELD Wireless Web Server. • Configure the IO-Link Device. 	Configuration tools [▶ page 23] Configuring PROFINET IO [▶ page 27] Commissioning [▶ page 80]

Table 10: Overview for installation and commissioning

5 Requirements

5.1 Hardware and system requirements

To install your IO-Link Wireless Master you need the following hardware elements:

- Power supply: 24 V DC SELV (Safety Extra Low Voltage) or PELV (Protective Extra Low Voltage) power supply
- Power supply cable with L-coded M12 connector
- Ethernet cable with D-coded M12 connector
- PROFINET IO-Controller (PLC)
- At least one
IO-Link Wireless Device or
a Wireless Bridge and a wired IO-Link Device
- 3 x SMA antenna: Use type Wifi Antenna 2.4G rubber antenna, model "TLW25A-SMA-Male" only (see section *IO-Link, SMA antenna* [▶ page 12]).

Additional components

- Ethernet network switch

For commissioning

- PC or notebook with at least one additional Ethernet port and Internet access

5.2 Software requirements

For commissioning and configuring your IO-Link Wireless Master, the following requirements must comply:

- Web browser if integrated netFIELD Wireless Web Server is to be used for configuration.



For further information see section *Configuration tools* [▶ page 23].

6 Mounting and demounting

6.1 Mounting

Required tools for mounting the device

You will need the following tools for mounting:

- Allen key for the M4 mounting screws with hexagon socket

Only additionally required for mounting without existing mounting holes:

- M4 thread tap (ready-made or set of taps)
- Drilling machine (to pre-drill the mounting holes as M4 threads for mounting the device to the system)

You will also need two M4 hexagon cylinder head screws according to DIN 912 / ISO 4762 of suitable length.

Before mounting the device

Always observe the following instructions:

- The device may only be mounted and commissioned by qualified electricians in accordance with EN 50110-1/-2 and IEC 60364.
- Refer to the safety instructions in the *Safety* [▶ page 13] chapter.
- Before mounting the device, check for damage, e.g. transport damage! Damaged devices must not be put into operation.

Mounting instructions

Observe the following points when selecting the mounting location:

- When mounting outside buildings: Mount the device in such a way that it is protected from weathering, especially from direct sunlight and the effects of UV light, salt water or salt spray, e.g. in a switch box.
- Only screw the device on flat contact surfaces to protect it from mechanical tension.
- Do not bridge any gaps with the device to protect it from any tensile forces that may occur.
- To prevent damage to the device, do not mount it in shearing areas of moving system parts. Also, lay the cables in such a way that they cannot be caught in the shear zones of moving system parts.
- Leave sufficient space for easy replacement of the device and for connecting the plug connections.
- Ensure that the requirements of the device for vibration and shock resistance are met at the mounting site.
- Mount the device so that the diagnostic LEDs of the device remain visible.

Observe the following instructions for the mounting procedure:

- Disconnect the system from the power supply before you start mounting.
- Ensure sufficient equipotential bonding in your system.
- During mounting, make sure that you do not soil the connections. Dirt will damage the contacts, resulting in reduced contact reliability.

Notes on protection against the heat generated by the device

The device can get hot during operation! Therefore, always observe the following instructions:

- The cooling of the device must not be impaired.
- Ensure an unobstructed air supply!
- Do not install the device near strong heat sources!
- Do not mount the device on or near highly inflammable materials.

Mounting of the device

You can attach the device directly to your system or in the control cabinet with screws. Fasten the device to a flat, solid base with two M4 screws, each of which is screwed into a mounting hole. Section *Technical data* [▶ page 124] contains the specification of the tightening torque.



Note:

Note that the device requires a connection to FE (functional earth) plate at the plastic housing via the screws.

The procedure for this is as follows:

- Hold the device in the desired position and mark the two points where the M4 threads are to be cut. Make sure that there is enough space around the device so that you can connect all cables without any problems.
- Cut an M4 thread at each of the two marked points with the M4 thread cutter, if necessary pre-drill with the drill first.
- Screw the device into the mounting holes with the Allen key using two M4 cylinder head screws of suitable length at the upper and lower ends. Observe the tightening torque.

After mounting

Observe the notes on *Grounding* [▶ page 19].

Mounting of the SMA antennas



Important:

For proper device operation, all three SMA antennas X1, X2, and X3 must be mounted.

6.1.1 Grounding

Functional earth

The L-coded M12 connectors of the power supply of the NFD-3090-PNS-IOLM\W device have a pin FE (functional earth). You can ground the device via FE of the power supply connection or via the screws to the FE plate at the plastic housing. Grounding the device is recommended.

6.2 Demounting

Required tools for demounting

For demounting, you need an Allen key to loosen the M4 hexagon socket head screws according to DIN 912 or ISO 4762.

Before demounting

Prepare for demounting:



CAUTION**Device is hot!**

During operation, high surface temperatures can occur on the housing and at the metal connections, especially at the M12 connector sleeve. If the device was in operation, let it cool down before touching it or use gloves.

-
- Disconnect the part of the plant to which you have mounted the device from the power supply.
 - If the device is dirty, clean it first. It is particularly important to clean dirty screw connections.
 - Before demounting, loosen all screw connections at the terminals and disconnect the cables.

Demounting

To disassemble the device, e.g. when replacing the device, proceed as follows:

- Make sure that the part of the plant on which you have mounted the device is zero-potential.
- Use the Allen key to loosen the two M4 cylinder head screws.
- Remove the device.

After demounting

If the demounted device is defective, mark it as defective to prevent the device from being used again.

6.3 Disposal of waste electronic equipment

Important notes from the European Directive 2012/19/EU “Waste Electrical and Electronic Equipment (WEEE)”



Waste electronic equipment

This product must not be treated as household waste.

This product must be disposed of at a designated waste electronic equipment collecting point.

Waste electronic equipment may not be disposed of as household waste. As a consumer, you are legally obliged to dispose of all waste electronic equipment according to national and local regulations.

7 Connections

Warnings

- Adhere to the warnings hereafter before you connect the network cable and the power supply cable to the IO-Link Wireless Master NFD-3090-PNS-IOLM\W device.



WARNING

Danger from electric shock, SELV or PELV power supply required

Operate the device exclusively with 24 V DC SELV (Safety Extra Low Voltage) or PELV (Protective Extra Low Voltage) power supply. In case of ignoring this, there is a risk of electric shock.

Always use two separate supply lines/power supplies for 1L and 2L to supply the devices. Pay attention to a central grounding (FE) if two separate power supplies are used.

NOTICE

Device destruction, fuse protection

The maximum supply current must not be exceeded and must be fused with an external fuse (16 A). Otherwise, the risk of device destruction cannot be excluded, damage to the printed circuit board and the connecting plug. For further details, refer to Technical data.

Connection example with W-Bridge

The connection example described hereafter shows a typical installation that uses a W-Bridge to connect a wired IO-Link Device via a wireless connection to the IO-Link Wireless Master NFD-3090-PNS-IOLM\W device. Section *Connection example with W-Bridge* [▶ page 22] shows a typical installation.

Requirements

- Use the cables described in section *Hardware and system requirements* [▶ page 16].

IO-Link Wireless Master

- Connect the Ethernet cable to the M12 connector Ethernet **X31** of the NFD-3090-PNS-IOLM\W device, see position (32) in section *Device overview* [▶ page 7] and to the PLC.
- Connect the power cable (+24 V DC SELV or PELV) to the M12 connector PWR IN **X21** of the NFD-3090-PNS-IOLM\W device, see position (25) in section *Device overview* [▶ page 7].

W-Bridge

- Connect the wired IO-Link Device with the cable to the W-Bridge.
- Connect the power cable (+24 V DC SELV or PELV) to the power connector of the W-Bridge.

7.1 Connection example

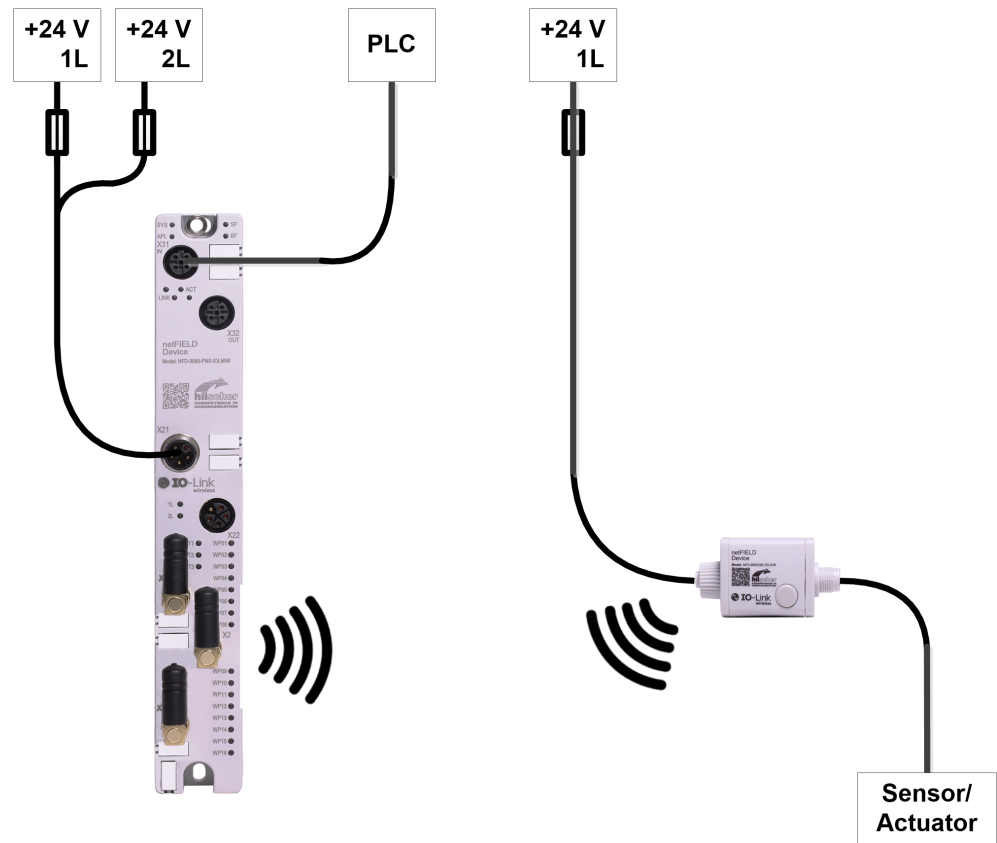


Figure 4: Connection example with W-Bridge

8 Configuration

8.1 Configuration tools

For operation, the NFD-3090-PNS-IOLMW device requires configuration settings or parameters. The required settings or parameters can be grouped to several areas.

NFD-3090-PNS-IOLMW device:

- Input / output data of the PROFINET I/O modules/submodules,
- parameters for the IO-Link Wireless Master (e.g. track mode),
- parameters for the wireless port (e.g. wireless slot number).
- If the MQTT communication is used, then the MQTT Client in the NFD-3090-PNS-IOLMW device requires MQTT parameters.

Connected IO-Link Device:

- IO-Link Device parameters.

To configure the device and to set parameters, you can use the following tools:

- **Configuration software of the PROFINET IO-Controller:** The PROFINET IO-Controller must be configured to exchange process data with the NFD-3090-PNS-IOLMW device. The configuration software of the PROFINET IO-Controller requires a GSDML file to configure the device. The configuration software of the PROFINET IO-Controller imports the GSDML file, and the user can make the configuration settings and parameterizations for the device. The user loads the configuration to the PROFINET IO-Controller. The PROFINET IO-Controller performs the configuration and parameterization of the NFD-3090-PNS-IOLMW device.
- **netFIELD Wireless Web Server:** A web browser can be used, to display the pages of the integrated web server. This user interface serves to set parameters during commissioning more easily. If the MQTT communication is to be used, the MQTT Client parameters are set via the netFIELD Wireless Web Server only.
- **IO-Link E.T.:** The IO-Link engineering tool serves also for device configuration, and can import IODD files of the used IO-Link Devices.

For the NFD-3090-PNS-IOLMW device, the following two GSDML files are available for easy parameterization:

- GSDML-V2.35-HILSCHER-NETFIELD-WIRELESS-PDCT-YYYYMMDD.xml
- GSDML-V2.35-HILSCHER-NETFIELD-WIRELESS-EXPERT-YYYYMMDD.xml

Select one GSDML file to be used in the configuration software for the PROFINET IO-Controller.

Be aware, with the selection of the GSDML file, you also select the configuration tool to set the parameters for the “IO-Link Wireless Master” and “wireless ports”.

- Select the PDCT GSDML file if you intend to use netFIELD Wireless Web Server or the IO-Link E.T. software,
- or, select the Expert GSDML file if you intend to use the configuration software of the PROFINET IO-Controller.

The possible tool chains for configuration are outlined below:

PDCT GSDML + netFIELD Wireless Web Server (Tool chain 1)

- Configuration software for the PROFINET IO-Controller with PDCT GSDML: Configuration of the input / output data of the PROFINET I/O modules/submodules.
- netFIELD Wireless Web Server: Settings of the IO-Link Wireless Master parameters, the wireless port parameters, and if MQTT communication is used, settings of the MQTT Client parameters.

PDCT GSDML + IO-Link E.T. (Tool chain 2)

- Configuration software for the PROFINET IO-Controller with PDCT GSDML: Configuration of the input / output data of the PROFINET I/O modules/submodules.
- IO-Link E.T.: Settings of the IO-Link Wireless Master parameters, the wireless port parameters, and the IO-Link Device parameters based on IODD file.
- If MQTT communication is used, netFIELD Wireless Web Server: Settings of the MQTT Client parameters.

Expert GSDML (Tool chain 3)

- Configuration software for the PROFINET IO-Controller with Expert GSDML: Configuration of the input / output data of the PROFINET I/O modules/submodules, and settings of the IO-Link Wireless Master parameters, and the wireless port parameters.
- If MQTT communication is used, netFIELD Wireless Web Server: Settings of the MQTT Client parameters.

Overview Tool chains 1, 2, 3

	Input / output data of the PROFINET I/O modules/ submodules	Parameters for the IO-Link Wireless Master	Parameters for the wireless ports	IO-Link Device parameters	MQTT Client parameters (if the MQTT communication is used)
Tool chain 1					
Configuration software for the PROFINET IO-Controller	Yes PDCT GSDML	-	-	-	-
netFIELD Wireless Web Server	-	Yes	Yes	(experts)	Yes
Tool chain 2					
Configuration software for the PROFINET IO-Controller	Yes PDCT GSDML	-	-	-	-
IO-Link E.T.	-	Yes	Yes	Yes IODD	-
netFIELD Wireless Web Server to configure MQTT only	-	Use IO-Link E.T. only.	Use IO-Link E.T. only.	(experts)	Yes
Tool chain 3					
Configuration software for the PROFINET IO-Controller	Yes Expert GSDML	Yes	Yes	-	-
netFIELD Wireless Web Server to configure MQTT only	-	-	-	(experts)	Yes

Table 11: Overview Tool chains 1, 2, 3



For more details, refer to the sections *Configuration with netFIELD Wireless Web Server* [▶ page 36], and *Configuring PROFINET IO* [▶ page 27].

Not recommended tool chain

If you use the Expert GSDML, then the use of the netFIELD Wireless Web Server or the IO-Link E.T. to set the IO-Link Wireless Master parameters or the wireless port parameters is not recommended.

In case you use the netFIELD Wireless Web Server or the IO-Link E.T. to configure the IO-Link Wireless Master parameters or the wireless port parameters, then the PROFINET IO-Controller overwrites these parameters.

**Note:**

Each time the PROFINET IO communication starts, the PROFINET IO-Controller transmits the configuration and parameters to the NFD-3090-PNS-IOLMW device. Parameters for the IO-Link Wireless Master or the wireless ports, which have been set by using the netFIELD Wireless Web Server or the IO-Link E.T., will be overwritten. The parameters set via the PROFINET IO-Controller have priority.

If you want to change parameters for the IO-Link Wireless Master or the wireless ports permanently, set them with the configuration software of the PROFINET IO-Controller.

8.2 Configuring PROFINET IO

In order that the PROFINET IO-Controller and the PROFINET IO-Device exchanges process data, the PROFINET IO-Controller has to be configured. Therefore, you need one of the device description files (GSDML file) of the NFD-3090-PNS-IOLM\W device.

- GSDML-V2.35-HILSCHER-NETFIELD-WIRELESS-PDCT-YYYYMMDD.xml
This file is to be used if settings of the “Wireless Master Parameters“ are made using the netFIELD Web Server.
 - GSDML-V2.35-HILSCHER-NETFIELD-WIRELESS-EXPERT-YYYYMMDD.xml
This file is to be used if settings of the “Wireless Master Parameters“ are made using the configuration software of the PROFINET IO-Controller.
- Select the GSDML file “PDCT” or “Expert” more suitable for your mode of operation.

Then perform the following steps:

- Import the GSDML file into the configuration software of the PROFINET IO-Controller.
- Select the **netFIELD** device from the device catalog and add it to the configuration project.
- For configuration of the netFIELD device, configure the ports and select the modules.
- Set the parameters.

8.2.1 Configuring ports / selecting modules

The IO-Link Wireless Master PROFINET IO-Device NFD-3090-PNS-IOLM\W has a modular structure. Slot 0 is the PROFINET access point with 4 submodules. Slot 1 contains the IO-Link Wireless Master and the 16 IO-Link ports. For each wireless IO-Link port (WP01 ... WP16), specify which IO-Link Device type is connected to the port.

Slot	Subslot	Submodule	Description
0	1	DAP	Device access point NFD-3090-PNS-IOLM\W (fixed)
0	32768	PN-IO	PROFINET interface (fixed)
0	32769	X31	Ethernet interface, PROFINET IO port 1 (fixed)
0	32770	X32	Ethernet interface, PROFINET IO port 2 (fixed)
1	1	IO-Link Wireless Master	IO-Link Wireless master (fixed) 2 input bytes und 2 output bytes
1	2	Configuration port WP01	To configure the wireless IO-Link port (WP01 ... WP16), specify which IO-Link Device type is connected to the port. Selection, see the following table.
1	3	Configuration port WP02	
1	4	Configuration port WP03	
1	5	Configuration port WP04	
1	6	Configuration port WP05	
1	7	Configuration port WP06	
1	8	Configuration port WP07	
1	9	Configuration port WP08	
1	10	Configuration port WP09	
1	11	Configuration port WP10	
1	12	Configuration port WP11	
1	13	Configuration port WP12	
1	14	Configuration port WP13	
1	15	Configuration port WP14	
1	16	Configuration port WP15	
1	17	Configuration port WP16	

Table 12: PROFINET modules and submodules

Submodule	Description	Input process data (PD_IN)	Output process data (PD_OUT)	Fixed in slot
IO-Link 32 I / 32 O + PQI	IO-Link with 32 bytes input data and 32 bytes output data and port qualifier information	32 bytes + 1 byte PQI	32 bytes	no
IO-Link 16 I / 16 O + PQI	IO-Link with 16 bytes input data and 16 bytes output data and port qualifier information	16 bytes + 1 byte PQI	16 bytes	no
IO-Link 8 I / 8 O + PQI	IO-Link with 8 bytes input data and 8 bytes output data and port qualifier information	8 bytes + 1 byte PQI	8 bytes	no
IO-Link 4 I / 4 O + PQI	IO-Link with 4 bytes input data and 4 bytes output data and port qualifier information	4 bytes + 1 byte PQI	4 bytes	no
IO-Link 2 I / 2 O + PQI	IO-Link with 2 bytes input data and 2 bytes output data and port qualifier information	2 bytes + 1 byte PQI	2 bytes	no
IO-Link 1 I / 1 O + PQI	IO-Link with 1 bytes input data and 1 bytes output data and port qualifier information	1 bytes + 1 byte PQI	1 bytes	no
IO-Link 32 I + PQI	IO-Link with 32 bytes input data and port qualifier information	32 bytes + 1 byte PQI	-	no
IO-Link 16 I + PQI	IO-Link with 16 bytes input data and port qualifier information	16 bytes + 1 byte PQI	-	no
IO-Link 8 I + PQI	IO-Link with 8 bytes input data and port qualifier information	8 bytes + 1 byte PQI	-	no
IO-Link 4 I + PQI	IO-Link with 4 bytes input data and port qualifier information	4 bytes + 1 byte PQI	-	no
IO-Link 2 I + PQI	IO-Link with 2 bytes input data and port qualifier information	2 bytes + 1 byte PQI	-	no
IO-Link 1 I + PQI	IO-Link with 1 bytes input data and port qualifier information	1 bytes + 1 byte PQI	-	no
IO-Link 32 O + PQI	IO-Link with 32 bytes output data and port qualifier information	-	32 bytes + 1 byte PQI	no
IO-Link 16 O + PQI	IO-Link with 16 bytes output data and port qualifier information	-	16 bytes + 1 byte PQI	no
IO-Link 8 O + PQI	IO-Link with 8 bytes output data and port qualifier information	-	8 bytes + 1 byte PQI	no
IO-Link 4 O + PQI	IO-Link with 4 bytes output data and port qualifier information	-	4 bytes + 1 byte PQI	no
IO-Link 2 O + PQI	IO-Link with 2 bytes output data and port qualifier information	-	2 bytes + 1 byte PQI	no
IO-Link 1 O + PQI	IO-Link with 1 bytes output data and port qualifier information	-	1 bytes + 1 byte PQI	no

Table 13: Port submodules (PDCT), and (Expert)

8.2.2 Setting parameters

In the configuration software of the PROFINET IO-Controller you can set the parameters for the device netFIELD IO-Link Wireless Master PROFINET IO-Device NFD-3090-PNS-IOLM\W. The existing parameters contain the basic settings for the device, which you adapt for your application. Set the device and port parameters in the start-up parameters of the configuration software of the PROFINET IO-Controller. The PROFINET IO-Controller sends these parameters to the NFD-3090-PNS-IOLM\W device when starting the communication.

Depending of the selected GSDML file (PDCT or Expert), the parameter descriptions PDCT or Expert are valid for the submodules:

- IO-Link Wireless Device X I / X O + PQI (PDCT, Expert)
- IO-Link Wireless Device X I + PQI (PDCT, Expert)
- IO-Link Wireless Device X O + PQI (PDCT, Expert)

X = 1, 2, 4, 8, 16, 32

In the configuration, one submodule is configured for each used wireless IO-Link port WP.

PDCT

Parameter group	Parameter	Default	Value range	Description
Wireless IO-Link port parameter (for WP01/WP02/ ...)	Enable port diagnosis	1	0: Disable	The PROFINET port diagnosis is deactivated, i.e. no diagnostic alarms are triggered.
			1: Enable	The PROFINET port diagnosis is activated.
	Enable process alarm (device notification)	1	0: Disable	PROFINET process alarms are deactivated.
			1: Enable	PROFINET process alarms are activated.
	Enable input fraction	0	0: Disable	Input fraction is deactivated.
			1: Enable	Input fraction is activated.
	Enable pull/plug	1	0: Disable	PROFINET Pull/Plug alarms are deactivated.
			1: Enable	PROFINET Pull/Plug alarms are activated.

Table 14: Parameters of the submodules IO-Link Wireless Device XX I / XX O + PQI (PDCT)

Expert

Parameter group	Parameter	Default	Value range	Description
IO-Link Wireless Master configuration	MasterID	1	1 ... 29	Master identifier
	AHT (Advanced Hopping Table)	0	0: disable	The channel cannot be used by the IO-Link Wireless Master
			1: enable	The channel can be used by the IO-Link Wireless Master
	Reconnect	0	0: enable	Reconnection trials when connections were lost.
			1: disable	No reconnection trials when connections were lost.
Blacklist	255 255 240 240 240 240 240 240 240 255	-	List of frequency channels usable / not usable for IO-Link wireless communication within a Wireless Master Bitwise coded 1 MHz channels 3-78 (2403 ... 2478 MHz). The channels 1 (2401 MHz), 2 (2402 MHz), 79 (2479 MHz) and 80 (2480 MHz) cannot be used.	
Pairing timeout	5	5 ... 60	Timeout for pairing in seconds	
IO-Link Wireless Track (1 ... 3) configuration	Track mode (operating mode of wireless track)	4	0: Stop	Track is inactive.
			1: Cyclic	Track is in cyclic only mode and cannot perform service operations.
			2: Service	Track is in service mode, meaning, cyclic mode that can perform service operations like scan/pair.
			3: Roaming	NOTE: Only 1 track can be in Roaming or Service mode.
	4: Auto			
Transmission power	31	1 ... 31	The maximum allowable value for the transmission power is selected by the IO-Link Wireless Master.	

Table 15: Parameter IO-Link Wireless Master

Parameter group	Parameter	Default	Value range	Description
Wireless IO-Link port parameter (for WP01/WP02/ ...)	Enable port diagnosis	1	0: Disable	The PROFINET port diagnosis is deactivated, i.e. no diagnostic alarms are triggered.
			1: Enable	The PROFINET port diagnosis is activated.
	Enable process alarm (device notification)	1	0: Disable	PROFINET process alarms are deactivated.
			1: Enable	PROFINET process alarms are activated.
	Configuration source	1	0: PDCT	The configuration is done via a "Port and Device Configuration Tool".
			1: PNIO	The configuration is done via the PROFINET IO-Controller.
	Enable input fraction	0	0: Disable	Input fraction is deactivated.
			1: Enable	Input fraction is activated.
	Enable pull/plug	1	0: Disable	PROFINET Pull/Plug alarms are deactivated.
			1: Enable	PROFINET Pull/Plug alarms are activated.
	Port mode (operating mode of IO-Link port)	2	0: Deactivated	The W-port is inactive. Input and output process data is 0.
			1: IO-Link Wireless cyclic	The W-port operates in cyclic mode.
			2: IO-Link Wireless roaming	The W-port operates in roaming mode.
	Validation / Backup	No Device check	No Device check	There is no device check for validation or backup of connected IO-Link Devices (default).
			Type compare, no Backup/Restore	A device check is performed for validation of connected IO-Link Devices to the specified device type, without backup/restore.
			Type compare, Restore only	A device check is performed for validation or restore of connected IO-Link Devices to the specified device type, without backup.
			Type compare, Backup and Restore	A device check is performed for validation or backup/restore of connected IO-Link Devices to the specified device type.
	Port cycle time	0	0 ... 255	See table <i>Calculation of the port cycle time of the IO-Link Wireless Master</i> [▶ page 33].
Vendor ID	0	0 ... 65535	See iodfinder.io-link.com , or the documentation of the manufacturer of the W-Device (IO-Link Device connected via a wireless connection to the IO-Link Wireless Master) used.	
Device ID	16777215	0 ... 16777215		
Wireless slot number	0	0 ... 7	Wireless slot number to be used for the port	
Wireless track number	0	0 ... 2	Wireless track number to be used for the port	
Wireless device TX power	31	1 ... 31	This parameter contains the transmit power level of the W-Device	

Parameter group	Parameter	Default	Value range	Description
Wireless IO-Link port parameter (for WP01/WP02/ ...)	Wireless max retry	8	2 ... 31	Maximum number of retries for a transmission in OPERATE mode
	Wireless IMA time	3 s	1.664 ms ... 10 min	Requested I-Am-Alive time for the OPERATE mode See table <i>Calculation of I-Am-Alive time</i> [▶ page 34].
	Wireless slot type	0	0: Single slot	Slot type is "single slot"
			1: Double slot	Slot type is "double slot"
	Wireless low power device	0	0: Disable	The connected W-Device is not a low power device.
			1: Enable	The connected W-Device is a low power device.
	Wireless max PD segment length	2	1 ... 32	This parameter contains the maximum segment length of the PDOut data to the Message handler to distribute PDOut Data within multiple W-Cycles.
	Wireless Unique ID of the W-Device Byte 0	0	0 ... 255	UniqueID of the W-Device
	Wireless Unique ID of the W-Device Byte 1	0	0 ... 255	UniqueID of the W-Device
	Wireless Unique ID of the W-Device Byte 2	0	0 ... 255	UniqueID of the W-Device
	Wireless Unique ID of the W-Device Byte 3	0	0 ... 255	UniqueID of the W-Device
	Wireless Unique ID of the W-Device Byte 4	0	0 ... 255	UniqueID of the W-Device
	Wireless Unique ID of the W-Device Byte 5	0	0 ... 255	UniqueID of the W-Device
	Wireless Unique ID of the W-Device Byte 6	0	0 ... 255	UniqueID of the W-Device
Wireless Unique ID of the W-Device Byte 7	0	0 ... 255	UniqueID of the W-Device	
Wireless Unique ID of the W-Device Byte 8	0	0 ... 255	UniqueID of the W-Device	

Table 16: Parameters of the submodules IO-Link Wireless Device XX I / XX O + PQI (Expert)

Port cycle time

The parameter "Port cycle time" sets up the cycle time of a W-Port of the W-Master. The cycle time is encoded using "Time base" (bits 6+7) and "Multiplier" (bits 0-5) values, as shown in the following table:

Range of values	Time base (Bits 7+6)	Multiplier (Bits 5-0)	Resulting Cycle time
0	00	0	free-running mode
1 ... 64	00	1 ... 63	Note: If the free-running mode is chosen with a time base of 0, the W-Master stack will automatically configure the Master cycle time to be the Minimum Master cycle time based on the PD Segmentation length, Slot Type, and Max Retry configurations.
65 ... 127	01: 5ms	1 ... 63 as multiplier	5 ... 315 ms (Time Base * Multiplier) Note: For W-Devices and W-Bridges the minimum possible transmission time is 5 ms.
128 ... 255	10 ... 11: reserved	1 ... 63	reserved, do not use

Table 17: Calculation of the port cycle time of the IO-Link Wireless Master

I-Am-Alive time

The parameter "I-Am-Alive time" serves for W-Master and W-Device communication control if no other messages are transmitted. The W-Device has to send an "I-Am-Alive" messages to the W-Master before timeout, otherwise an error is reported, e.g. to start failsafe functionalities in the application.

The "I-Am-Alive time" is a 16-bit value. Bits 7–0 contain the "Time base" and bits 15–8 contain the "Multiplier".

The "I-Am-Alive time" is calculated by multiplying the "Time base" with the "Multiplier".

The following table shows the coding of the Time base.

Value	Time base	Description
0	Reserved	reserved, do not use
1	1.664 ms	Time base is 1.664 ms
2	5 ms	Time base is 10 ms
3	1 sec	Time base is 1 sec
4	1 min	Time base is 1 min
5 ... 255	Reserved	reserved, do not use

Table 18: Time base of I-Am-Alive time

The Multiplier has the value range of 1 ... 255.

The "I-Am-Alive time" is calculated by multiplying the "Time base" with the "Multiplier", as shown in the following table:

Multiplier (Bits 15-8)	Time base (Bits 7-0)	Calculated I-Am-Alive time	Value
1	1: 1.664 ms	1.664 ms	257
	2: 5 ms	5 ms	258
	3: 1 sec	1 sec	259
	4: 1 min	1 min	260
2	1: 1.664 ms	3.328 ms	513
	2: 5 ms	10 ms	514
	3: 1 sec	2 sec	515
	4: 1 min	2 min	516
3	1: 1.664 ms	4.992 ms	769
	2: 5 ms	15 ms	770
	3: 1 sec	3 sec	771
	4: 1 min	3 min	772
4 ... 254	1 ... 4	Multiplier * Time base	Value of Multiplier * 256 + value of Time base
255	1: 1.664 ms	424.32 ms	65281
	2: 5 ms	1275 ms	65282
	3: 1 sec	255 s	65283
	4: 1 min	255 min (10 min is used)	65284

Table 19: Calculation of I-Am-Alive time

The Wireless Master verifies the calculated “I-Am-Alive time” with the following limits:

- “Minimum I-Am-Alive time” = $W\text{-Sub-cycle duration [ms]} * (\text{MaxRetry} + 1)$
If the calculated “I-Am-Alive time” is less than the “Minimum I-Am-Alive time”, the Wireless Master uses the “Minimum I-Am-Alive time” as resulting “I-Am-Alive time”.
- Maximum I-Am-Alive time = 10 minutes
If the calculated “I-Am-Alive time” is greater than the “Maximum I-Am-Alive time”, the error message `Port configuration failed HTTP Error 500: NetProxy returned with an error: C0000124` appears.

8.3 Configuration with netFIELD Wireless Web Server

This chapter describes how you can use the integrated netFIELD Wireless Web Server to access detailed information about the current operating status of the IO-Link Wireless Master device and the connected IO-Link Devices. You also can make settings for device parameterization to influence the device behavior.

8.3.1 Functional overview

The following overview shows you which functions are provided by the netFIELD Wireless Web Server integrated in the device and via which menu items or tabs of the user interface these functions can be accessed:

Menu	Tab	Description	Section
Dashboard	-	Display of device-specific information	<i>Dashboard</i> [▶ page 38]
Licenses	-	Display of the used software components	<i>Licenses</i> [▶ page 39]
Settings	(all)	Device settings	<i>Device settings</i> [▶ page 42]
	Settings	Setting of port parameters (such as port mode, Unique ID, IMA Time, etc.)	<i>Port settings</i> [▶ page 65]
	Device configuration	Configuration for IP connection parameters	<i>IP parameters</i> [▶ page 42]
	Maintenance information	Storing maintenance information	<i>Maintenance information</i> [▶ page 43]
	Firmware update	Firmware update of the IOLWM device	<i>Firmware update</i> [▶ page 44]
	Factory reset	Device reset to factory settings	<i>Factory settings</i> [▶ page 47]
	MQTT	Client and connection configuration	<i>MQTT configuration</i> [▶ page 48]
User administration	-	Setting up and managing users	<i>Log in or User administration</i> [▶ page 39]
Sign-in, Sign-out	-	User login and logout	
IO-Link Wireless Master settings	Channel Selection	WLAN channel list	<i>Channel Selection</i> [▶ page 54]
	Configuration	Configuration of the IO-Link Wireless Master parameters	<i>Configuration</i> [▶ page 57]
	Scan	Scanning for unconnected IO-Link Devices	<i>Scan and pairing</i> [▶ page 59]
Wireless port WP01, WP02, WP03 ...	(all)	Port-specific information and settings for the wireless IO-Link ports WP01, WP02, WP03 ...	<i>Device or port information, pairing, IOLWD update</i> [▶ page 61]
	Information	Displays device information on the connected IO-Link Device	<i>Device information</i> [▶ page 62]
	Status	Display of port status information	<i>Port status</i> [▶ page 63]
	Settings	Display (and setting) of port parameters.	<i>Port settings</i> [▶ page 65]
	Pairing	Pairing new devices (pairing by button)	<i>Pairing</i> [▶ page 70]
	IOLWD Update	Firmware update of the IOLW device	<i>IOLWD Update</i> [▶ page 72]
	ISDU	Display of device Index Service Data Units	<i>Device ISDU</i> [▶ page 74]
		Display of master Index Service Data Units	<i>Master ISDU</i> [▶ page 76]
Process data	Displays the process data (input/output)	<i>Process data</i> [▶ page 79]	

Table 20: Functional overview of the netFIELD Wireless Web Server for IO-Link Devices

8.3.2 Open netFIELD Wireless Web Server

Prerequisite: To open the user interface of the netFIELD Wireless Web Server, the IP address of the device must be configured and known.

**Note:**

Make sure that the PC on which you want to access the website of the netFIELD Wireless Web Server and the device you want to connect to are both on the same Ethernet subnet.

Proceed as follows:

- Enter the following text in the address line of your web browser to address the device: `http://<Configured IP Address>` e.g.
`http://192.168.10.2`
- ⇒ The page Dashboard of the netFIELD Wireless Web Server appears. You can now use the functions described below.

8.3.3 Dashboard

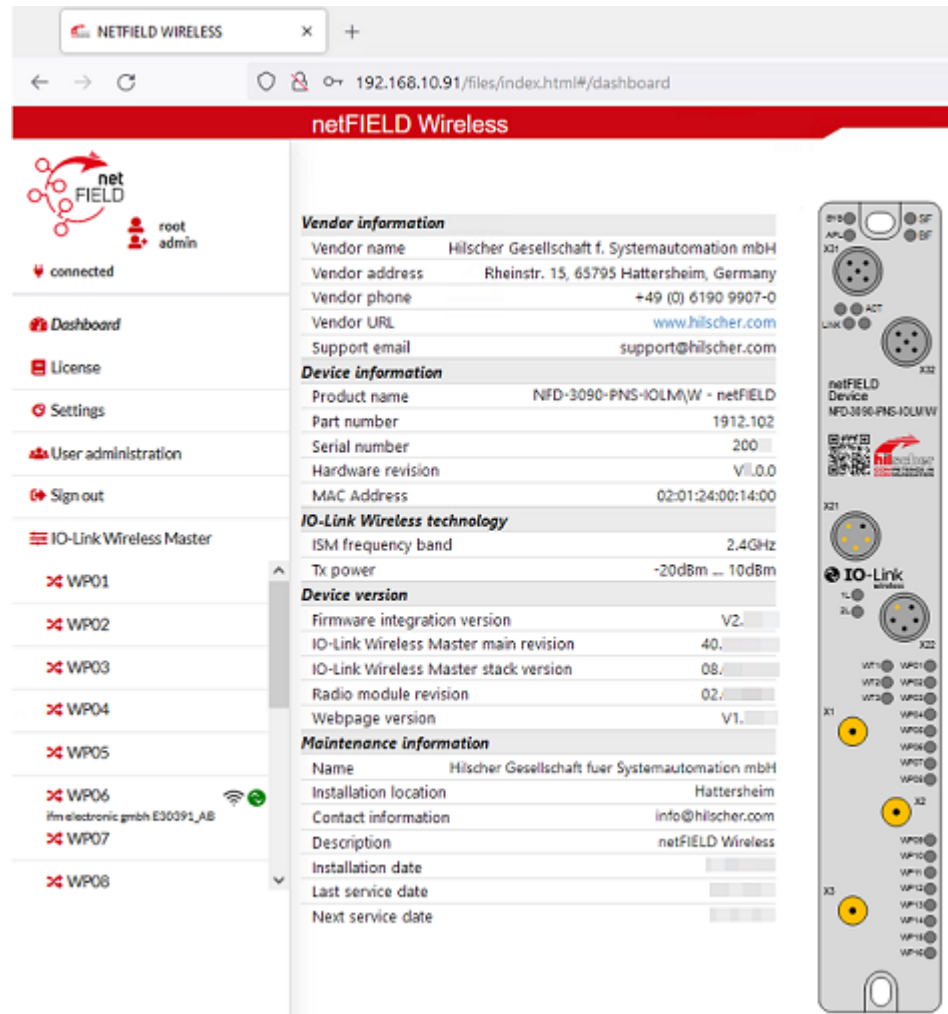


Figure 5: Dashboard page (example)

When opening the user interface, the Dashboard page appears first. On the Dashboard page, the following device-specific information is displayed:

Area	Information displayed
Top left corner	Shows the current user role and device connection state.
Left column	Navigation area; icons on errors or operating states may appear here.
Vendor information	Contact details of the device manufacturer
Device information	The name, part and version number, MAC address of the hardware
IO-Link Wireless technology	Specification of the radio connection
Device version	The name and version number of the device, the Master and the radio module, the web page version.
Maintenance information	Maintenance information in text form

Table 21: Data on "Dashboard" page

Maintenance information

Maintenance information includes textual information that the user can specify, such as device name, installation location and date, contact information, description, date of last and next service of the device. These texts can be edited using the **Maintenance information** tab of the **Settings** menu (see section *Maintenance information* [▶ page 43]).

8.3.4 Licenses

The **Licenses** menu item allows you to display the page of the same name. This shows you:

- a list of the licensed software components contained in the product,
- for each licensed software component, a link to the associated license conditions.

8.3.5 Log in or User administration

Log in user

**Note:**

A log in is only possible when device connection state is “connected” (top left corner of the netFIELD Wireless Web Server).

To log in as a user

- Select **Sign in** in the left column of the netFIELD Wireless Web Server.
- The input mask for user name and password appears:

The screenshot shows a login form with two input fields. The first field is labeled 'Username' and the second is labeled 'Password'. Below the fields is a button labeled 'Sign in'.

Figure 6: Menu item *SignIn* - Input mask for user name and password

- Enter your user name and password correctly in the corresponding input fields of the screen mask.
- Click **Sign in**.
- If you have entered a known user name correctly, you now can work with the netFIELD Wireless Web Server with the defined rights of this user. The user role (*Operator*, *Maintenance*, *Admin*) used for sign in is displayed in the upper left corner. The previous menu entry **Sign in** changes and is now called **Sign out**.

Logging off users

To log off a user:

- Click on the **Sign out** menu item in the main menu of the netFIELD Wireless Web Server (left side).
- From now on, you can no longer work with the netFIELD Wireless Web Server with the previous rights. The user role *guest* appears in the upper left corner. The previous menu entry **Sign out** changes and is now called **Sign in** again.

Guest user access

By default, the netFIELD Wireless Web Server knows a user *guest* without password, which has been set up to realize a first-time or guest access.

First-time login as administrator

In the delivery state or after resetting to the factory settings, the netFIELD Wireless Web Server can be accessed via the user name “root” and the password “password”. This combination also has administrator rights.



Important:

Change the administrator password immediately after commissioning. The factory default setting is generally known and does not provide sufficient protection.

User Administration

- Select **User administration** in the left column of the netFIELD Wireless Web Server.

The Administration pane provides a role-based user administration. You can use it to create and delete users and assign roles to them on which their rights depend. Users can be divided into three roles:

- Maintenance
- Operator
- Administrator

Creating a new user

When opening the user administration the following picture appears:

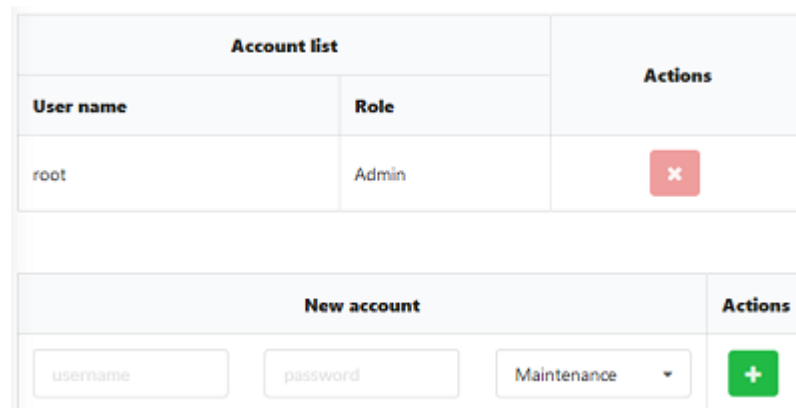





Figure 7: User Administration screen mask (initial state)

Another user can be defined in the second line. Proceed as follows:

- In the Username input field (left side), enter the user name that is to be used for the user. User names that have already been used are not permitted here.
- In the Password input field (middle), enter the password for this user name.
- Use the combo box on the right to select the role for the new user to be created (the roles Maintenance, Operator or Administrator are available).
- Finally, click on the green field.
- The new user is created and assigned to the selected role.

Account list		Actions
User name	Role	
root	Admin	
user1	Maintenance	
operator1	Operator	


New account			Actions
<input type="text" value="username"/>	<input type="text"/>	<input type="text" value="Operator"/>	

Figure 8: User Administration screen mask

Remove user

To remove an existing user from the device user management, proceed as follows:

- Click the red square with a white cross to the right of the user to be removed.
- ⇒ The user will be deleted.

The “root” user cannot be deleted, so the red delete button is grayed out.

8.3.6 Device settings

Using the netFIELD Wireless Web Server, you can make several settings on the device. Open the panes via the left column of the netFIELD Wireless Web Server.

- Select the wireless IO-Link port (**WP01**, **WP02**, **WP03** ...) and open the subtab **Settings**, to make the port settings (see section *Port settings* [▶ page 65]).
- Select **Settings** in the left column and open the corresponding tab:
 - Device information (with menu on the Configure IP parameters),
 - Store maintenance information,
 - Upgrading the firmware,
 - Resetting the device to factory settings,
 - *MQTT configuration* [▶ page 48].

8.3.6.1 IP parameters

- Select **Settings** in the left column of the netFIELD Wireless Web Server.
- The Device configuration tab is displayed.



Figure 9: Device configuration tab (example)

The PROFINET IO-Controller configures the IP address of the device. Therefore, no manual configuration of the IP address is required for PROFINET IO devices.

8.3.6.2 Maintenance information

The Maintenance information tab is used to store maintenance information such as device name, installation location and date, contact information, a description text, or the date of the last and next service on the device.

The screenshot shows a web interface with a navigation bar at the top containing five tabs: 'Device configuration', 'Maintenance information' (which is active and highlighted), 'Firmware update', 'Factory reset', and 'MQTT'. Below the tabs, the 'Maintenance information' form is displayed with the following fields and values:

- Name:** Hilscher Gesellschaft fuer Systemautomation mbH
- Installation location:** Hattersheim
- Installation date:** 1.12.20
- Contact information:** info@hilscher.com
- Description:** netFIELD Wireless
- Last service date:** 1.12.20
- Next service date:** 30.12.20

At the bottom of the form, there are three buttons: 'Apply', 'Clear (Undo)', and 'Default'. A green success message banner at the very bottom of the form area reads 'Maintenance data successful changed'.

Figure 10: Maintenance information tab

Changes to settings require operator or admin rights. If these are not available, the tab is grayed out and cannot be edited.

The maintenance information is in detail:

Name	Description	Value / Value range
Name	Uniform label for the function of this device	Character string, max. 64 characters*
Installation location	Uniform label for the location where the device is mounted	Character string, max. 32 characters*
Installation date	Date of installation or commissioning of this device	Valid installation date
Contact information	Textual identification of a contact person for this managed node of the installation, together with information on how to contact this person.	Character string, max. 32 characters*
Description	Individual status information and remarks	Character string, max. 64 characters*
Last service date	Date/time of the last service, e.g. firmware update	Valid last service date
Next service date	Date/time of the next service, e.g. firmware update	Valid next service date

*no mutated vowels

Table 22: Maintenance information


To make changes to the maintenance information:

- Click on the **Settings** in the left column of the netFIELD Wireless Web Server.
- ⇒ The Device configuration tab appears.
- Select the **Maintenance information** tab.
- Change the relevant fields there. Do not use mutated vowels in character strings.
- ⇒ Click **Apply**.
- ⇒ Your changes take effect.

8.3.6.3 Firmware update

The netFIELD Wireless Web Server provides a way to update all firmware required for the IO-Link Wireless Master NFD-3090-PNS-IOLMW device via the Firmware update tab.

- Select **Settings** in the left column of the netFIELD Wireless Web Server.
- Open the **Firmware update** tab.

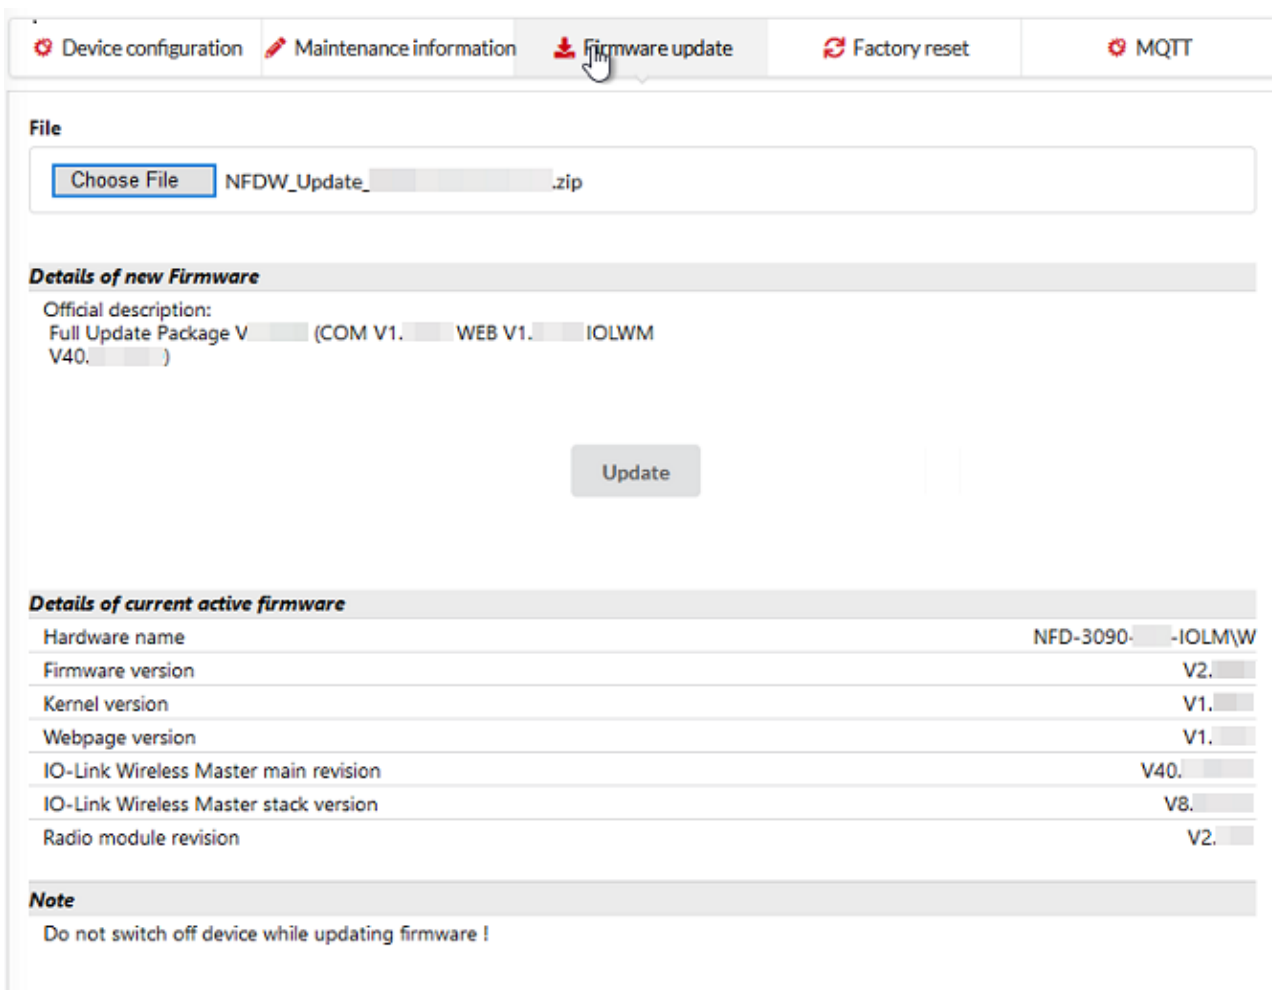

The screenshot shows the Firmware update tab selected in the netFIELD Wireless Web Server interface. The top navigation bar includes tabs for Device configuration, Maintenance information, Firmware update (selected), Factory reset, and MQTT. The main content area is titled "File" and contains a "Choose File" button and a text input field with the filename "NFDW_Update_... .zip". Below this is a section titled "Details of new Firmware" with an "Official description:" field containing "Full Update Package V... (COM V1. ... WEB V1. ... IOLWM V40. ...)". An "Update" button is positioned below the description. The "Details of current active firmware" section is a table with the following data:

Details of current active firmware	
Hardware name	NFD-3090-...-IOLMW
Firmware version	V2. ...
Kernel version	V1. ...
Webpage version	V1. ...
IO-Link Wireless Master main revision	V40. ...
IO-Link Wireless Master stack version	V8. ...
Radio module revision	V2. ...

A "Note" section at the bottom states: "Do not switch off device while updating firmware !"

Figure 11: Firmware update tab (example)

NOTICE**Bring the system into safe operating condition**

Never carry out a firmware update during operation of the system in which the NFD-3090-PNS-IOLMW device is installed. Before each firmware update, the system must first be shut down properly, or must be brought into a safe operating state.

NOTICE**Invalid firmware**

Loading invalid firmware files could render your device unusable. Only load firmware files to the device that are valid for this device. Otherwise, you might be forced to send in your device for repair.

**Important:**

If you update the firmware of the NFD-3090-PNS-IOLMW device and you did not make a backup of the firmware and configuration data, you cannot restore the state of your device prior to the update, including the previously used firmware.

Changes to settings require operator or admin rights. If these are not available, the Firmware update tab is grayed out and cannot be edited.

To update the firmware, you need the file `NFDW_Update_[protocol name]_v[version].zip` containing all firmware required for the NFD-3090-PNS-IOLMW device. You can download this from the website of the device manufacturer or provider.

**Note:**

Do not change the name of the `NFDW_Update_[protocol name]_v[version].zip` file.

- In the Firmware update tab, click on **Choose File**.
- ⇒ A file selection dialog appears.
- Select the file `NFDW_Update_[protocol name]_v[version].zip` in this dialog.
- Click **Update**.
- ⇒ The firmware update is performed. This takes a short while.

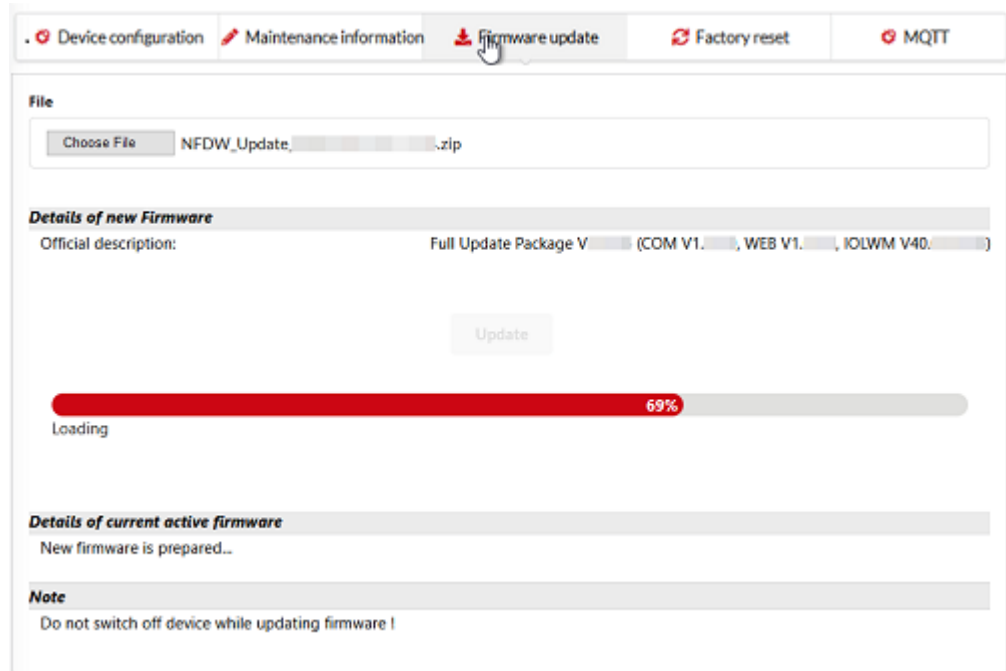


Figure 12: Firmware update is performed (example)

- ⇒ A message appears indicating that the firmware update was finished, and the device will be restarted after pressing OK, and has a new (possibly different) IP address.
- Click **OK**.
- Then you must perform the port configuration once again.

8.3.6.4 Factory settings

In some cases, it is helpful to reset the device to the factory settings. This is possible for various selectable classes of settings via the Factory reset tab in the Settings menu.

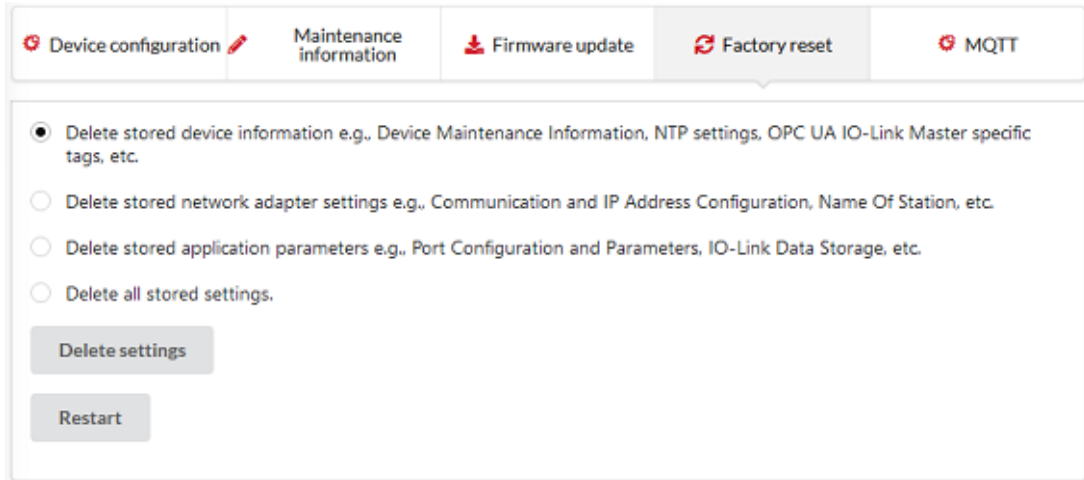


Figure 13: Factory reset tab

Changes to settings require operator or admin rights. If these are not available, the tab is grayed out and cannot be edited.



Important:

If PLC communication is active, factory reset is not allowed! Stop PLC communication before you use the factory reset options.

Various settings made can be deleted depending on your selection:

Option	Delete stored configuration
Delete stored device information	Device information (e. g. maintenance information, system time settings, and IO-Link master settings within OPC UA)
Delete stored network adapter settings	Network adapter settings (communication settings, IP address configuration, Name of Station)
Delete stored application parameters	Application-specific data (port configuration and parameters, remanent parameters)
Delete all stored settings	All settings

Table 23: Options to delete settings

To reset the device to the factory settings, proceed as follows:

- Click on the **Settings** in the left column of the netFIELD Wireless Web Server.
- The Device configuration tab appears.
- Select the **Factory reset** tab.
- Select which settings should be reset to the factory defaults.
- Click on **Delete settings**.
- ⇒ The selected settings are deleted.
- ⇒ Click on **Restart**.
- ⇒ The device is restarted with the factory settings.

8.3.6.5 MQTT configuration

Use the MQTT tab to view and change the MQTT client and connection configuration.

- Select **Settings** in the left column of the netFIELD Wireless Web Server.
- Open the **MQTT** tab with its sub tabs.
- The Client Status appears, and by default the Client Configuration sub tab.

MQTT > Client Status, and Client Configuration

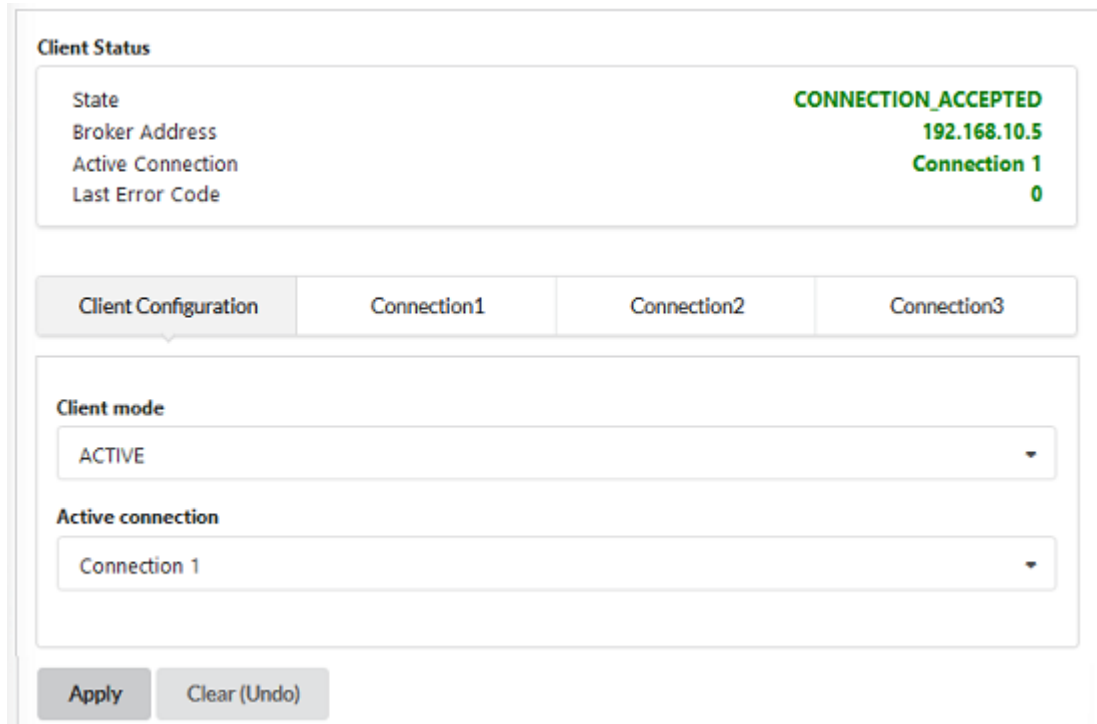


Figure 14: MQTT tab, Client Status, Client Configuration sub tab (example)

Parameter	Description	Value / Value range
State	States 1, 2: "CONNECTING" State 3: "CONNECTION_ACCEPTED" States 0,4,5,6: "CLIENT_INACTIV" Connection state code 0: Ready: initialization value, connection not established. 1: Connecting: TCP connection establishment in progress. 2: TCP Connected: TCP connection established. MQTT connection in progress. 3: MQTT Connected: MQTT connection established. 4: Disconnecting: MQTT connection shutdown in progress. 5: Disconnected: TCP connection terminated. 6: Wait Reconnect: Waiting for reconnection to be allowed again. See "Connect Timeout" parameter.	CONNECTING (red), CONNECION_ACCEPTED (green), CLIENT_INACTIVE (red)
Broker Address	Current value for "Broker Address"	Example: 192.168.10.5
Active connection	Current value for "Active connection", respectively active connection configured.	Example: Connection 1
Last Error Code	Last error code, related to this connection.	Example: 0

Table 24: MQTT in port configuration for IO-Link Device, Client Status

Parameter	Description	Value / Value range
Client mode	"ACTIVE" means MQTT client application is enabled and "INACTIVE" means disabled.	INACTIVE (default), ACTIVE
Active connection	Active connection configured.	Connection 1 (default), Connection 2, Connection 3

Table 25: MQTT in port configuration for IO-Link Device, Client Configuration

- For MQTT Client Configuration make the following settings and configuration steps:
 - Client mode
 - Active connection

MQTT > Connection1 > IP settings

- Open the **Connection1** sub tab.
- The IP settings sub sub tab appears by default.

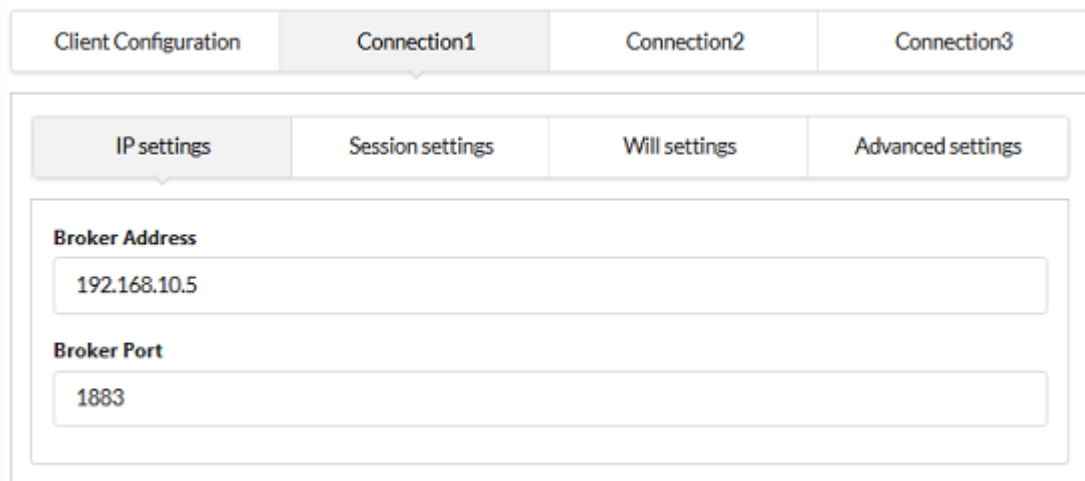


Figure 15: MQTT tab, Connection1 > IP settings sub sub tab (example)

Parameter	Description	Value / Value range
Broker Address	IP address of the broker.	Valid IP address, Default: [BrokerAddress],
Broker Port	MQTT broker IP port number.	Typically: 1883

Table 26: MQTT in port configuration for IO-Link Device, Connection1 > IP settings

- For MQTT Connection Configuration make the following settings and configuration steps:
 - Broker Address
 - Broker Port

MQTT > Connection1 > Session settings

➤ Open the **Session settings** sub sub tab.

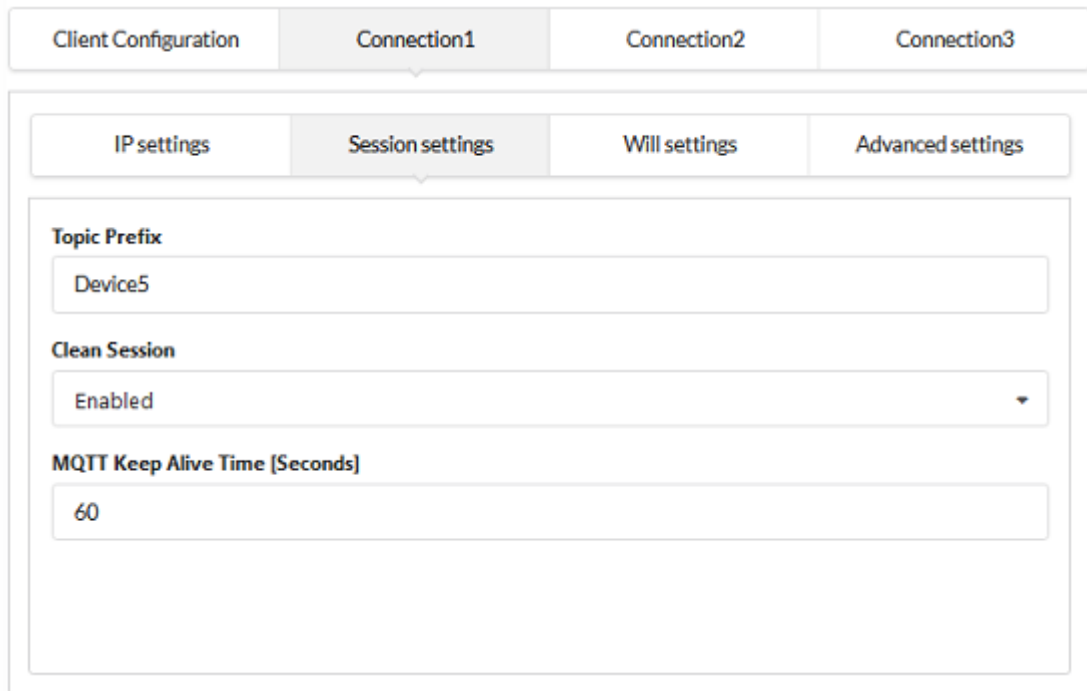


Figure 16: MQTT tab, Connection1 > Session settings sub sub tab (example)

Parameter	Description	Value / Value range
Topic Prefix	Text that is prefixed to each topic, e. g. 'StationA'. For each single topic can be configured if this prefix is to be preceded or not. If left empty the firmware will try to use the MAC address.	Text of uppercase and lowercase letters and underscore, Default: [not specified]
Clean Session	Setting whether all topics are to be transferred to the broker after establishing a connection or not. Enabled (default): After a connection to the broker has been established, all topics of the type 'publish' are transmitted from the MQTT client to the broker . Disabled: Only those topic are transmitted to the broker, which have changed since the last connection. Note that if you use this setting, the broker must support the 'preserve context' function.	Enabled (default), Disabled
MQTT Keep Alive Time [Seconds]	Interval in which the MQTT client sends a sign of life to the broker. The set value for the MQTT client must be less than the monitoring time set in the broker. Enabling this timeout is suitable if the connection is used for at least one subscription so a permanent connection to the broker is required. Not allowed to be enabled together with the Connection Idle Timeout.	Specified in s. 0 = send no sign of life to the broker. Default: 0

Table 27: MQTT in port configuration for IO-Link Device, Connection1 > Session settings

➤ For MQTT Connection Configuration make the following settings and configuration steps:

- Topic Prefix
- Clean Session
- MQTT Keep Alive Time

MQTT > Connection1 > Will settings

➤ Open the **Will settings** sub sub tab.

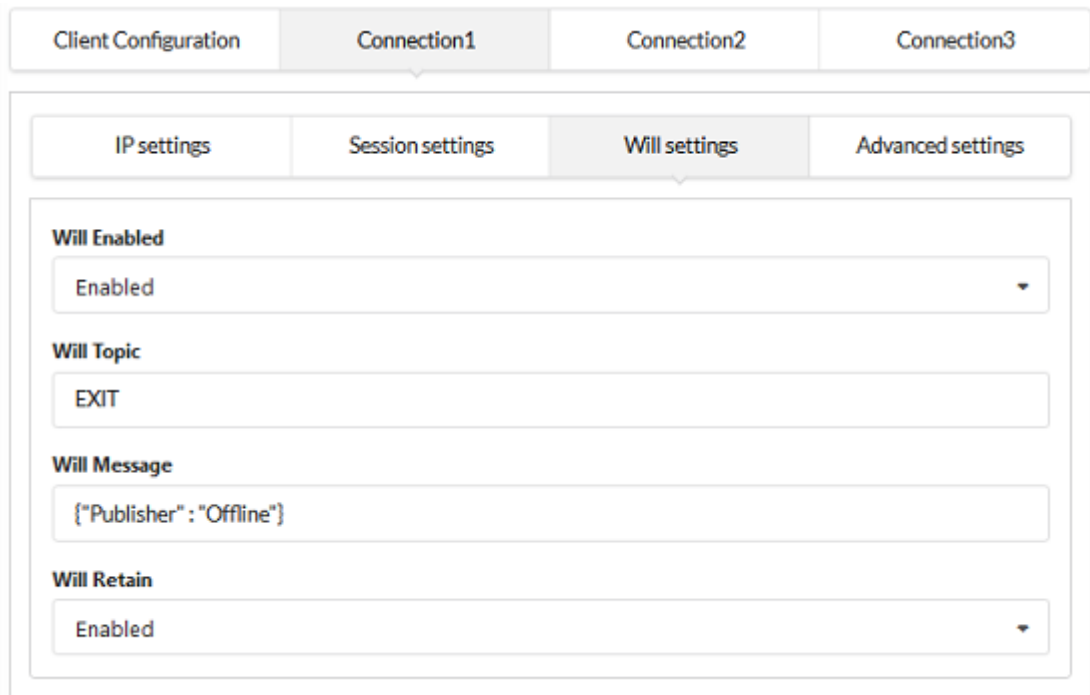


Figure 17: MQTT tab, Connection1 > Will settings sub sub tab (example)

Parameter	Description	Value / Value range
Will Enabled	Enable this option if you want to use the "will" feature of MQTT.	Enabled (default), Disabled
Will topic	Unique name for the topic, editable. If left empty the firmware will use the string constant "will" prefixed by the Prefix Will if enabled.	Max. 128 characters of text from uppercase and lowercase letters and underscore; Default: [not specified]
Will Message	Payload forwarded by the broker to other clients subscribed to the will topic in case of abnormal disconnection (when an MQTT Disconnect packet was not sent to the broker). If left empty, the string "Disconnected" is sent.	Text of uppercase and lowercase letters and underscore; Default: [not specified]
Will QoS	Quality of Service Level for the Will Message. 0: "Only once": fire and forget 1: "At least once": acknowledged delivery 2: "Exactly once": assured delivery	Only once (default), At least once, Exactly once
Will Retain	Setting whether the broker shall store the history of a data value or not.	Enabled (default), Disabled

Table 28: MQTT in port configuration for IO-Link Device, Connection1 > Will settings

➤ For MQTT Connection Configuration make the following settings and configuration steps:

- Will Enabled
- Will Topic
- Will Message
- Will Retain

MQTT > Connection1 > Advanced settings

➤ Open the **Advanced settings** sub sub tab.

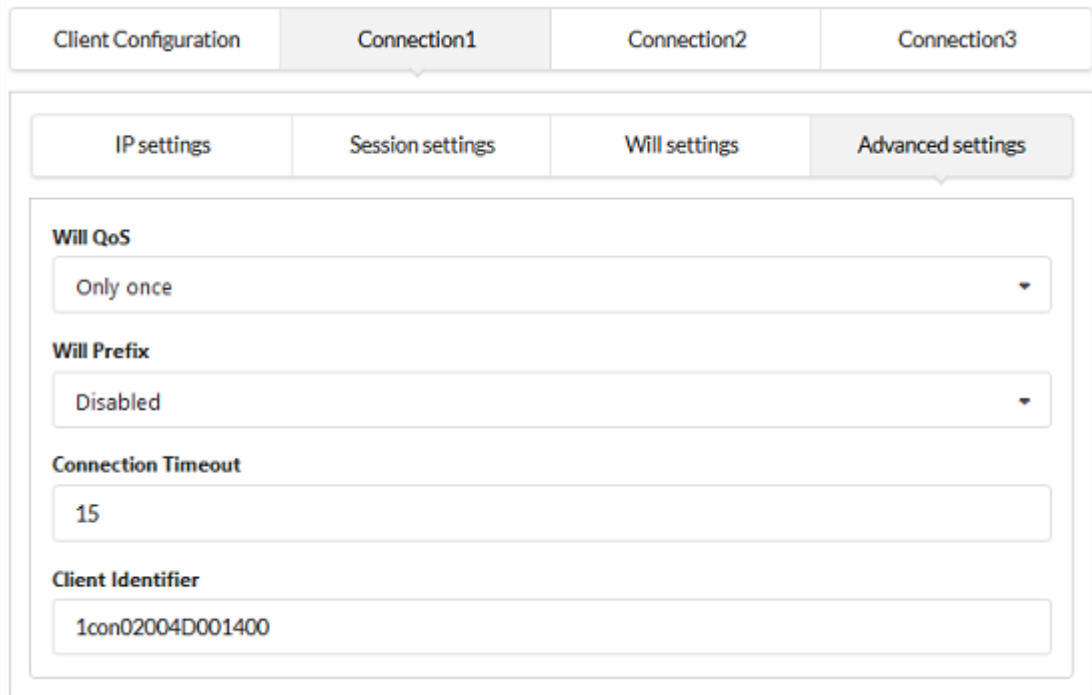


Figure 18: MQTT tab, Connection1 > Advanced settings sub sub tab (example)

Parameter	Description	Value / Value range
Will QoS	Quality of Service Level for the Will Message. 0: "Only once": fire and forget 1: "At least once": acknowledged delivery 2: "Exactly once": assured delivery	Only once (default), At least once, Exactly once
Will Prefix	Text that is prefixed to each Will topic. For each single topic can be configured if this prefix is to be preceded or not.	Text of uppercase and lowercase letters and underscore, Default: [not specified]
Connection Timeout	Time for trying to establish a connection (MQTT Connect) to the broker. If the connection could not be established, then the MQTT client waits for the duration of 'Connection Timeout' until a new connection is established to the broker.	Specified in s. = 0 MQTT client constantly tries to establish a connection to the broker. Default: 0
Client identifier	Unique name of the MQTT client in UTF-8 format used at connection establishment time. All devices that are connected to a broker, must have a unique name. The name may only consist of lowercase letters, uppercase letters and numbers. If the field is empty, then the broker assigns a name.	max. 23 Bytes for max. 23 characters, Default: [Client ID] Example: "ClientId"

Table 29: MQTT in port configuration for IO-Link Device, Connection1 > Advanced settings

- For MQTT Connection Configuration make the following settings and configuration steps:
- Will QoS
 - Will Prefix
 - Connection Timeout
 - Client Identifier

8.3.7 IO-Link Wireless Master settings

The netFIELD Wireless Web Server provides the IO-Link Wireless Master settings with the tabs Channel Selection, Configuration and Scan.

- Select **IO-Link Wireless Master**, to display the tabs.
- The **Channel Selection** tab allows you to select the WLAN channels required for device operation.
- On the **Configuration** tab, you can make the IO-Link Wireless Master configuration settings. This includes the specific master settings parameters, the activating or deactivating of wireless tracks WT1 ... WT3, as well as specification of the track transmission power.
- On the **Scan** tab, you can scan for unconnected IO-Link Devices. A scan result then shows the found devices. Each of them must be paired to one of the 16 wireless IO-Link ports (WP01, Wp02, WP03, ...).

8.3.7.1 Channel Selection

- Select **IO-Link Wireless Master** in the left column of the netFIELD Wireless Web Server.
- The **Channel Selection** tab appears.

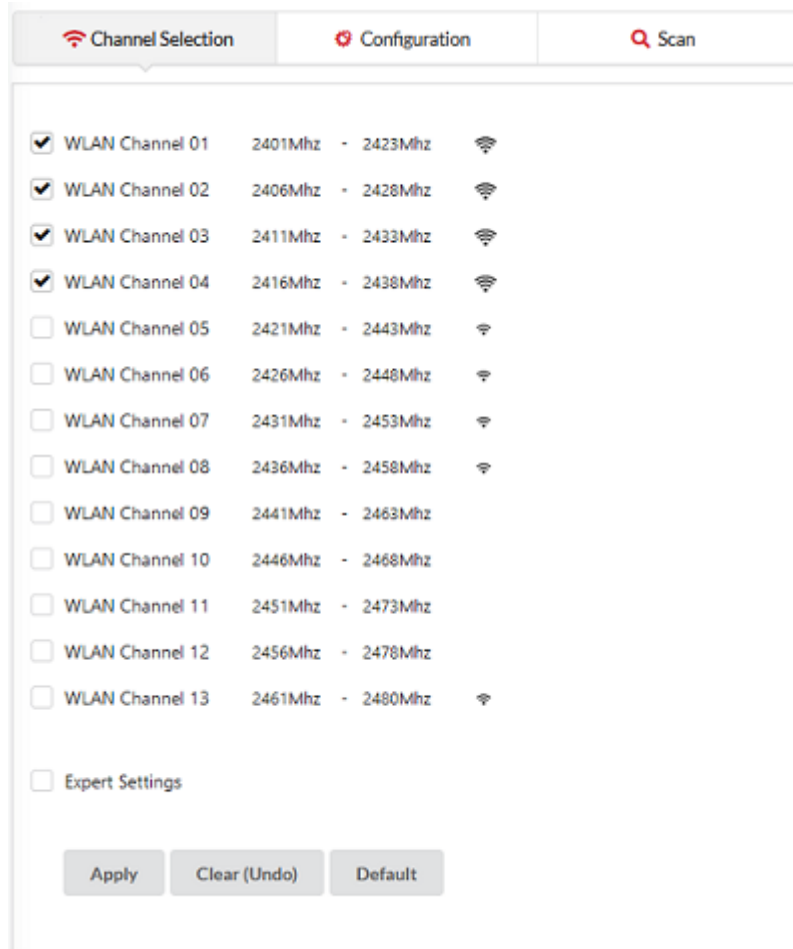


Figure 19: Channel selection tab

Use the Channel Selection tab to select the WLAN channels required for operation.

Parameter	Description	Value, Value range
WLAN Channel 01 ... WLAN Channel 13	<p>List of WLAN channels 01 to 13 on the 2.4 GHz frequency band.</p> <p>The radio symbols indicate whether a channel is activated and if fully or partly.</p> <p>Use mouse over to indicate the help text.</p> <p> WLAN Channel fully activated</p> <p> WLAN Channel partly activated</p>	"checked", "unchecked" (default)

Table 30: IO-Link Wireless Master settings - Channel selection

- Select the operating channels required for device operation.
- Click **Apply**.
- The selected WLAN channels are configured.

Expert settings

The expert mode allows a refinement of the transmission frequencies to be used. Here, each individual operating channel can be activated or deactivated. Since the list of operating channels is based on the WLAN channels, there are overlaps. When activating/deactivating the operating channels, these overlaps are automatically taken into consideration.

The complete range of wireless operating channels comprises 80 bitwise coded 1 MHz frequency channels.

- The wireless channels 1 (2401 MHz), 2 (2402 MHz), 79 (2479 MHz) and 80 (2480 MHz) are used for network configurations and cannot be configured.
- The wireless channels 3-78 (2403 ... 2478 MHz) can be configured to be used or not for IO-Link wireless communication within a Wireless Master. Frequency Hopping is used for transmission on different frequency channels on the 2.4 GHz Band frequency.



Note:

The ranges of wireless operating channels assigned to each of the WLAN channels 01 to 13 overlap each other. In consequence, if a 1 MHz frequency channel option is configured for one WLAN channel, this will have effect on the corresponding 1 MHz frequency channel that is also assigned to a WLAN channel in the neighborhood.



Important:

The use of this mode is for experts only!

- Check **Expert settings**.
- ↗ The following view appears with configuration options of each single MHz frequency.

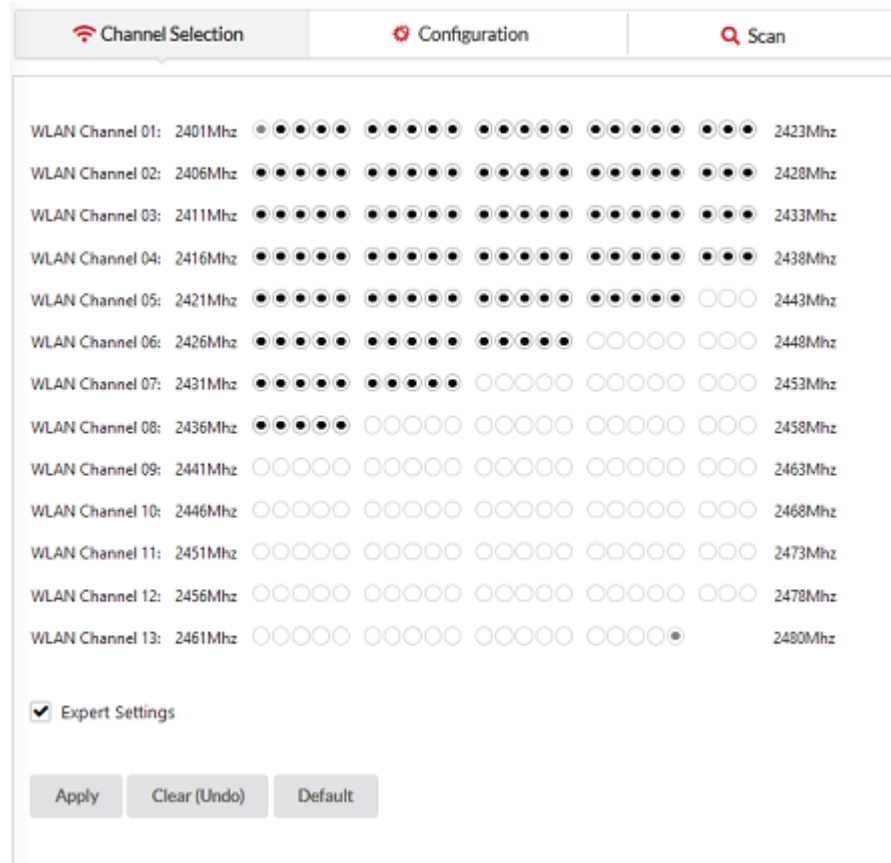


Figure 20: Channel selection tab, Expert settings (example)

8.3.7.2 Configuration

- Select **IO-Link Wireless Master** in the left column of the netFIELD Wireless Web Server.
- Then select the **Configuration** tab.

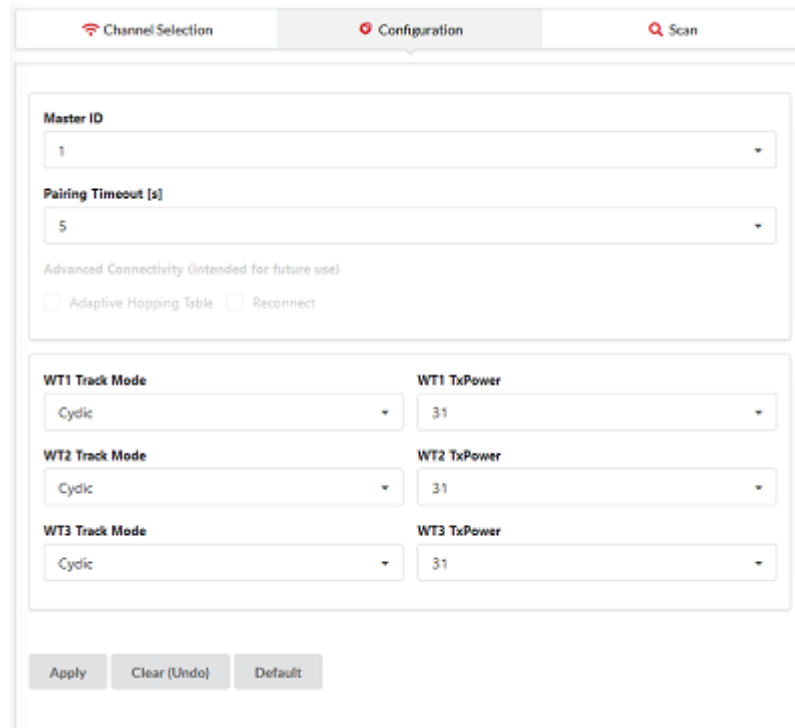


Figure 21: IO-Link Wireless Master > Configuration tab


Use the IO-Link Wireless Master > Configuration tab to view or adapt the IO-Link Wireless Master settings:

Parameter	Description	Value, Value range
Master ID	Master identifier	1 ... 29, 0: when not yet configured
Pairing Timeout	Timeout for pairing in seconds.	5 ... 60, 0: when not yet configured
Advanced Connectivity (intended for future use)	Wireless functionalities	
	Adaptive Hopping Table: Basically this option is an enhancement to Frequency Division Multiple Access (FDMA) technology. If "checked", this option is used.	"checked", "unchecked" (default)
	Reconnect: If "checked", reconnection trials will be performed when connections are lost.	"checked" (default), "unchecked"
WT1 Track Mode ... WT3 Track Mode	Operating mode of wireless track <ul style="list-style-type: none"> • Stop: track is inactive, • Cyclic: track is in cyclic only mode and can't perform service operations, • Service: track is in service mode, meaning, cyclic mode that can perform service operations like scan/pair, • Auto 	Stop, Cyclic, Service, Auto, Default: Stop
WT1 TXPower... WT3 TXPower	Transmission power The maximum allowable value for the TX Power parameter is selected by the IO-Link Wireless Master.	1 ... 31, Default: 31

Table 31: IO-Link Wireless Master settings - Configuration

- Make settings for the parameters “Master ID”, “Pairing Timeout”, “Advanced Connectivity”, “WT1 Track Mode ... WT3 Track Mode”, and “WT1 TXPower ... WT3 TXPower”.
- Click **Apply**.
- The request appears Applying configuration will restart the device. Are you sure?
- Click **Yes**.
- Wait until reset operation is finished and result is shown:
- The message Master configured successfully appears.

“Master configuration failed” error handling

When the IO-Link Wireless Master went to an error status, a red triangle icon  appears for Master in the left column of the netFIELD Wireless Web Server and the message Master configuration failed. For trouble shooting:

- Delete the Master configuration.
- Perform a device reset.

For further information, refer to *Configuring the IO-Link Wireless Master* [▶ page 83].

8.3.7.3 Scan and pairing

- Select **IO-Link Wireless Master** in the left column of the netFIELD Wireless Web Server.
- Open the **Scan** tab.

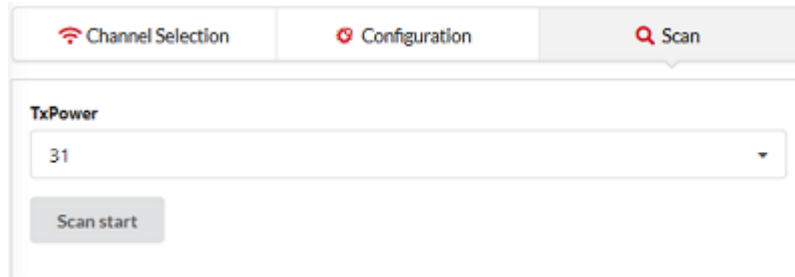


Figure 22: Scan tab

Use the Scan tab, to scan for unconnected devices.

- Select **TxPower**.

The value range of “TxPower” (Transmission power) is “1 ... 31” and the default value “31”.

- Click **Scan start**.

➤ The system searches for unconnected devices. The scan result is being displayed after a while.

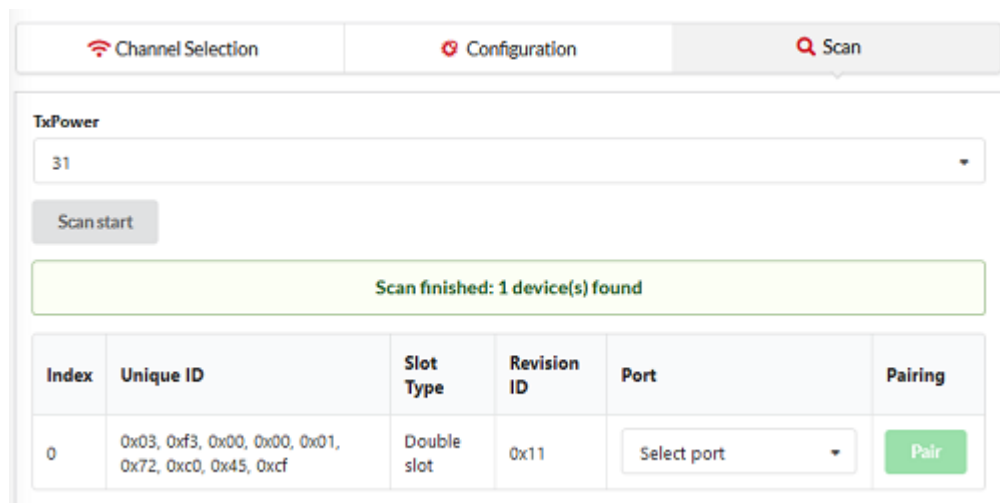


Figure 23: “Scan tab”, scan result

Parameter	Description	Value, Value range
Index	Device index	0 ... 20
Unique ID	Identification of the found IO-Link Device as unique ID (UUID, 9 Bytes). Copy/note the unique ID. This value is required for port configuration.	0 ... 0xFF
Slot Type	Slot type of the found device	Single slot, Double slot, Default: Single slot
Revision ID	Revision ID of the found device This parameter is specified by the found device. It indicates software revision running on the found device.	0: No device connected, Others: Software revision running on the found device


Parameter	Description	Value, Value range
Port	<p>ID of wireless IO-Link port to which the IO-Link Device is to be paired.</p> <p>Note: For a device featuring “Double slot” an even port must be assigned.</p> <p>Otherwise the error message appears: “Pairing failed HTTP Error 500:NetProxy returned with an error: C0000124”</p> <p>If a port is not shown in the selection list, you can use the Remove option (see section <i>Pairing</i> [▶ page 70]).</p>	WP01 ... WP16
Pairing	A pairing service is provided to pair a found IO-Link Device to a wireless IO-Link port of the IO-Link Wireless Master.	Pair (green), Unpair (red), Default: Pair (green)

Table 32: Scan result, pairing


The scan result includes a textual description: “Scan finished: [number of found devices] device(s) found”. For scan errors appears: “Scan failed HTTP Error [error number]: [short description of error]” plus a further message in the upper part of the scan tab.

Pairing / unpairing

For pairing an IO-Link Device to a wireless IO-Link port of the IO-Link Wireless Master device during device commissioning:

- In the Scan tab in the scan result, select the **Port**.
- Click .
- Pairing is performed and “Pair” (green) switches to “Unpair” (red). The message `Pairing succeeded` appears.

You can change made pairing setting as follows:

- To unpair an IO-Link Device and a paired wireless IO-Link port, click . The message `Unpairing succeeded` appears.

For further information, refer to *Configuring the IO-Link Wireless Master* [▶ page 83].

8.3.8 Device or port information, pairing, IOLWD update

In the port specific tabs Information, Status, Settings, ISDU, and Process Data, you can display device or port information individually for each of the wireless IO-Link ports of the IO-Link Wireless Master device. In the Settings tab you also can make port-specific settings, see *Port settings* [▶ page 65]. In the Pairing tab, you can pair, unpair or remove wireless devices for 16 ports. In the IOLWD Update tab, you can update the firmware for max. 16 wireless target devices.

Access the tabs as follows:

- In the left-hand column of the netFIELD Wireless Web Server, click on the wireless IO-Link port **WP01**, **WP02**, **WP03**, ...
- The Information tab of the corresponding wireless IO-Link port appears.
- To open another tab, click **Status**, **Settings**, **Pairing**, **IOLWD Update**, **ISDU**, or **Process Data**.

Tab	Description
Information	Displays some "Device information" of the IO-Link Device (Min cycle time, Function ID, Number of profile IDs, Vendor name, Vendor text, Product name, Product ID, Product text, Serial number, Hardware revision, Firmware revision).
Status	Displays port status information (Port state, Port quality, Revision ID, Master cycle time, Input data length, Output data length, Vendor ID, Device ID, Signal quality). This tab shows current settings.
Settings	Display and setting of port parameters (Port mode, Port cycle time, Validation and backup, Vendor ID, Device ID, Low power device, Max PD segment length, Unique ID, Slot number, Track number, Device TX power, Max retry, Slot type, IMA Time), see <i>Port settings</i> [▶ page 65]. This tab shows current settings.
Pairing	Pairing of new devices (pairing by button or by Unique ID)
IOLWD Update	Firmware update of the IOLW device
ISDU	Display of the Index Service Data Units: <ul style="list-style-type: none"> • Read/write access to parameters of the connected IO-Link Device. • Read/write access to parameters of the IO-Link Wireless Master device.
Process Data	Display of the process data (input/output)

Table 33: Information, Status, Settings, Pairing, IOLWD Update, ISDU, or Process Data

8.3.8.1 Device information

The Information tab displays some “Device information” of the IO-Link Device connected to a wireless IO-Link port. The official IO-Link SMI layer does not provide this information.

- In the left column of the netFIELD Wireless Web Server, select the wireless IO-Link port with the connected IO-Link Device.
- The **Information** tab appears with the device information of the connected device.

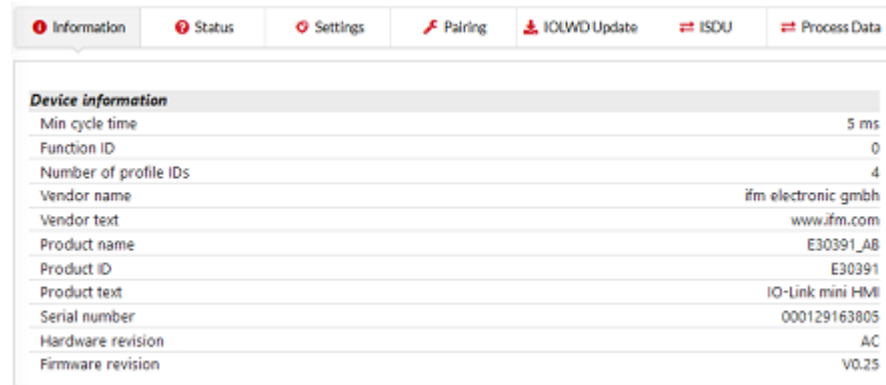


Figure 24: Information tab, Device information (example)

Parameters	Description	Value / Value range
Min cycle time	Minimum cycle duration supported by a Device. This is a performance feature of the Device and depends on its technology and implementation.	0 ... ms
Function ID	Function ID of connected device.	
Number of profile IDs	Provides the number of ProfileIDs contained in the ProfileCharacteristic (index 0x000D) of the connected device. The complete list the ProfileIDs has to be read using common OnRequestData Read mechanism.	
Vendor name	Detailed name of vendor of connected device.	Character string (up to 64 characters)
Vendor text	Additional vendor information of the connected device.	Character string (up to 64 characters)
Product name	Detailed product or type name of the connected device.	Character string (up to 64 characters)
Product ID	Product or type identification of connected device.	Character string (up to 64 characters)
Product text	Description of function or characteristic of connected device.	Character string (up to 64 characters)
Serial number	Vendor specific serial number of connected device.	Character string (up to 16 characters)
Hardware revision	Revision of hardware of connected device in a vendor specific format.	Character string (up to 64 characters)
Firmware revision	Revision of firmware in connected device in a vendor specific format.	Character string (up to 64 characters)

Table 34: Information tab, with Device information

8.3.8.2 Port status

- Select the wireless IO-Link port in the left column of the netFIELD Wireless Web Server.
- Open the **Status** tab.
- ⇒ The current values for the status data of the selected wireless IO-Link port appear.

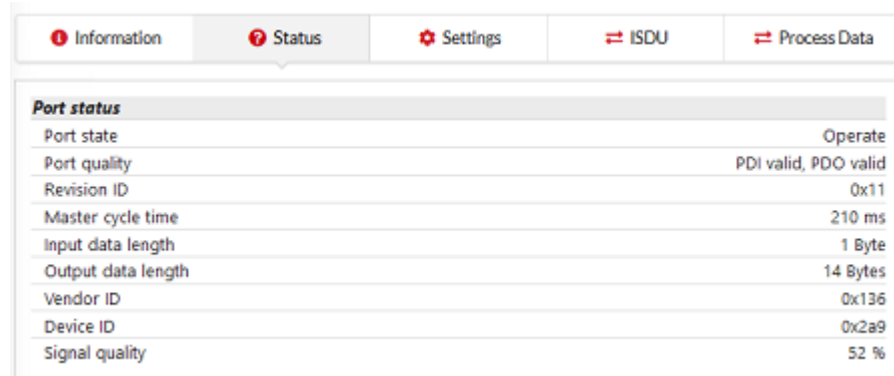


Figure 25: Status tab, Port status (example)

Parameter	Description	Value, Value range
Port state	Current port state of wireless IO-Link port Descriptions of the possible values are listed in table <i>Port state, possible values</i> [▶ page 64].	Pairing success, Pairing timeout, Pairing wrong slot type, Inactive, Port ready, Communication ready, Operate, Communication lost, Revision fault, Compatibility fault, Serial number fault, Process data fault, Cycle time fault
Port quality	Status information of process data Input process data is valid, Input process data is not valid Output process data is valid, Output process data is not valid	PDI valid, PDI invalid, PDO valid, PDO invalid
Revision ID	Revision ID of the connected device This parameter is specified by the connected device. It indicates software revision running on the connected device.	0: No device connected Others: Revision ID of connected device
Master cycle time	Cycle time of communication in Operate mode The Master cycle time is a Master parameter and sets up the actual cycle time of a particular wireless IO-Link port. “Free running”: The Minimum Master cycle time is configured, based on the PD Segmentation length, Slot Type and Max Retry configurations.	“Free running”, 5 ms ... 315 ms
Input data length	Real input data length of connected device in bytes	0 ... 32
Output data length	Real output data length of connected device in bytes	0 ... 32
Vendor ID	Vendor ID of the connected IO-Link Device	0 ... 0xFFFF, Default: 0
Device ID	Device ID of the connected IO-Link Device	0 ... 0xFFFFF, Default: 0
Signal quality	Signal quality gives a relative indication on strength of radio connection between IO-Link Wireless Master device and the connected IO-Link Device. The indicated value does not change during runtime.	0% ... 100%

Table 35: Port status, overview

The Status tab with port status data provides answers to the questions:

- What is the current port state of the wireless IO-Link port?
- Is the process data valid for input or output?

Further port status values are displayed.

The following table contains all possible values for the Port state:

Value	Description
Pairing success	Device is connected to the port via radio and there is wireless communication with the connected device.
Pairing timeout	A timeout has occurred for the connection from this port to the device.
Pairing wrong slot type	A wrong slot type is used for the connection from this port to the device.
Inactive	The port is inactive.
Port ready	The port is ready.
Communication ready	The device is ready for communication.
Operate	The device is in communication.
Communication lost	The communication to the device is broken down.
Revision fault	An error was found during revision check.
Compatibility fault	An error was found during compatibility check.
Serial number fault	An error was found during serial number check.
Process data fault	An error was found during process data check.
Cycle time fault	The configured cycle time does not match the connected device.

Table 36: Port state, possible values

8.3.8.3 Port settings

Use the Settings tab to view and change the port settings individually.

- Select the desired wireless port (WP01, WP02, WP03, ...) in the left column of the netFIELD Wireless Web Server.
- Open the **Settings** tab with its sub tabs.
- The Port cycle sub tab appears by default.

Settings > Port cycle

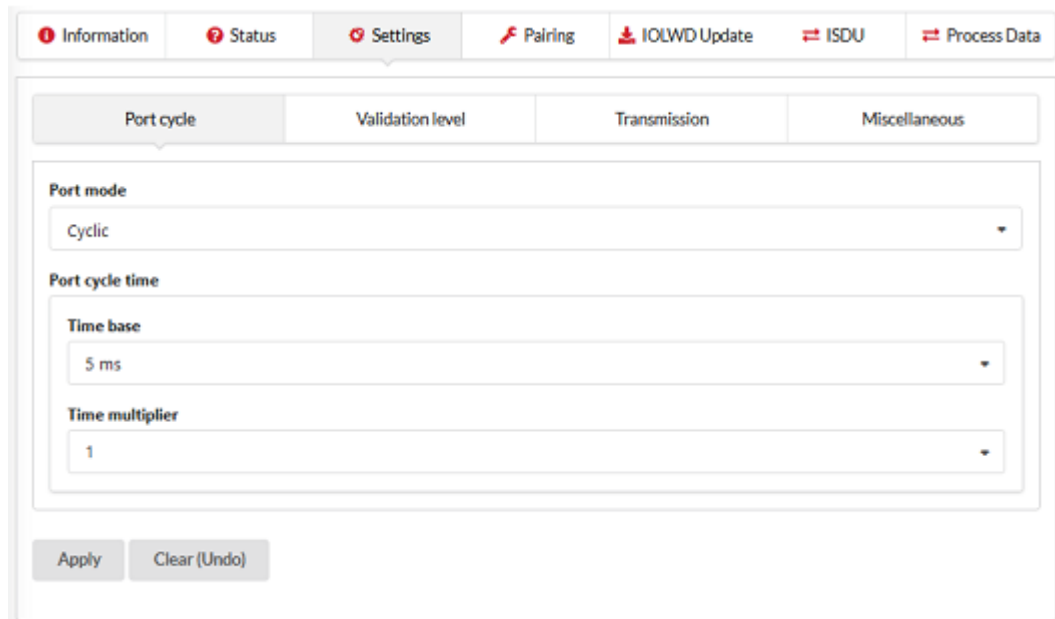


Figure 26: Settings tab, Port cycle sub tab (example)

Parameter	Description	Value / Value range
Port mode	Operating mode of IO-Link port <ul style="list-style-type: none"> • Deactivated: The port is inactive, Input and Output Process Data is 0. • Cyclic • Roaming 	Deactivated, Cyclic, Roaming, Default: Deactivated
Port cycle time	Port cycle time expected by the SMI client The expected cycle time of the port is set depending on the selected operating parameters.	See table <i>Calculation of the port cycle time of the IO-Link Wireless Master</i> [▶ page 66].
	Time base: Used time base for the calculation of the port cycle time.	Free running, 5 ms
	Time multiplier: Used factor for the calculation of the port cycle time.	0 ... 63

Table 37: Settings in port configuration for IO-Link Device, Port cycle sub tab

* Values are in hexadecimal

- Configure port operating mode **Port mode** by selecting the corresponding option.
- Configure the "Port cycle time".

The parameter "Port cycle time" sets up the cycle time of a W-Port of the W-Master. The cycle time is encoded using "Time base" (bits 6+7) and "Multiplier" (bits 0-5) values, as shown in the following table:

Range of values	Time base (Bits 7+6)	Multiplier (Bits 5-0)	Resulting Cycle time
0	00	0	free-running mode
1 ... 64	00	1 ... 63	Note: If the free-running mode is chosen with a time base of 0, the W-Master stack will automatically configure the Master cycle time to be the Minimum Master cycle time based on the PD Segmentation length, Slot Type, and Max Retry configurations.
65 ... 127	01: 5ms	1 ... 63 as multiplier	5 ... 315 ms (Time Base * Multiplier) Note: For W-Devices and W-Bridges the minimum possible transmission time is 5 ms.
128 ... 255	10 ... 11: reserved	1 ... 63	reserved, do not use

Table 38: Calculation of the port cycle time of the IO-Link Wireless Master

- Select the **Time base** and the **Time multiplier** for the “Port cycle time” calculation.
- The result is indicated as value or text in brackets, e.g. Port cycle time (Free running).

Settings > Validation level

- Open the **Validation level** sub tab.

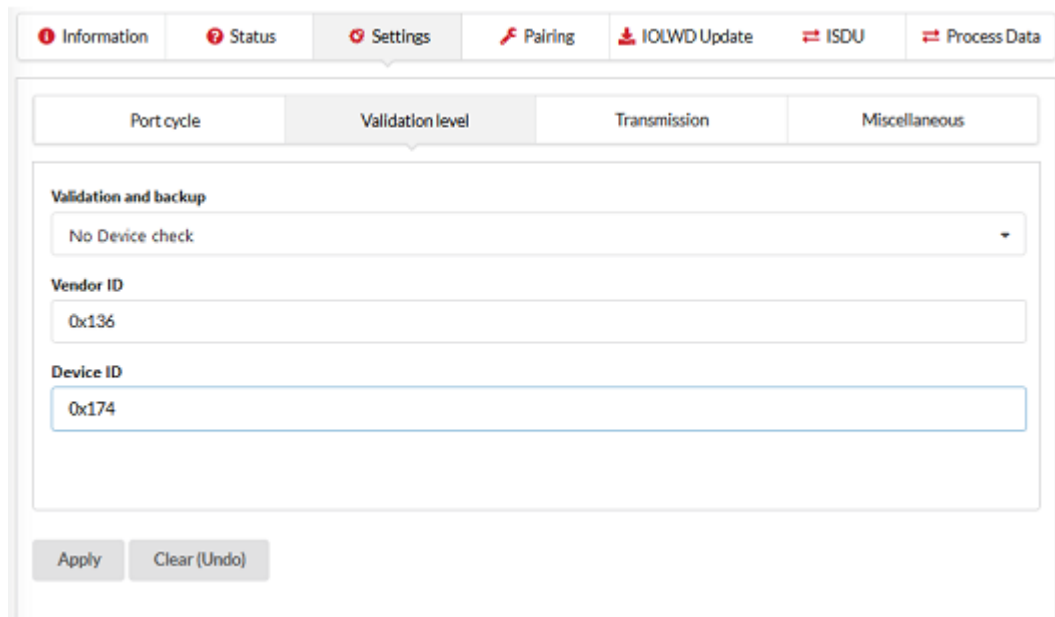


Figure 27: Settings tab, Validation level sub tab (example)

Parameter	Description	Value / Value range
Validation and backup	The table below contains descriptions for the possible values for the inspection level to be performed by the device and the Backup/Restore behavior:	Default: No device check
Vendor ID*	Expected Vendor ID of connected device This information is required to check the device for type compatibility.	0 ... 0xFFFF, Default: 0
Device ID*	Expected Device ID of connected device This information is required to check the device for type compatibility.	1 ... 0FFFFFFF, Default: 0FFFFFFF

Table 39: Settings in port configuration for IO-Link Device, Validation level sub tab

* Values are in hexadecimal

- Under **Validation and backup**, configure possible values for the inspection level to be performed by the device and the Backup/Restore behavior.

Value	Description
No device check	There is no device check for validation or backup of connected IO-Link Devices
Type compare*, no Backup/Restore	A device check is performed for validation of connected IO-Link Devices to the specified device type, without backup/restore.
Type compare*, Restore only	A device check is performed for validation or restore of connected IO-Link Devices to the specified device type, without backup. <i>Setting is not supported / reserved for future use.</i>
Type compare*, Backup and Restore	A device check is performed for validation or backup/restore of connected IO-Link Devices to the specified device type. <i>Setting is not supported / reserved for future use.</i>

*Type compare means compare DeviceID and VendorID from the configuration object with the real device values.

Table 40: Validation and backup, possible values

- If necessary, set the expected port parameters Vendor ID and Device ID.

Settings > Transmission

- Open the **Transmission** sub tab.

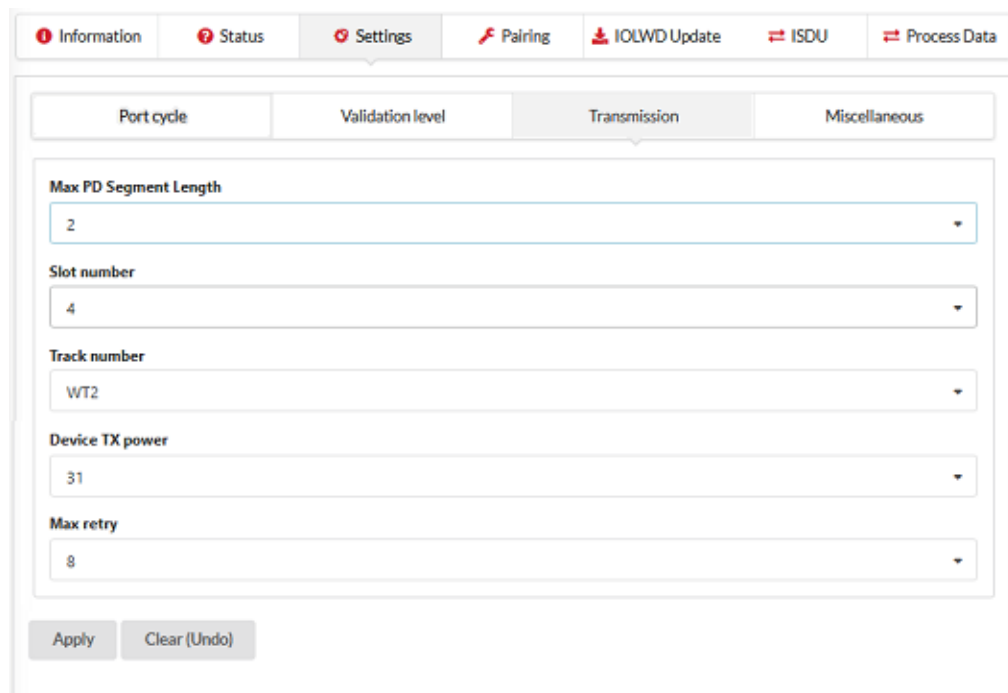


Figure 28: Settings tab, Transmission sub tab (example)

Parameter	Description	Value / Value range
Max PD Segment Length	This parameter contains the maximum segment length of the PDOOut data to the message handler to distribute PDOOut data within multiple wireless cycles. The maximum value depends by the actual transmission capacity of the used IO-Link Device.	1 ... 32 Byte, Default: 2
Slot number	Wireless slot number to be used for the port	0 ... 7, Default: 0
Track number	Wireless track number to be used for the port	0, 1, 2, Default: 0
Device TX power	This parameter contains the transmit power level of the W-Device	1 ... 31, Default: 31
Max retry	Maximum number of retries for a transmission in OPERATE mode "Unknown" is indicated if there is no value available.	2 ... 31, Default: 8

Table 41: Settings in port configuration for IO-Link Device, Transmission sub tab

* Values are in hexadecimal

- If necessary, set the expected port parameters Max PD Segment Length, Slot number, Track number, Device TX power or Max retry.

Settings > Miscellaneous

- Open the **Miscellaneous** sub tab.

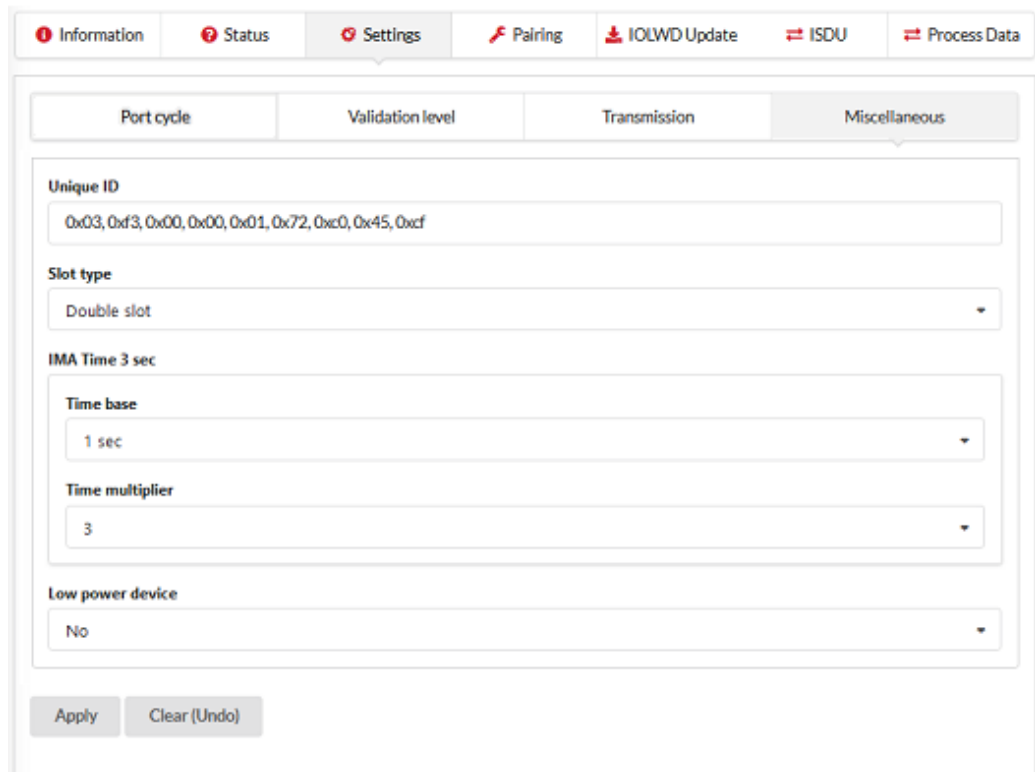


Figure 29: Settings tab, Miscellaneous sub tab (example)

Parameter	Description	Value / Value range
Unique ID*	Unique ID of the IO-Link Device (9 Bytes) Use the Unique ID (UUID) from the scan result.	0 ... 0xFF, Default: 0
Slot type	Slot type of the found device Use the slot type from the scan result. Note: For a device featuring “Double slot” an even number must be assigned as value for the slot.	Single slot, Double slot, Default: Single slot
IMA Time 3 sec (calculated time)	Requested I-Am-Alive time for the OPERATE mode The I-Am-Alive time is calculated by multiplying the “time base” with the “time multiplier”.	1.664 ... 10 min (for higher values an error message appears), Default: 3 sec
	Time base: Used time base for the calculation of the I-Am-Alive time.	1.664 ms, 5 ms, 1 sec, 1 min
	Time multiplier: Used factor for the calculation of the I-Am-Alive time.	1 ... 255
Low power device	Is the connected IO-Link Device a low power device or not	No, Yes, Default: No

Table 42: Settings in port configuration for IO-Link Device, Miscellaneous sub tab


* Values are in hexadecimal

- To configure the Unique ID, use the Unique ID (UUID) from the scan result.
- If necessary, set the expected port parameters Slot type or Low power device.
- Configure the “IMA Time” (I-Am-Alive time).

The parameter "I-Am-Alive time" serves for W-Master and W-Device communication control if no other messages are transmitted. The W-Device has to send an "I-Am-Alive" messages to the W-Master before timeout, otherwise an error is reported, e.g. to start failsafe functionalities in the application.

The "I-Am-Alive time" is calculated by multiplying the "Time base" with the "Multiplier".

The Wireless Master verifies the calculated "I-Am-Alive time" with the following limits:

- "Minimum I-Am-Alive time" = W-Sub-cycle duration [ms] * (MaxRetry + 1)
If the calculated "I-Am-Alive time" is less than the "Minimum I-Am-Alive time", the Wireless Master uses the "Minimum I-Am-Alive time" as resulting "I-Am-Alive time".
 - Maximum I-Am-Alive time = 10 minutes
If the calculated "I-Am-Alive time" is greater than the "Maximum I-Am-Alive time", the error message `Port configuration failed HTTP Error 500: NetProxy returned with an error: C0000124` appears.
- Select the **Time base** and the **Time multiplier** for the "IMA Time" calculation in order to avoid exceeding the maximum allowed value.
- ↻ The result is indicated as value in brackets.
- Click **Apply**.
- ⇒ Your changes now take effect. The message `Port configured successfully` appears and a green hook  appears for the selected port in the left column of the netFIELD Wireless Web Server, indicating that a connection from an IO-Link Device to this wireless IO-Link port has been established, and that the IO-Link Device is in "operate" state.

**Note:**

The green hook icon disappears if the IO-Link Wireless Master changes to an error state but the device connection is still established and in "connected" state (shown on top left corner of the netFIELD Wireless Web Server). If the device connection drops and the "disconnected" state is shown, the green hook icon is still visible and reflects the latest status obtained from the device.

8.3.8.4 Pairing

On the Pairing tab you can pair a wireless device (or a wireless bridge) that has not yet been scanned, i.e. whose unique ID is not yet known. Via the Pairing by button option unknown devices can be paired and replace the Unique ID.

Set port mode

- Select the wireless IO-Link port in the left column of the netFIELD Wireless Web Server.
- Open the **Settings** tab.
- Set the Port mode, as described in section *Port settings* [▶ page 65] or in section *Port settings for commissioning* [▶ page 85].

Switch to Pairing tab

- Open the **Pairing** tab.
- ⇒ The Pairing tab appears as follows:

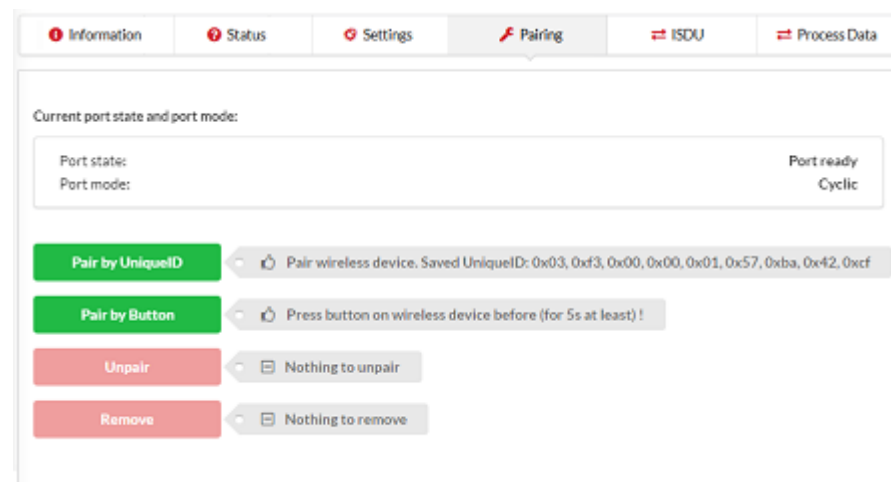


Figure 30: Pairing tab after port mode was set correctly

Pairing by button

- Now, press the button on the wireless device or on the bridge.
- Keep the button pressed at least for 5 seconds.
- Then, click **Pair by Button**.
- Keep the button (on the device or bridge) pressed at least for another three seconds.
- Wait for the message `Pairing successfully finished!`

Pairing by Unique ID

- Make sure that you use the correct unique ID for the respective device. To do so, use the wireless device with the UniqueID that has been recognized with the last Scan or Pairing by button procedure. You also can add the correct UniqueID manually in the Settings > Miscellaneous tab (see section *Port settings* [▶ page 65]).
- Then, click **Pair by UniqueID**.

Pairing successfully finished

- Wait for the message `Pairing successfully finished!`
- ⇒ The message `Pairing successfully finished!` appears:

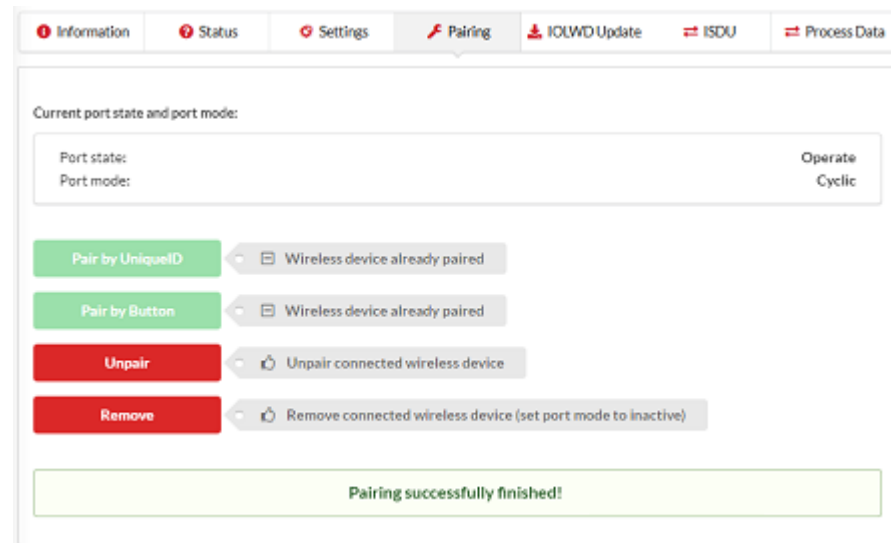


Figure 31: Pairing successfully finished

Unpair device

- Click **UNPAIR**.
- ⇒ The connected wireless device is unpaired.

Remove device

- Click **Remove**.
- ⇒ The connected wireless device is removed.
- ⇒ Port mode is set to `inactive`.

8.3.8.5 IOLWD Update

The IOLWD update is a firmware update of an IO-Link wireless devices or of a wireless bridge. I. e., there are 16 different target devices for the IOLWD update. The IOLWD update runs via the wireless connection of the respective port. This means, the IOLWD Update tab is only displayed if the wireless connection of the respective port is established.

Requirements and preparation:

- Changes to settings require operator or admin rights.
- Contact to Hilscher to get the IOLWD update zip file for your device.

NOTICE

Bring the system into safe operating condition

Never carry out a firmware update during operation of the system in which the wireless connected device is installed. Before each firmware update, the system must first be shut down properly, or must be brought into a safe operating state.

NOTICE

Invalid firmware

Loading invalid firmware files could render your device unusable. Only load firmware files to the device that are valid for this device. Otherwise, you might be forced to send in your device for repair.



Important:

If you update the firmware of the wireless connected device and you did not make a backup of the firmware and configuration data, you cannot restore the state of your device prior to the update, including the previously used firmware.

IOLWD Update

Proceed as follows:

- Select the wireless IO-Link port in the left column of the netFIELD Wireless Web Server.
- Open the **IOLWD Update** tab.
- Click **Choose File**.
- ⇒ A file selection dialog appears.
- Select the firmware update file in this dialog.
- Click **Update**.
- ⇒ The firmware update is performed. This takes a short while.

Information Status Settings Pairing IOLWD Update ISDU Process Data

IOLWD-Firmware updated successfully

File

Choose File BridgeUpdate_CT-11.04.1032.zip

Update

Details of current active firmware

Webpage version	V1.1.0.3
IO-Link Wireless Master main revision	40.04.0102
Firmware version of connected wireless device	11.04.1032
Bootloader version of connected wireless device	11.00.1000

Note

Do not switch off device while updating firmware !

Figure 32: IOLWD update tab, IOLWD firmware successfully updated (example)

8.3.8.6 Device ISDU

The ISDU tab allows read and write access to the IO-Link Device connected to a wireless IO-Link port by means of `Index` and `Subindex`. The ISDU message format is used for this.

Figure 33: Display of the On Request Data, read/write IO-Link Device parameters



For the meaning of the `Index` and `Subindex` values, refer to the documentation of the connected IO-Link Device. For a description of the ISDU message format, refer to the IO-Link specification.

Required rights

Changes to settings require operator or admin rights. If these are not available, the ISDU tab is grayed out and the displayed values cannot be edited.

Access to IO-Link Device

To access the data of an IO-Link Device connected to the selected wireless IO-Link port via `Index` and `Subindex` (ISDU message format):

- Select the wireless IO-Link port to which the IO-Link Device is connected in the menu on the left.
- Open the **ISDU** tab.
- The ISDU tab is displayed.

Read access to IO-Link Device

To read data from the connected IO-Link Device, proceed as follows:

- Enter the `Index` for ISDU access as a hexadecimal value in the **Index** entry field.
- Enter the `Subindex` for ISDU access as a hexadecimal value in the **Subindex** entry field. The default value here is `00`.
- ↻ In case of input errors, an error message appears.
- Click on **Read**.
- ↻ The read access is executed. An entry with a time stamp is written to the history at the bottom of the ISDU tab.

If the execution was successful, the text `Read ok:` and the result is displayed in the history. The entries in the history then have the following structure:

```
Time - Index:Subindex - Read ok: <Result>
```

If the execution was not successful, an error message with error codes of the IO-Link Wireless Master and IO-Link Device is displayed in the history.

In this case, the entries in the history have the following structure:

```
Time - Index:Subindex - Read failed:  
IOLMErrorCode(<error code of the IO-Link master>):  
IOLDErrorCode(<error code of the IO-Link Device>)
```



Information on the meaning of the error codes of the IO-Link master (IOLMErrorCode) and device (IOLDErrorCode) can be found in the IO-Link specification.

The following applies in both cases:

- The `Time` is displayed in the format `HH:MM:SS`
- `Index` and `Subindex` are displayed in hexadecimal format.

Write access to IO-Link Device

To write data to the connected IO-Link Device, proceed as follows:

- Enter the `Index` of the connected IO-Link Device that you want to access as a hexadecimal value in the **Index** entry field.
- Enter the `Subindex` of the connected IO-Link Device that you want to access as a hexadecimal value in the **Subindex** entry field. The default value here is `00`.
- ↻ In case of input errors, an error message appears.
- Enter the data to be written (in hexadecimal, without spaces, e.g., `0102030405`) in the **Write data** entry field.
- Click on **Write**.
- ↻ The write access is performed.

If the execution was successful, the text `Write ok:` and the result is displayed in the history. The entries in the history then have the following structure:

```
Time - Index:Subindex - Write ok: <Result>
```

If the execution was not successful, an error message with error codes of the IO-Link Wireless Master and IO-Link Device is displayed in the history. The entries in the history then have the following structure:

```
Time - Index:Subindex - Write failed:
IOLMErrorCode(<error code of the IO-Link master>):
IOLDErrorCode(<error code of the IO-Link Device>)
```

Delete the history of read and write accesses

To clear the logged history of read and write accesses:

- Click **Clear history**.
- ⇒ The history of read and write accesses is deleted.

8.3.8.7 Master ISDU

The ISDU tab with the option Tigo Master Parameters enabled allows read and write access to the IO-Link Wireless Master device, by means of `PortId` and `ArgBlockId`. The ISDU message format is used for this.

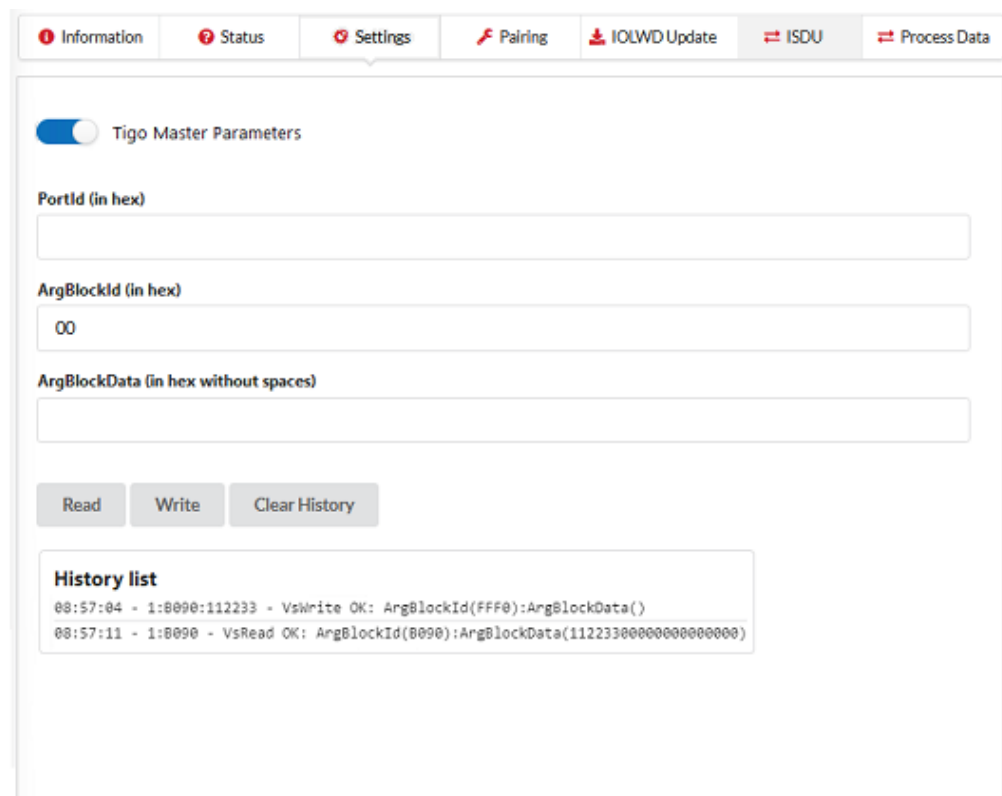


Figure 34: Display of the ISDU, read/write IO-Link Wireless Master parameters

Required rights

Changes to settings require operator or admin rights. If these are not available, the ISDU tab is grayed out and the displayed values cannot be edited.

Access to IO-Link Wireless Master device

To access the data of the IO-Link Wireless Master via PortId and ArgBlockId (ISDU message format):

- In the menu on the left, select the wireless IO-Link port of the IO-Link Wireless Master to which an IO-Link Device is connected.
- Open the **ISDU** tab.
- The ISDU tab is displayed.
- Enable **Tigo Master Parameters**.
- The Tigo Master Parameters tab variant is displayed.

Read access to IO-Link Wireless Master device

To read data from the IO-Link Wireless Master device, proceed as follows:

- Enter the `PortId` of the IO-Link Wireless Master device that you want to access as a hexadecimal value in the **PortId** entry field.
- Enter the `ArgBlockId` of the IO-Link Wireless Master that you want to access as a hexadecimal value in the **ArgBlockId** entry field. The default value here is `00`.
- In case of input errors, an error message appears.
- Click on **Read**.
- The read access is executed. An entry with a time stamp is written to the history at the bottom of the ISDU tab.

If the execution was successful, the text `Read ok:` and the result is displayed in the history. The entries in the history then have the following structure:

```
Time - PortId:ArgBlockId - Read ok: <Result>
```

If the execution was not successful, an error message with error codes of the IO-Link Wireless Master and IO-Link Device is displayed in the history.

In this case, the entries in the history have the following structure:

```
Time - PortId:ArgBlockId - Read failed:  
IOLMErrorCode(<error code of the IO-Link master>):  
IOLDErrorCode(<error code of the IO-Link Device>)
```



Information on the meaning of the error codes of the IO-Link master (IOLMErrorCode) and device (IOLDErrorCode) can be found in the IO-Link specification.

The following applies in both cases:

- The `Time` is displayed in the format `HH:MM:SS`
- `PortId` and `ArgBlockId` are displayed in hexadecimal format.

Write access to IO-Link Wireless Master device

To write data to the IO-Link Wireless Master device, proceed as follows:

- Enter the `PortId` of the IO-Link Wireless Master that you want to access as a hexadecimal value in the **PortId** entry field.
- Enter the `ArgBlockId` of the connected IO-Link Device that you want to access as a hexadecimal value in the **ArgBlockId** entry field. The default value here is `00`.
- ⇒ In case of input errors, an error message appears.
- Enter the data to be written (in hexadecimal, without spaces, e.g., `0102030405`) in the **ArgBlockData** entry field.

Write example: `PortId = 01`, `ArgBlockId = B090`, `ArgBlockData = 01020304`

- Click on **Write**.
- ⇒ The write access is performed.

If the execution was successful, the text `Write ok:` and the result is displayed in the history. The entries in the history then have the following structure:

```
Time - PortId:ArgBlockId - Write ok: <Result>
```

If the execution was not successful, an error message with error codes of the IO-Link Wireless Master and IO-Link Device is displayed in the history. The entries in the history then have the following structure:

```
Time - PortId:ArgBlockId:Data - Write failed:  
IOLMErrorCode(<error code of the IO-Link master>):  
IOLDErrorCode(<error code of the IO-Link Device>)
```

Delete the history of read and write accesses

To clear the logged history of read and write accesses:

- Click **Clear history**.
- ⇒ The history of read and write accesses is deleted.

8.3.8.8 Process data

You can display the process data belonging to a specific wireless IO-Link port using the Process data tab.

To display the process data for a port:

- Select the wireless IO-Link port in the left column of the netFIELD Wireless Web Server.
- Open the **Process data** tab.
- ⇒ The current values of process data configured for input or output are displayed in hexadecimal format under input or output.

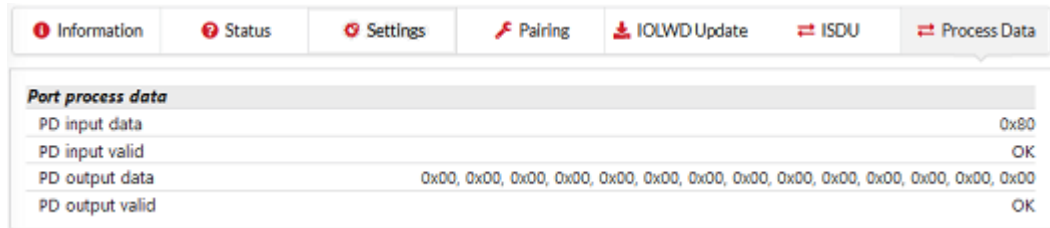


Figure 35: Display of the Process Data

The Process Data tab shows the process data input and output values from and to a connected IO-Link Device:

Parameter	Description
PD input data	“Process Data” input data to the connected IO-Link Devices
PD input valid	Binary coded Port Qualifier for Input
PD output data	“Process Data” output data from the connected IO-Link Devices
PD output valid	Validation information for process data output. If Output Enable flag is set, data will be valid.

Table 43: Process data, parameters

If no process data has been configured for a data direction (input or output), the corresponding field remains empty.

9 Commissioning

For commissioning the NFD-3090-PNS-IOLMW device using the netFIELD Wireless Web Server proceed as described in the sections hereafter.

9.1 Setting the IP address

The device needs an IP address so that it can be addressed via Ethernet. The device has no IP address when delivered. There are several ways of setting the required IP address.

- The PROFINET IO-Controller sets the IP address while PROFINET is booting.
- With the PROFINET-Engineering-Tool of the IO-Controller, you can set the IP address permanently or temporarily. For this purpose, read the documentation of the PROFINET-Engineering-Tool.
- For setting the IP address, you can use the **Ethernet Device Configuration** software; see description below.

Setting the IP address with the "Ethernet Device Configuration" software

- Start the "Ethernet Device Configuration" software.
- Check whether the checkmark for option **DCP** is set in the menu **Options > Protocols**. If the checkmark for option **DCP** is not set, set it.
- Click **Search devices**.
- The software lists all devices found in the local network. Under IP address, the window displays 0.0.0.0 (i.e. no IP address set) or the IP address set in the device.


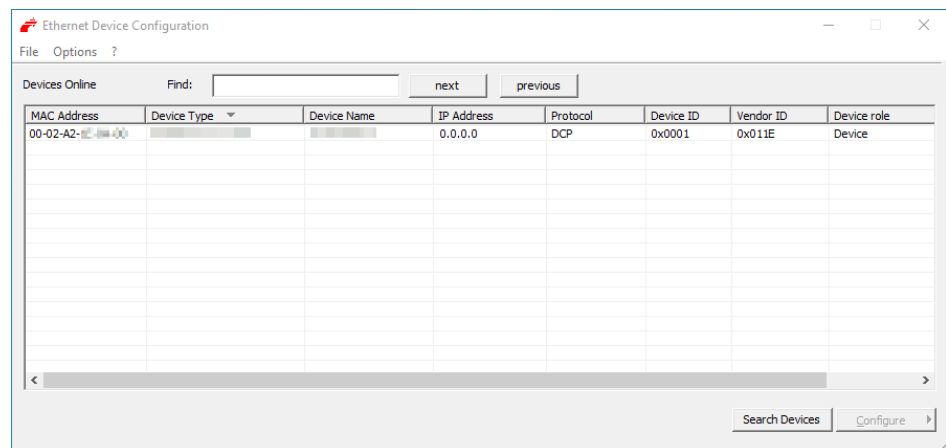


Figure 36: List of the devices found in the local network

- Use the MAC address or the device type, e.g., to identify the device.
- Use the mouse pointer to select the corresponding device in the list of the devices found.
- Click **Configure > Set IP Address**.
- The dialog for setting the IP address will be displayed:

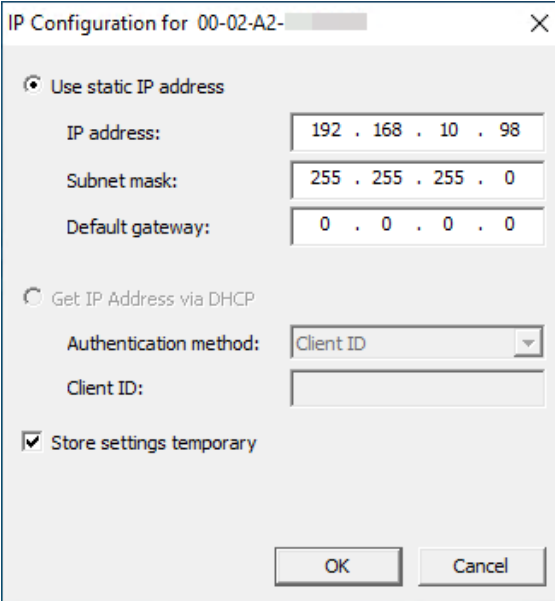

The image shows a dialog box titled "IP Configuration for 00-02-A2-...". It has two radio button options: "Use static IP address" (selected) and "Get IP Address via DHCP". Under "Use static IP address", there are three text input fields: "IP address:" containing "192 . 168 . 10 . 98", "Subnet mask:" containing "255 . 255 . 255 . 0", and "Default gateway:" containing "0 . 0 . 0 . 0". Under "Get IP Address via DHCP", there is a dropdown menu for "Authentication method:" set to "Client ID" and an empty text input field for "Client ID:". At the bottom, there is a checked checkbox for "Store settings temporary" and two buttons: "OK" and "Cancel".

Figure 37: IP configuration dialog

- Select the option **Use static IP Address**.
- Enter IP address and subnet mask. The entry of the IP address for the standard gateway is optional.
- Use **Store settings temporary** to select whether the IP address is to be set permanently or temporarily.
- Click **OK**.
- ⇒ The device is now accessible via its IP address.

9.2 Configuration with netFIELD Wireless Web Server

Requirements

To allow the commissioning or configuration using the netFIELD Wireless Web Server, the following requirements must be fulfilled:

- The device must be mounted, wired, and supplied with power.
- A browser is required, to connect to the netFIELD Wireless Web Server.
- A login as admin.

9.2.1 Configuring the IO-Link Wireless Master

- Select **IO-Link Wireless Master** in the left column of the netFIELD Wireless Web Server.
- On the **Channel selection** tab select the WLAN channels required (for example, WLAN channels 01 to 04).
- Then open the **Configuration** tab.

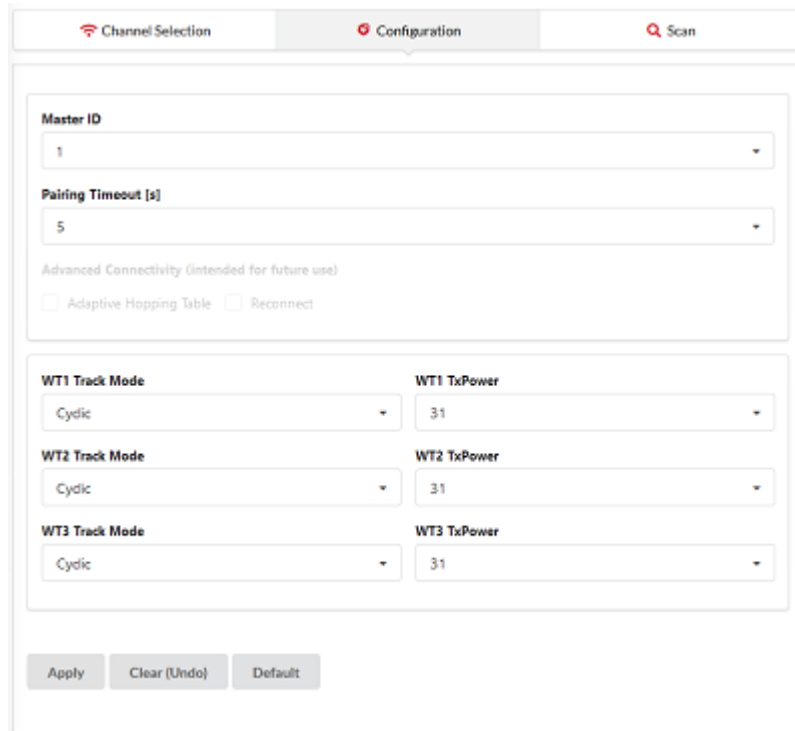


Figure 38: IO-Link Wireless Master > Configuration tab

- Use the following IO-Link Wireless Master settings as possible values for commissioning. They will allow you to put the NFD-3090-PNS-IOLM \W device into operation.

Parameter	Possible value for commissioning	Note
Master ID	1	Enter the Master ID this way: "1"
Pairing Timeout	5	seconds
Advanced Connectivity (intended for future use)	-	
WT1 Track Mode	Cyclic	
WT2 Track Mode	Cyclic	
WT3 Track Mode	Cyclic	
WT1 TXPower	31	"31" = max. transmission power
WT2 TXPower	31	
WT3 TXPower	31	

Table 44: Configuration, possible values for IO-Link Wireless Master (example)



Important:

For proper device operation all three tracks must be activated.

- Click **Apply**.
- The request appears `Applying configuration will restart the device. Are you sure?`.

- Click **Yes**.
- Wait until reset operation is finished and result is shown:
 - The message `Master configured successfully` appears.
 - The set IO-Link Wireless Master settings are used now.

Scan

- Select **IO-Link Wireless Master** in the left column of the netFIELD Wireless Web Server.
- Open the **Scan** tab.

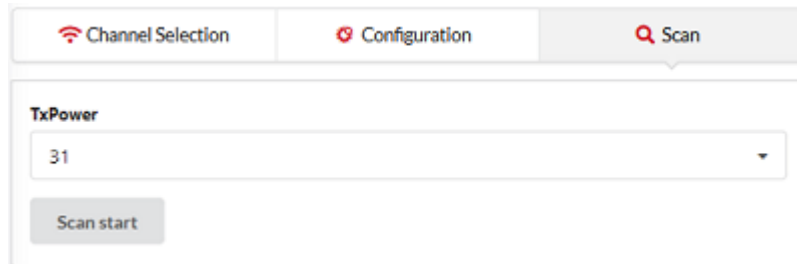


Figure 39: Scan tab

- Enter **TXPower** as decimal value: 31 (= maximum transmission power of the device)
- Click **Scan start**.
- The scan result is displayed. The connected device is found.
- The following scan result values are displayed:

Parameter	Scan result (example)	Note
Index	0	
Unique ID	0x03,0xf3,0x00,0x00,0x01,0x72,0xc0,0x45,0xcf	Copy/note the unique ID. This value is required for port configuration.
Slot Type	Double slot	
Revision ID	0x11	
Port	“Select port”	Note: For a device featuring “Double slot” an even port must be assigned.
Pairing	Pair (green)	

Table 45: Scan result

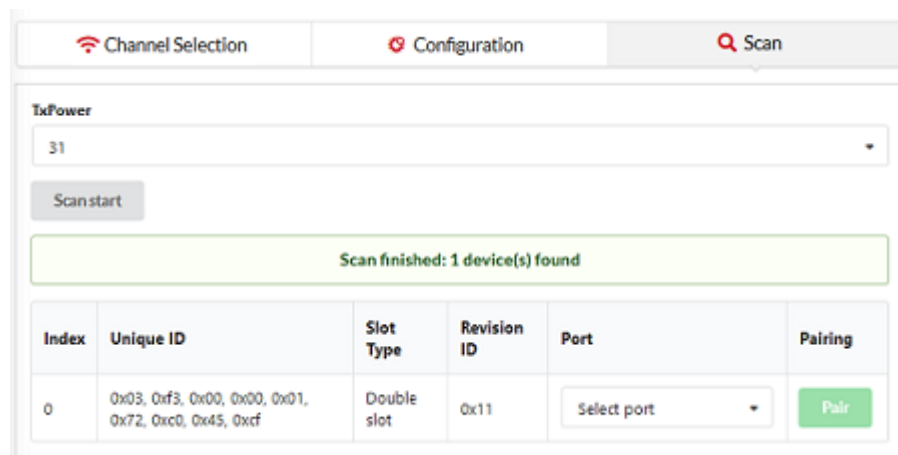


Figure 40: Scan tab with result

9.2.2 Port settings for commissioning

- Select the desired wireless port (WP01, WP02, WP03, ...) in the left column of the netFIELD Wireless Web Server.
- Open the **Settings** tab with its sub tabs.
- The Port cycle sub tab appears by default.



Note:

The values for the port settings given below are example values for commissioning of your NFD-3090-PNS-IOLMW device.

“Port cycle” sub tab

The Port cycle sub tab includes the parameters Port mode and Port cycle time.

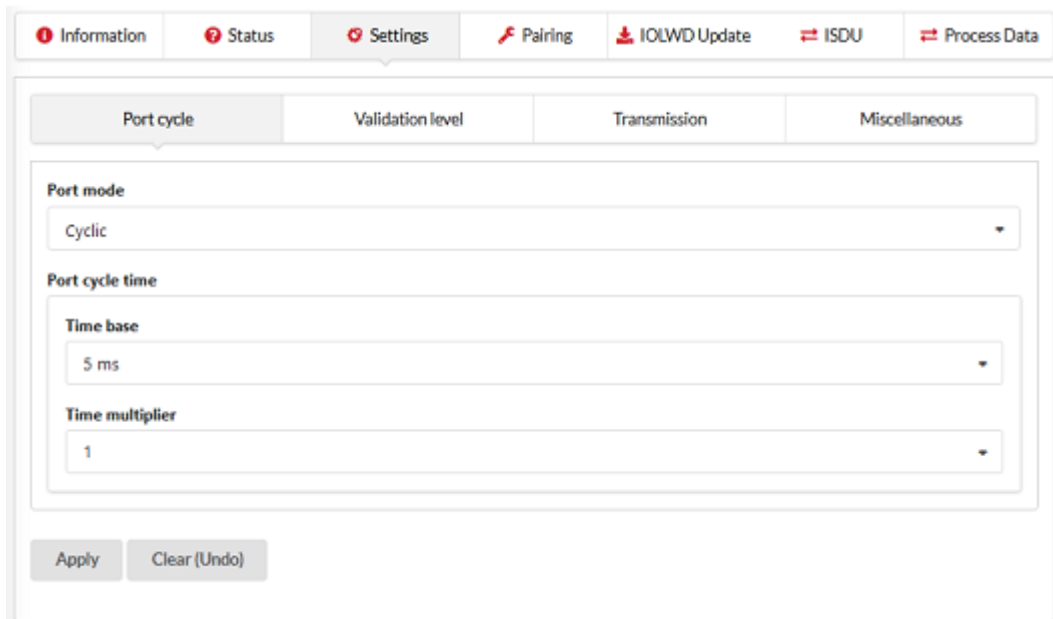


Figure 41: Settings tab > Port cycle sub tab (example)

Parameter	Example value for commissioning		Note
Port mode	Cyclic		
Port cycle time	Time base	Time multiplier	
Example 1	Free running	(any selectable value)	„Free running“
Example 2	5 ms	1	Port cycle time = 5 ms

Table 46: Settings > Port cycle (example values)

“Validation level” sub tab

- Click **Validation level**.
- The Validation level sub tab with the parameters Validation and backup, Vendor ID and Device ID appears.

Figure 42: Settings tab > Validation level sub tab (example)

Parameter	Example value for commissioning	Note
Validation and backup	Default: No device check	
Vendor ID	0x0136	Example device
Device ID	0x0174	Example device

Table 47: Settings > Validation level (example values)

- Enter the **Vendor ID** and **Device ID** of the wireless connected IO-Link Device.

The Vendor ID and Device ID can be taken from the IODD or the device description of the manufacturer.

“Transmission” sub tab

- Click **Transmission**.
- The Transmission sub tab with the parameters Max PD Segment Length, Slot number, Track number, Device TX power and Max retry appears.

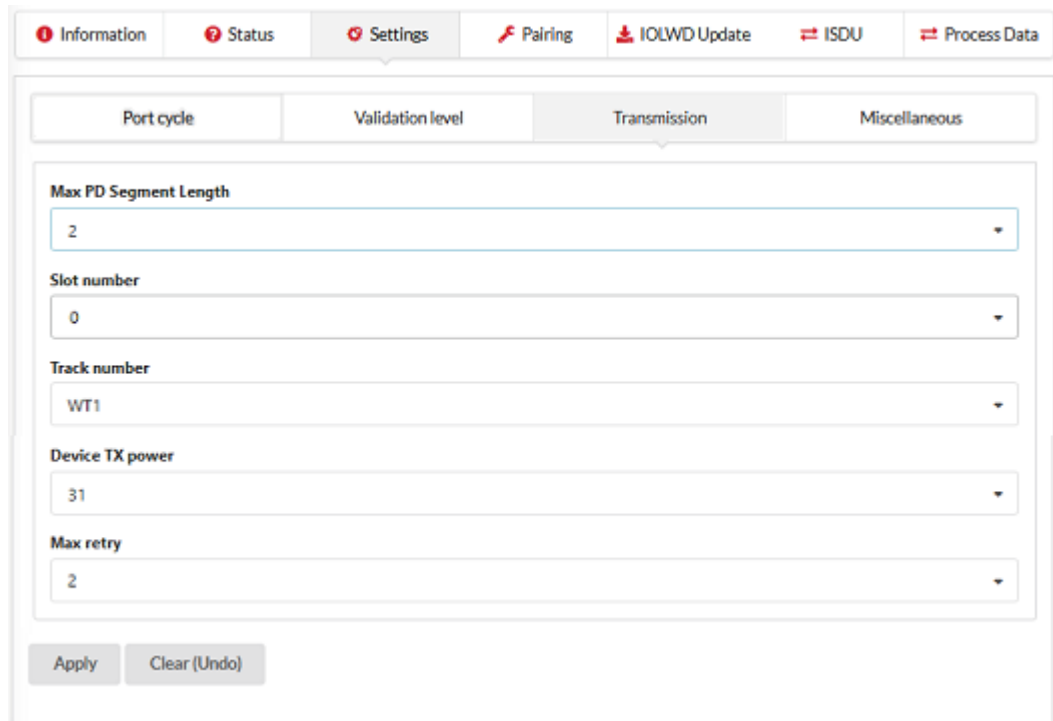


Figure 43: Settings tab > Transmission sub tab (example)

Parameter	Example value for commissioning	Note
Maximum PD Segment Length	2	Max. process data transmissible via IO-Link, as in the example device used If this maximum value of the used device is not available, enter “32”.
Slot number	0	
Track number	0 (=WT1)	
Device TX power	31	31 = max. transmission power
Maximum retry	2	Example value

Table 48: Settings > Transmission (example values)

“Miscellaneous” sub tab

- Click **Miscellaneous**.
- The Transmission sub tab with the parameters Unique I, Slot type, IMA Time 3 sec and Low power device appears.

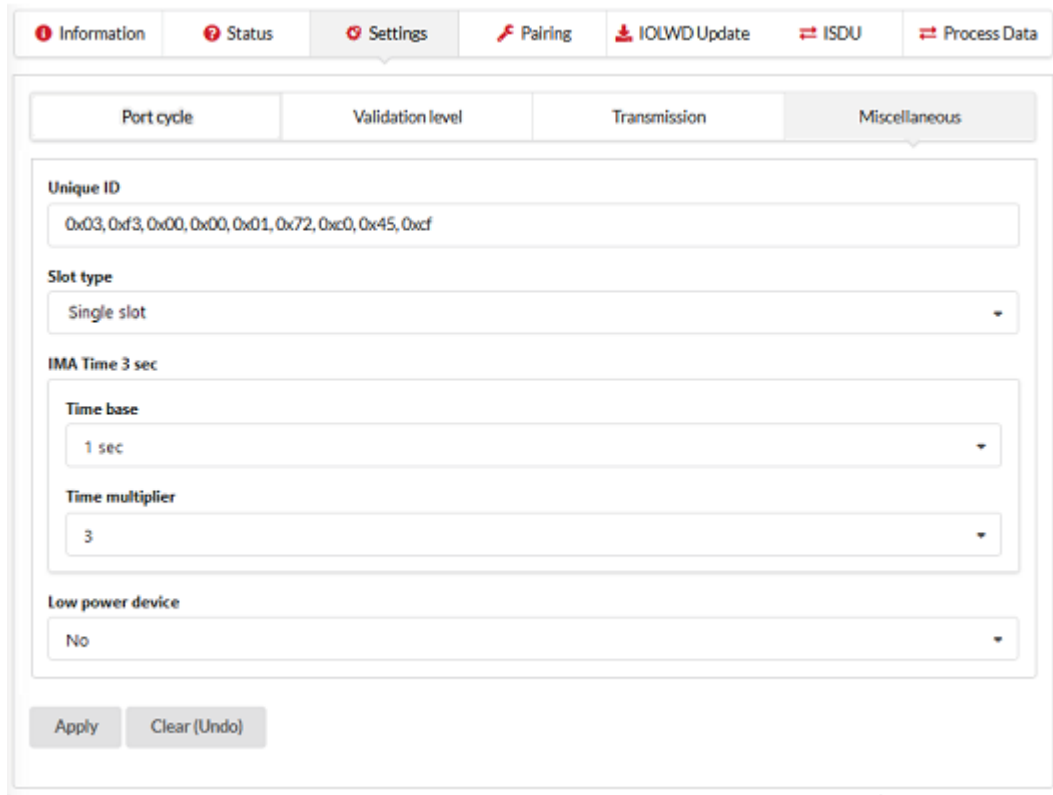


Figure 44: Settings tab > Miscellaneous sub tab (example)

Parameter	Example value for commissioning	Note
Unique ID	0x03,0xf3,0x00,0x00,0x01,0x72,0xc0,0x45,0xcf	The Unique ID consists of 9 numbers. Use the Unique ID from the scan result.
Slot type	Single slot	Use the slot type from the scan result. Note: For a device featuring “Double slot” an even number must be assigned as value for the slot.
IMA Time 3 sec	Time base: 1 sec Time multiplier: 3	Default value is used
Low power device	No	

Table 49: Settings > Miscellaneous (example values)

- Enter the Unique ID numbers without space. Use the Unique ID from the scan result (see *Configuring the IO-Link Wireless Master* [▶ page 83]).
- Click **Apply**.

A description of the parameters on the sub tabs shown can be found under *Port settings* [▶ page 65]. For details on track and port, see *Wireless* [▶ page 94]. For the corresponding process data as result from the configuration made, see *Testing* [▶ page 89].

9.3 Testing

Process data

- Select the desired wireless port (WP01, WP02, WP03, ...) in the left column of the netFIELD Wireless Web Server.
- Open the **Process Data** tab.
- The following process data are the result of the represented commissioning example with a laser distance sensor.

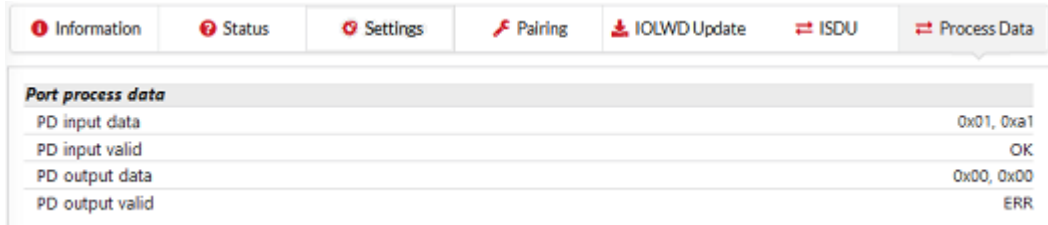


Figure 45: Tab and table “Port process data” (example PD input valid = OK)



Note:

Displayed values coming from a real sensor, can change if sensor conditions change.

Status

- Select the desired wireless port (WP01, WP02, WP03, ...) in the left column of the netFIELD Wireless Web Server.
- Open the **Status** tab.
- The following port status data are the values displayed after configuration steps for the IO-Link Wireless Master and the port configuration are completed.

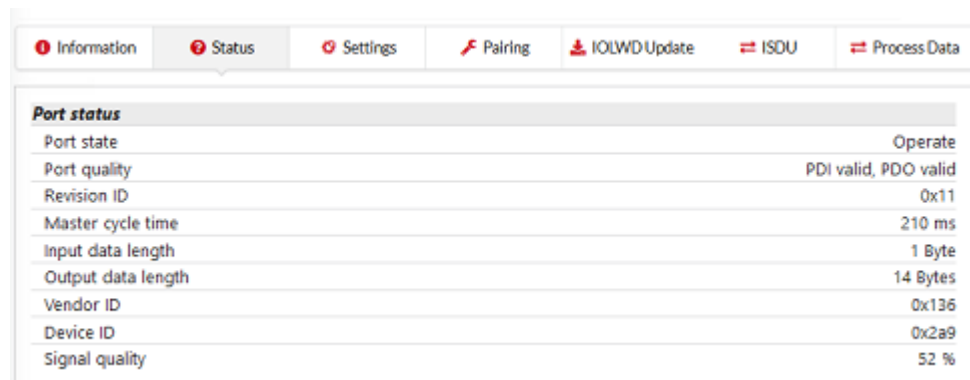


Figure 46: Status tab, Port status


The displayed values are real values from the device.

Parameter	Displayed values	Parameter	Displayed values
Port state	Operate	Output data length	0 Bytes
Port quality	PDI invalid, PDO invalid	Vendor ID	0x136
Revision ID	0x11	Device ID	0x174
Master cycle time	15 ms	Signal quality	15 %
Input data length	2 Bytes		

Table 50: Status tab, Port status, displayed values

Information

- Select the desired wireless port (WP01, WP02, WP03, ...) in the left column of the netFIELD Wireless Web Server.
- Open the **Information** tab.
- ⇒ The following device information data are example values displayed after configuration steps for the IO-Link Wireless Master and the port configuration are completed.

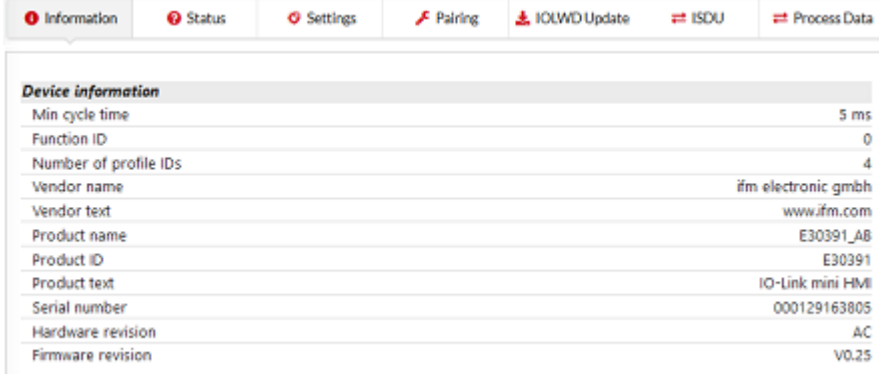

The screenshot shows the 'Information' tab of the netFIELD Wireless Web Server. The tab is selected, and the 'Device information' section is expanded. The table below lists various device parameters and their values.

Device information	
Min cycle time	5 ms
Function ID	0
Number of profile IDs	4
Vendor name	ifm electronic gmbh
Vendor text	www.ifm.com
Product name	E30391_AB
Product ID	E30391
Product text	IO-Link mini HMI
Serial number	000129163805
Hardware revision	AC
Firmware revision	V0.25

Figure 47: Information tab, Device information

9.4 Master reset

To perform a reset of the IO-Link Wireless Master NFD-3090-PNS-IOLMW device, proceed as follows.

1. Safety

NOTICE

Bring the system into safe operating condition

Never carry out a firmware update during operation of the system in which the NFD-3090-PNS-IOLMW device is installed. Before each firmware update, the system must first be shut down properly, or must be brought into a safe operating state.

NOTICE

Invalid firmware

Loading invalid firmware files could render your device unusable. Only load firmware files to the device that are valid for this device. Otherwise, you might be forced to send in your device for repair.



Important:

If you update the firmware of the NFD-3090-PNS-IOLMW device and you did not make a backup of the firmware and configuration data, you cannot restore the state of your device prior to the update, including the previously used firmware.

2. Firmware update

- Select **Settings** in the left column of the netFIELD Wireless Web Server.
- Open the **Firmware update** tab.
- First click **Delete all settings**.
- Then click **Reset**.
- ↻ The device reset is complete. The message `Device reset successfully appears`.

For detailed descriptions on the firmware update page, see *Firmware update* [▶ page 44].

9.5 Indexed Service Data Units

Read/write IO-Link Device parameters

The function of the ISDU tab is to read from or write to one IO-Link object of the connected IO-Link Device.

- Select **Master** in the left column of the netFIELD Wireless Web Server.
- Open the **ISDU** tab.
- ⇒ For example, you can read an IO-Link object from an IO-Link Device, e. g. to know the device manufacturer.

Figure 48: ISDU tab, read/write IO-Link Device parameters

- To read data from the IO-Link Device click **Read**.
- ⇒ The time stamp and the corresponding data are displayed in ASCII format below.

For detailed descriptions on the ISDU tab, see *Device ISDU* [▶ page 74].

Read/write IO-Link Wireless Master parameters

The function of the ISDU tab with option Tigo Master Parameters enabled is to read from or write to one IO-Link object from the IO-Link Wireless Master.

- Select **Master** in the left column of the netFIELD Wireless Web Server.
- Open the **ISDU** tab.
- Enable **Tigo Master Parameters**.

Example

Write example

- PortId: 1
- ArgBlockId: B090
- ArgBlockData: 112233

Read example

- PortId: 1
- ArgBlockId: B090

The screenshot shows the ISDU tab interface. At the top, there are navigation tabs: Information, Status, Settings, Pairing, IOLWD Update, ISDU (selected), and Process Data. Below the tabs, the 'Tigo Master Parameters' section is active, indicated by a blue toggle switch. It contains three input fields: 'PortId (in hex)' (empty), 'ArgBlockId (in hex)' (containing '00'), and 'ArgBlockData (in hex without spaces)' (empty). Below these fields are three buttons: 'Read', 'Write', and 'Clear History'. At the bottom, a 'History list' box displays two log entries in ASCII format: '08:57:04 - 1:8090:112233 - VsWrite OK: ArgBlockId(FFF0):ArgBlockData()' and '08:57:11 - 1:8090 - VsRead OK: ArgBlockId(B090):ArgBlockData(11223300000000000000)'.

Figure 49: ISDU tab, read/write IO-Link Wireless Master parameters

- To read data from the IO-Link Wireless Master device click **Read**.
- ⇒ The time stamp and the corresponding data are displayed in ASCII format below.

For detailed descriptions on the ISDU tab with option Tigo Master Parameters enabled, see *Master ISDU* [▶ page 76].

9.6 Wireless

For each track up to 8 IO-Link Devices can be connected via a wireless connection.

The tracks and slots for the IO-Link Devices, configured with the wireless IO-Link port configuration, must be unique! For each connected IO-Link Device, 1 wireless track must be configured and 1 slot must be configured.

The presented commissioning example includes 1 connected IO-Link Device. The chosen values were:

- Track: 0x00
- Slot: 0x00

Any further slots must be configured to free slots.



Note:

If slot type = "Double slot", then the value for slot must be an even number.

The following table shows an example for track and slot configuration for a connected IO-Link Device if the slot type "Double slot" is configured.

Track	Slot 0	Slot 1	Slot 2	Slot 3	Slot 4	Slot 5	Slot 6	Slot 7
0	W-device with double slot	free	free	free	free	free	free	free
1	free	free	free	free	free	free	free	free

Table 51: Track and Slot – example 1 wireless device with slot type "double slot"

9.7 Setting date and time

The device has a built-in timing unit. To get the date and time from an NTP server using Network Time Protocol (NTP), the device needs the IP address of the NTP server. An OPC UA client is required to set the IP address of the NTP server.

Chapter *NTP Client configuration* [▶ page 106] describes the nodes of the OPC UA server for configuring the NTP client.

Chapter *Setting date and time of the device via OPC UA* [▶ page 97] describes how to set the IP address of the NTP server via an OPC UA client.

9.8 Using OPC UA Client

The device has an integrated OPC UA server. You can communicate with the device using an OPC UA client.

For test purposes, you can use e.g. the UaExpert from Unified Automation GmbH:

<http://www.unifiedautomation.com>

The authentication "anonymous" allows an OPC UA client read access to the device.

The authentication "User name and password" allows an OPC UA client read access and write access to the device if the user used has the permission to write.

9.8.1 Connecting with device

Requirements

- You have an OPC UA client.
- For write access to the device: You know the user name and password, and you have the permission to write.
- You know the IP address of the device.

Without user name and password, you can access the device "anonymously" and read data.

Step-by-step instructions

Establish a connection to the device:

- Start UaExpert.
- Use **File > New** to create a new project.
- Use **Server > Add** to add a new server.
- The tab **Discovery** displays the dialog **Add Server**.

Tab **Discovery** (default)

Tab **Advanced**

Table 52: Dialog Add Server - tabs **Discovery** and **Advanced**

- In the field **Configuration name**, enter a name for your configuration, e. g. `Test`.
- Select the tab **Advanced**.
- In the area **Server Information** of the tab **Advanced**, enter the following text in the data field **Endpoint Url**:
`opc.tcp://<IP address>:4840`
 For `<IP address>` enter the IP address of your device.
- In the area **Authentication Settings**, select the option **Username/Password** if you want to execute a write access to the device or select **Anonymous** if a read access is sufficient.
- If you have selected the option **Username/Password**, enter your user name and, if necessary, your password.
- Click **Ok**.
- ⇒ In the project window, under **Project > Servers**, the UaExpert enters the server, e. g. `Test`.
- Open the context menu of the server (`Test`) and select **Connect**.
- ⇒ The connection will be established.

9.8.2 Setting date and time of the device via OPC UA

Requirements

- You have an OPC UA client.
- You know the username and password, and you have the permission to write.
- You know the IP address of an NTP server.
- You have converted the IP address of the NTP server into a decimal number, as described below.
- You have already established a connection to the device.

Example of an NTP server

NTP server `ptbtime1.ptb.de` of the German Federal Institute of the Physikalisch-Technische Bundesanstalt in Braunschweig with the IP address `192.53.103.108`

Substitute NTP server (optional) of the NTP server `ptbtime2.ptb.de` of the Physikalisch-Technische Bundesanstalt in Braunschweig with the IP address `192.53.103.104`

Converting an IP address into a decimal number

To convert the IP address to a decimal number, use the following formula. Starting from an IP address in the format `A.B.C.D`:

$$((A * 256 + B) * 256 + C) * 256 + D = \text{IP address as a decimal number}$$

Example of IP address `192.53.103.108`

$$((192 * 256 + 53) * 256 + 103) * 256 + 108 = 3224725356$$

Step-by-step instructions

- In the window **Address Space**, open the context menu:
`Root> Objects> DeviceSet> [Device name] >`
`Configuration> NtpClient>`
`NtpClientUpdateConfiguration.`

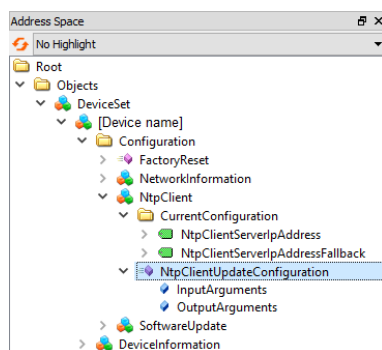


Figure 50: Node `NtpClientUpdateConfiguration` (1)

- In the context menu select **Call**.

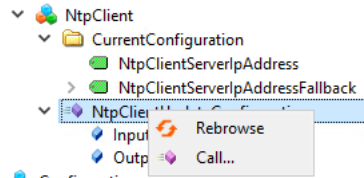


Figure 51: Node NtpClientUpdateConfiguration (2)

⇒ The dialog **Call NtpClientUpdateConfiguration on NtpClient** will be displayed:

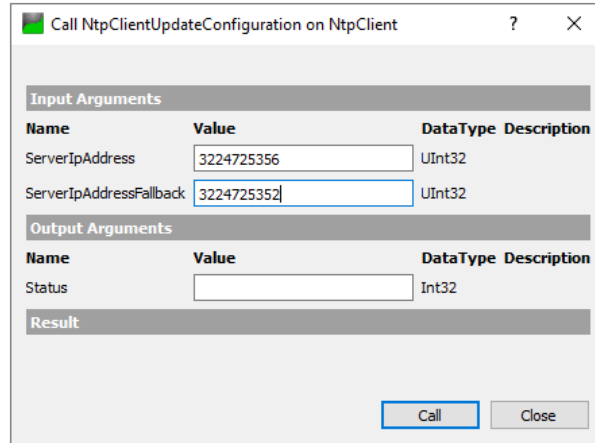


Figure 52: Dialog for configuring the NTP client

- In the area **Input Arguments**, in the input field **ServerIpAddress**, enter the value 3224725356 for the IP address of the NTP server.
- In the area **Input Arguments**, in the input field **ServerIpAddressFallback**, enter 3224725352 for the IP address of the substitute NTP server.
- Click **Call**.
- ⇒ If the function call was successful, the output field to the right of Status in the area **Output Arguments** displays 0. A green bar with the text "succeeded" appears in the area **Result**. The two variables ServerIpAddress and ServerIpAddressFallback are now set. Via NTP the device gets the current date and time of the time server and synchronizes its internal timing unit.

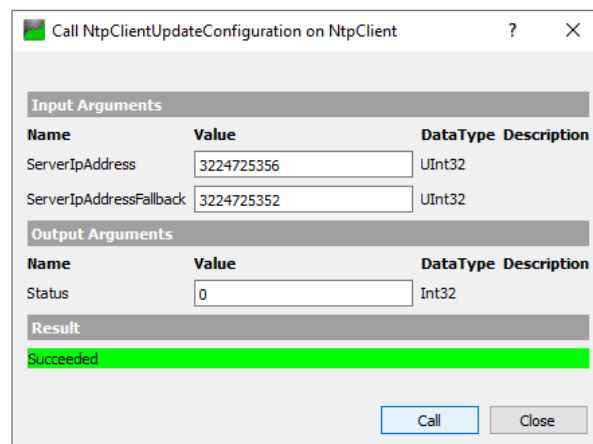


Figure 53: Dialog for configuring the NTP client (successful)

10 Communication

10.1 Process data of the PROFINET IO-Device

This section describes the PROFINET IO-Device process data transferred via PROFINET. The description is valid for the netFIELD IO-Link Wireless Master PROFINET IO-Device NFD-3090-PNS-IOLMW.

For data transmission for the IO-Link Wireless Master, the following submodule is used:

- IO-Link Wireless Master (PDCT, Expert)

For data transmission for the IO-Link Wireless Device via the wireless IO-Link ports WP01 ... WP16, the submodules listed hereafter are used.

- IO-Link Wireless Device X I / X O + PQI (PDCT, Expert)
- IO-Link Wireless Device X I + PQI (PDCT, Expert)
- IO-Link Wireless Device X O + PQI (PDCT, Expert)

X = 1, 2, 4, 8, 16, 32

In the configuration, one submodule is configured for each used wireless IO-Link port WP.

10.1.1 Process data of submodule „IO-Link Wireless Master“

The following tables give a description of the structure of the input process data or the output process data of the submodule “IO-Link Wireless Master (PDCT, Expert)”.

Byte offset	Byte count	Process data input	Description
1 ... 2	2 byte	Input data 2 bytes	0, reserved
3	1 byte	IOPS	Provider status of input data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].
4	1 byte	IOCS	Consumer status of output data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].

Table 53: Input data of submodule “IO-Link Wireless Master (PDCT, Expert)”

Byte offset	Byte count	Process data output	Description
1 ... 2	2 byte	Output data 2 bytes	0, reserved
3	1 byte	IOPS	Provider status of output data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].
4	1 byte	IOCS	Consumer status of input data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].

Table 54: Output data of submodule “IO-Link Wireless Master (PDCT, Expert)”

10.1.2 Process data of submodules „IO-Link Wireless Device X I / X O + PQI“

The following tables give a description of the structure of the input process data or the output process data of the submodule “IO-Link Wireless Device X I / X O + PQI (PDCT, Expert)”.

Byte offset	Byte count	Process data input	Description
1 ... X	X byte	Input data X bytes	The length X is 1, 2, 4, 8, 16, or 32 bytes, depending on the used submodule. For a description of the process data input, see manual of the manufacturer of the used IO-Link Device.
X + 1	1 byte	PQI	... PQI ... For a description, see table <i>Port Qualifier Information</i> [▶ page 103].
X + 2	1 byte	IOPS	Provider status of input data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].
X + 3	1 byte	IOCS	Consumer status of output data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].

Table 55: Input data of submodule “IO-Link Wireless Device X I / X O + PQI (PDCT, Expert)”

Byte offset	Byte count	Process data output	Description
1 ... X	X byte	Output data X bytes	The length X is 1, 2, 4, 8, 16, or 32 bytes, depending on the used submodule. For a description of the process data output, see manual of the manufacturer of the used IO-Link Device.
X + 1	1 byte	IOPS	Provider status of output data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].
X + 2	1 byte	IOCS	Consumer status of input data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].

Table 56: Output data of submodule “IO-Link Wireless Device X I / X O + PQI (PDCT, Expert)”

10.1.3 Process data of submodules „IO-Link Wireless Device X I + PQI“

The following tables give a description of the structure of the input process data or the output process data of the submodule “IO-Link Wireless Device X I + PQI (PDCT, Expert)”.

Byte offset	Byte count	Process data input	Description
1 ... X	X byte	Input data X bytes	The length X is 1, 2, 4, 8, 16, or 32 bytes, depending on the used submodule. For a description of the process data input, see manual of the manufacturer of the used IO-Link Device.
X + 1	1 byte	PQI	... PQI ... For a description, see table <i>Port Qualifier Information</i> [▶ page 103].
X + 2	1 byte	IOPS	Provider status of input data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].

Table 57: Input data of submodule “IO-Link Wireless Device X I + PQI (PDCT, Expert)”

Byte offset	Byte count	Process data output	Description
1	1 byte	IOCS	Consumer status of input data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].

Table 58: Output data of submodule “IO-Link Wireless Device X I + PQI (PDCT, Expert)”

10.1.4 Process data of submodules „IO-Link Wireless Device X O + PQI“

The following tables give a description of the structure of the input process data or the output process data of the submodule “IO-Link Wireless Device X O + PQI (PDCT, Expert)”.

Byte offset	Byte count	Process data input	Description
1	1 byte	PQI	... PQI ... For a description, see table <i>Port Qualifier Information</i> [▶ page 103].
2	1 byte	IOPS	Provider status of input data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].
3	1 byte	IOCS	Consumer status of output data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].

Table 59: Input data of submodule “IO-Link Wireless Device X O + PQI (PDCT, Expert)”

Byte offset	Byte count	Process data output	Description
1 ... X	X byte	Output data X bytes	The length X is 1, 2, 4, 8, 16, or 32 bytes, depending on the used submodule. For a description of the process data output, see manual of the manufacturer of the used IO-Link Device.
X + 1	1 byte	IOPS	Provider status of output data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].
X + 2	1 byte	IOCS	Consumer status of input data of this submodule. For a description, see table <i>Provider and consumer status</i> [▶ page 103].

Table 60: Output data of submodule “IO-Link Wireless Device X O + PQI (PDCT, Expert)”

10.1.5 Port Qualifier Information

The PQI (Port Qualifier Information) provides status information on IO-Link port and IO-Link Device.

Bit	Flag	Description
0	-	Reserved, 0
1	-	Reserved, 0
2	NewPar	New parameters 0: No update of the device parameters of the IO-Link Device detected. 1: Update of the device parameters of the IO-Link Device detected: IO-Link master performed a "Data Storage upload" and a new IO-Link Device backup object (0xB904) is available.
3	SubstDev	Substitute device detected 0: No substitute device detected (identical serial number) 1: Substitute device detected (different serial number)
4	PortActive	Port activation 0: Port has been deactivated via port function. 1: Port is activated (default)
5	DevCom	IO-Link Device communication 0: No IO-Link Device available. 1: The IO-Link Device detected is in the state PREOPERATE or OPERATE.
6	DevErr	Port/Device error 0: No error/warning occurred. 1: Error/warning occurred at the port or IO-Link Device.
7	PQ	Validity of the process data 0: Invalid I/O-process data from the IO-Link Device. 1: Valid I/O-process data from the IO-Link Device.

Table 61: Port Qualifier Information

10.1.6 Provider and consumer status

PROFINET transfers status information with each submodule additionally to the process data. This status information is IOPS (Input output provider status) and IOCS (Input output consumer status). The following table describes the status information.

Bits	Name	Description
0 ... 4	-	Reserved, always 0.
5 ... 6	Instance	Instance that has detected the invalid data. If the data status (bit 7) has value 1, you can ignore bits 5 and 6. 00: Detected by subplot. 01: Detected by slot. 10: Detected by IO-Device. 11: Detected by IO-Controller.
7	Data status	Status of the input/output data 0: Bad, data is invalid. 1: Good, data is valid.

Table 62: Provider and consumer status

10.2 OPC UA

The device contains an OPC UA server. An OPC UA client can establish a connection to the device and access the following parameters:

- device identification,
- identification of the IO-Link Devices
- etc.

The OPC UA client establishes a connection via the following URL:

```
opc.tcp://IP address:4840
```

For IP address, use the IP address of the device.

The client can access device parameters anonymously (read only) or with user name/password (read and write). The user name and password are set with the netFIELD Wireless Web Server.

The following figure shows a section of the information model of the device.

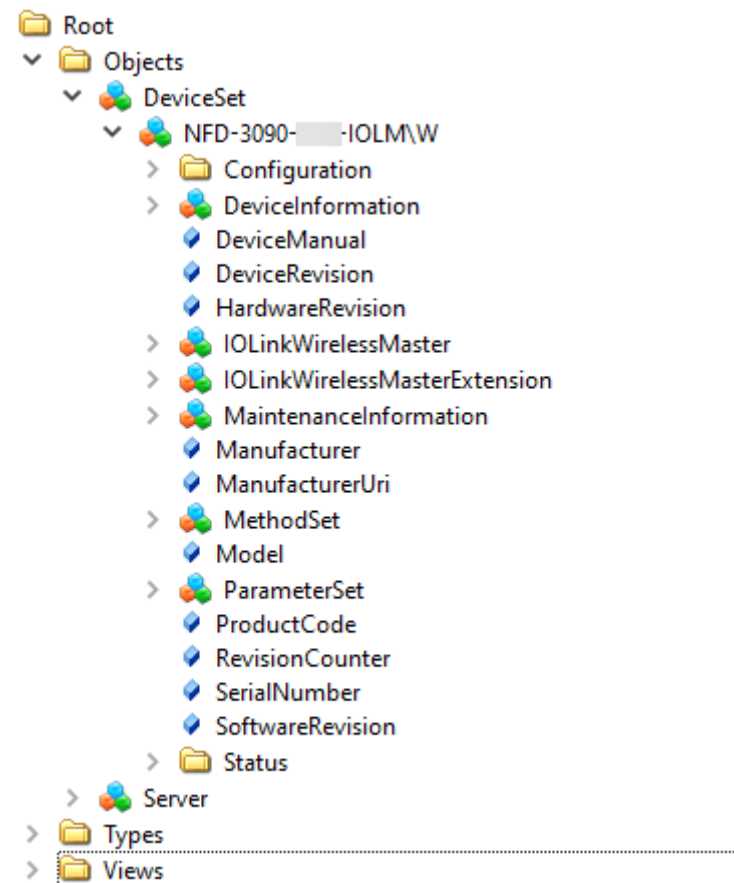


Figure 54: OPC UA: Information model of the device

10.2.1 Device identification

The device provides nodes for device identification. For example, the OPC UA client can read the version of the device firmware used in the `SoftwareRevision` node. The path to these nodes is

```
Root > Object > DeviceSet > [Device name]
```

Node name	Node class	Access	Description
Manufacturer	Variable	read	Device manufacturer
ManufacturerUri	Variable	read	URL of the device manufacturer
Model	Variable	read	Model name of the device
ProductCode	Variable	read	Product code of the device
RevisionCounter	Variable	read	Hardware revision of the device
SerialNumber	Variable	read	Serial number of the device
SoftwareRevision	Variable	read	Revision/version of the device firmware

Table 63: Device identification

10.2.2 Identification of connected IO-Link Devices

The device provides nodes for the identification of connected IO-Link Devices. For example, the OPC UA client can read the version of the device firmware used in the `SoftwareRevision` node. The path to these nodes is

```
Root > Object > DeviceSet > [Device name] >
IOLinkWirelessMaster > PortXX > Device
```

Node name	Node class	Access	Description
Manufacturer	Variable	read	Device manufacturer
MinCycleTime	Variable	read	Minimal cycle time
Model	Variable	read	Model name
RevisionID	Variable	read	Hardware revision
SerialNumber	Variable	read	Serial number
SoftwareRevision	Variable	read	Revision/version of the firmware
VendorID	Variable	read	Vendor identification

Table 64: Identification of the connected IO-Link Devices

10.2.3 NTP Client configuration

The OPC UA server provides nodes for configuring the NTP client.

Path to these nodes:

```
Root > Object > DeviceSet > [Device Name] >
Configuration > NtpClient > Configuration >
CurrentConfiguration
```

Node name	Node class	Access	Default	Description
NtpClientServerIpAddress	Variable	read / write	0	IP address of the NTP server The NTP client uses the set IP address to get the date and time from an NTP server. The IP address must be converted into a decimal number. The calculation is explained below the table. The value 0 disables the function.
NtpClientServerIpAddressFallback	Variable	read / write	0	IP address of the NTP server (fallback) Optional additional IP address if the NTP server cannot be reached via the IP address in the NtpClientServerIpAddress node. The IP address must be converted into a decimal number. The calculation is explained below the table. The value 0 disables the function.
NtpClientUpdateConfiguration	Method	write	-	Method for writing the nodes NtpClientServerIpAddress and NtpClientServerIpAddressFallback.

Table 65: NTP client configuration

Explanation of the calculation

To convert the IP address to a decimal number, use the following formula. Starting from an IP address in the format A.B.C.D:

$$((A * 256 + B) * 256 + C) * 256 + D = \text{IP address as a decimal number}$$

Example of IP address 192.53.103.108

$$((192 * 256 + 53) * 256 + 103) * 256 + 108 = 3224725356$$

10.3 MQTT topics

10.3.1 General parts of a topic

The description of a topic contains parts that will be substituted.

Topic part	Description
{prefix}	Prefix of each topic. The prefix is a text used to identify a device. Configurable in the netFIELD Wireless Web Server.
[MASTER_NUMBER]	Number for each master in the gateway. Typically, the gateway has one master and MASTER_NUMBER is 1.
[PORT_NUMBER]	Number for each port of a master. If the master has 8 ports for example, PORT_NUMBER is 1 ... 8.
[DEVICE_ALIAS]	String to identify a device connected to a port of a master: masterXportY. Example: master1port3.

Table 66: General parts of a topic

10.3.2 Gateway topics

Topic	Description
{prefix}/iolink/v1/gateway/identification	Identification of the gateway: MAC address, serial number, product ID, vendor name, product name, hardware revision, firmware revision For an example, see Gateway Identification.
{prefix}/iolink/v1/gateway/capabilities	Capabilities of the gateway: IODD supported, MQTT supported For an example, see Gateway Capabilities.
{prefix}/iolink/v1/gateway/configuration	Network configuration of the gateway: IP configuration, IP address, subnet mask, standard gateway For an example, see Gateway Configuration.

Table 67: Gateway topics

You find examples and details about the transferred JSON objects below.

Gateway Identification

Example for the gateway identification JSON object:

```
{
  "macAddress": "01:02:03:04:05:06",
  "serialNumber": "12345678",
  "productID": "TMP34Z",
  "vendorName": "SensorCompany",
  "productName": "FlowSensor34",
  "hardwareRevision": "V2.34",
  "firmwareRevision": "V1.23"
}
```

Gateway Capabilities

JSON key	Description
ioddSupported	"ioddSupported": true: IODD is available "ioddSupported": false: IODD is not available
mqttSupported	"mqttSupported": true: MQTT is available "mqttSupported": false: MQTT is not available

Table 68: Gateway Capabilities, "JSON key"

Example for the gateway capabilities JSON object:

```
{
  "ioddSupported": true,
  "mqttSupported": false
}
```

Gateway Configuration

JSON key	Description
"ipConfiguration"	Possible values for "ipConfiguration": <ul style="list-style-type: none"> • "MANUAL": Assignment of the IP address by other device-specific means. • "DHCP": RFC 2131 defines the "Dynamic Host Configuration Protocol", allowing automatic assignment of IP addresses. • "DCP": PROFINET defines the "Discovery and Configuration Protocol", a link-layer protocol that allows the manual assignment of IP addresses.

Table 69: Gateway Configuration, "JSON key"

Example for the gateway configuration JSON object:

```
{
  "ethIpv4":
  [
    {
      "ipConfiguration": "MANUAL",
      "ipAddress": "192.168.1.13",
      "subnetMask": "255.255.255.0",
      "standardGateway": "192.168.1.1"
    }
  ]
}
```

10.3.3 Master topics

Topic	Description
{prefix}/iolink/v1/masters	Available master number keys and identification information: Master number, serial number, location tag For an example, see Master List.
{prefix}/iolink/v1/masters/[MASTER_NUMBER]/capabilities	Capabilities of the master: Number of ports, max. power supply (of the device) Example: {prefix}/iolink/v1/masters/1/capabilities For an example, see Master Capabilities.
{prefix}/iolink/v1/masters/[MASTER_NUMBER]/identification	Identification of the master: Vendor name, vendor ID, master ID, master type, serial number, application-specific tag, location tag, function tag Example: {prefix}/iolink/v1/masters/1/identification For an example, see Master Identification.
{prefix}/iolink/v1/masters/[MASTER_NUMBER]/ports	Available port number keys: Port number, status info, device alias Example: {prefix}/iolink/v1/masters/1/ports For an example, see Port List.
{prefix}/iolink/v1/masters/[MASTER_NUMBER]/ports/[PORT_NUMBER]/capabilities	Read capability information of the port: Max power supply (of the port), port type Example: {prefix}/iolink/v1/masters/1/ports/4/capabilities For an example, see Port Capabilities.
{prefix}/iolink/v1/masters/[MASTER_NUMBER]/ports/[PORT_NUMBER]/status	Read current status of the port: Status Info, IO-Link revision, master cycle time Example: {prefix}/iolink/v1/masters/1/ports/4/status For an example, see Port Status.
{prefix}/iolink/v1/masters/[MASTER_NUMBER]/ports/[PORT_NUMBER]/configuration	Read configuration of the port: Mode, validation and backup, cycle time, vendor ID, device ID, slot number, track number, device TX power, max retry, IMA time (I-am-alive time), slot type, low power device, max PD segment length, unique ID, device alias Example: {prefix}/iolink/v1/masters/1/ports/4/configuration For an example, see Port Configuration.
{prefix}/iolink/v1/masters/[MASTER_NUMBER]/ports/[PORT_NUMBER]/datastorage	Read data storage content of the port: Vendor ID, device ID, IO-Link revision Example: {prefix}/iolink/v1/masters/1/ports/4/datastorage For an example, see Port Data Storage.

Table 70: Master topics

You find examples and details about the transferred JSON objects below.

Master List

Example for the master list JSON object:

```
[
  {
    "masterNumber": 1,
    "serialNumber": "A0A1A2A3A4",
    "locationTag": "slot 2"
  },
  {
    "masterNumber": 2,
    "serialNumber": "B0B1B2B3B4",
    "locationTag": "slot 3"
  }
]
```

Master Capabilities

Example for the master capabilities JSON object:

```
{
  "numberOfPorts": 8,
  "maxPowerSupply": {
    "value": 0.3,
    "unit": "A"
  }
}
```

Master Identification

Example for the master identification JSON object:

```
{
  "vendorName": "Vendor GmbH",
  "vendorId": 26,
  "masterId": 42,
  "masterType": "Master acc. V1.0",
  "serialNumber": "IOLM123456",
  "applicationSpecificTag": "Fallback reader",
  "locationTag": "Down under",
  "functionTag": "Code reading"
}
```

Port list

JSON key	Description
statusInfo	Activated: "statusInfo": "DEVICE_ONLINE" Deactivated: "statusInfo": "DEACTIVATED"
deviceAlias	Possible values for "deviceAlias": <ul style="list-style-type: none"> • "Distance_sensor" • "Pressure_sensor" • "Switching_sensor" • "Empty_port"

Table 71: Port List, "JSON key"

Example for the port list JSON object:

```
[
  {
    "portNumber": 1,
    "statusInfo": "DEVICE_ONLINE",
    "deviceAlias": "Distance_sensor"
  },
  {
    "portNumber": 2,
    "statusInfo": "DEVICE_ONLINE",
    "deviceAlias": "Pressure_sensor"
  },
  {
    "portNumber": 3,
    "statusInfo": "DEVICE_ONLINE",
    "deviceAlias": "Switching_sensor"
  },
  {
    "portNumber": 4,
    "statusInfo": "DEACTIVATED",
    "deviceAlias": "Empty_port"
  }
]
```

Port Capabilities

JSON key	Description
portType	Value for "portType" for IO-Link Wireless Master: "WIRELESS_MASTER"

Table 72: Port Capabilities, "JSON key"

Example for the port capabilities JSON object:

```
{
  "maxPowerSupply": {
    "value": 0.3,
    "unit": "A"
  },
  "portType": "WIRELESS_MASTER"
}
```

Port Status

JSON key	Description
statusInfo	Activated: "statusInfo": "DEVICE_ONLINE" Deactivated: "statusInfo": "Deactivated"

Table 73: Port Status, "JSON key"

Example for the IO-Link wireless port status JSON object:

```
{
  "statusInfo": "DEVICE_ONLINE",
  "iolinkRevision" : "1.1",
  "masterCycleTime" : {
    "value" : "5.0",
    "unit" : "ms"
  }
}
```

Port Configuration

JSON key	Values
mode	<ul style="list-style-type: none"> "DEACTIVATED" "IOLINK_CYCLIC" "IOLINK_ROAMING"
validationAndBackup	<ul style="list-style-type: none"> "NO_DEVICE_CHECK" "TYPE_COMPATIBLE" "TYPE_COMPATIBLE_RESTORE_ONLY" "TYPE_COMPATIBLE_BACKUP_AND_RESTORE"
slotNumber	0 ... 7
trackNumber	0 ... 2
deviceTxPower	1 ... 31
maxRetry	2 ... 31
imaTime	<ul style="list-style-type: none"> "SINGLE_SLOT" "DOUBLE_SLOT"
maxPdSegmentLength	1 ... 32

Table 74: Port Configuration, "JSON key"

Example for the IO-Link wireless configuration JSON object:

```
{
  "mode": "IOLINK_MANUAL",
  "validationAndBackup" : "TYPE_COMPATIBLE",
  "cycleTime" : {
```

```
    "value" : "5.0",
    "unit" : "ms"
  },
  "vendorId" : 26,
  "deviceId" : 333,
  "slotNumber" : 0,
  "trackNumber" : 1,
  "deviceTxPower" : 31,
  "maxRetry" : 2,
  "imaTime" : 771,
  "slotType" : "SINGLE_SLOT",
  "lowPowerDevice" : false,
  "maxPdSegmentLength" : 2,
  "uniqueId" : [11, 12, 13, 14, 15, 16, 17, 18],
  "deviceAlias" : "Distance_sensor_1"
}
```

Example for the cycle time object JSON object:

```
{
  "value" : "5.0",
  "unit" : "ms"
}
```

Port Data Storage

Example for the port data storage JSON object:

```
"header": {
  "vendorId": 15,
  "deviceId": 65253,
  "iolinkRevision": "1.1"
},
"content": "YmFzZTY0IGVuY3J5cHRlZCBjb250ZW50"
}
```


10.3.4 Device topics

Topic	Description
{prefix}/iolink/v1/devices	Address all devices of all masters: Device alias, master number, port number For an example, see Device List.
{prefix}/iolink/v1/devices/[DEVICE_ALIAS]/processdata/value	Read process data value from the device: Get data (IO-Link, IQ value), set data (IO-Link, IQ value) Example: {prefix}/iolink/v1/devices/master1port4/processdata/value For an example, see Device Process Data.
{prefix}/iolink/v1/devices/[DEVICE_ALIAS]/processdata/getdata/value	Read process data input value from the device: Get Data (IO-Link, IQ value) Example: {prefix}/iolink/v1/devices/master1port4/processdata/getdata/value For an example, see Device Process Data Input.
{prefix}/iolink/v1/devices/[DEVICE_ALIAS]/processdata/setdata/value	Read process data output value from the device: Set Data (IO-Link, IQ value) Example: {prefix}/iolink/v1/devices/master1port4/processdata/setdata/value For an example, see Device Process Data Output.
iolink/v1/devices/[DEVICE_ALIAS]/events	Read event log from the device: Time, severity, origin, message Example: {prefix}/iolink/v1/devices/master1port4/events For an example, see Device Events.

Table 75: Device topics

Device List (JSON object)

Example for the device list JSON object:

JSON key	Description
deviceAlias	Device alias
masterNumber	Master number
portNumber	Port number

Table 76: Device List (JSON object)

Example for the device list JSON object:

```
[
  {
    "deviceAlias" : "DT35",
    "masterNumber" : 1,
    "portNumber" : 1,
  },
  {
    "deviceAlias" : "DT36",
    "masterNumber" : 1,
    "portNumber" : 2,
  },
  {
    "deviceAlias" : "DT37",
    "masterNumber" : 1,
    "portNumber" : 3,
  },
  {
    "deviceAlias" : "DT38",
    "masterNumber" : 1,
    "portNumber" : 4,
  },
],
```

Device Process Data (JSON object)

Example for the device process data JSON object:

JSON key	Description
getData	Get Data
iolink	IO-Link
iqValue	IQ value
setData	Set Data
iolink	IO-Link
iqValue	IQ value

Table 77: Device Process Data (JSON object)

Example for the device process data JSON object

For an IO-Link device:

```
{
  "getData" : {
    "iolink" : {
      "valid" : true,
      "value" : [12,22,216]
    },
    "iqValue" : false
  },
  "setData" : {
    "iolink" : {
      "valid" : true,
      "value" : [128,221,134]
    },
    "iqValue" : false
  }
}
```

Device Process Data Input (JSON object)

Example for the device process data input JSON object:

JSON key	Description
getData	Get Data
iolink	IO-Link
iqValue	IQ value

Table 78: Device Process Data Input (JSON object)

Example for the device process data input JSON object

For an IO-Link device:

```
{
  "getData" : {
    "iolink" : {
      "valid" : true,
      "value" : [12,22,216]
    },
    "iqValue" : false
  }
}
```

Device Process Data Output (JSON object)

Example for the device process data output JSON object:

JSON key	Description
setData	Set Data
iolink	IO-Link
iqValue	IQ value

Table 79: Device Process Data Output (JSON object)

Example for the device process data output JSON object

For an IO-Link device:

```
{
  "getData" : {},
  "setData" : {
    "iolink" : {
      "valid" : true,
      "value" : [128,221,134]
    },
    "iqValue" : false
  }
}
```

Device Events (JSON object)

Example for the device events JSON object:

JSON key	Description
time	Time
severity	Severity
origin	Origin
message	Message

Table 80: Device Events (JSON object)

Example for the device events JSON object

```
[
  {
    "time" : "2018-05-18T07:31:54.123z",
    "severity" : "WARNING",
    "origin" : {
      "master" : 1,
      "port" : 1,
      "device" : "Temp sensor 1",
    },
    "message" : {
      "code" : 16912,
      "mode" : "APPEARS",
      "text" : "Device temperature over-run - Clear source of heat"
    }
  }
]
```

10.3.5 MQTT topics

Topic	Description
{prefix}/iolink/v1/mqtt/configuration	Read configuration of MQTT client: Client mode, server address, user name, password, last will, keep alive time For an example, see MQTT Configuration.
{prefix}/iolink/v1/mqtt/connectionstatus	Configuration of MQTT client: Connection status, server address, up time For an example, see MQTT Connection Status.

Table 81: MQTT topics

You find examples and details about the transferred JSON objects below.

MQTT Configuration

JSON key	Description
clientMode	Activated: "clientMode": "ACTIVE" Deactivated: "clientMode": "INACTIVE"

Table 82: MQTT Configuration, "JSON key"

Example for the MQTT configuration JSON object:

```
{
  "clientMode" : "ACTIVE",
  "serverAddress" : "192.168.2.1./mqttserver",
  "username" : "iolink_json",
  "password" : "123456",
  "lastWill" : {
    "topic" : "my temperature sensor",
    "message" : "Process data transfer stopped",
    "qoS" : "0_ONLY_ONCE",
    "retain" : true
  },
  "keepAliveTime" : 0
}
```

MQTT Connection Status

JSON key	Description
connectionStatus	Possible values for "connectionStatus": <ul style="list-style-type: none"> • CONNECTING • CONNECTION_ACCEPTED • CLIENT_INACTIVE

Table 83: MQTT Connection Status, "JSON key"

Example for the MQTT connection status JSON object:

```
{
  "connectionStatus" : "CONNECTION_ACCEPTED",
  "serverAddress" : "192.168.2.1./mqttserver",
  "upTime" : 123
}
```

11 Diagnosis

11.1 Diagnosis via LEDs

11.1.1 System LED

The system status LED **SYS** can assume the states described below.











LED	Color	State	Description
SYS	Duo-LED: yellow RDY / green RUN		
	 (green)	On	The firmware is running.
	 (green)	Blinking	During the formatting of the file system
	 (yellow)	On	A system error has occurred.
	 (yellow)/  (green)	Blinking, 3x yellow, 3x green	Firmware crash, unrecoverable (an internal exception occurred that cannot be handled)
	 (yellow)/  (green)	Blinking, 1 Hz	Firmware update mode active: The firmware is idle and waiting for the update file.
	 (yellow)/  (green)	Blinking, 4 Hz	Firmware update mode active: A firmware update is being installed.
 (gray)	Off	<ul style="list-style-type: none"> No supply voltage: No supply voltage for the device or hardware defect. During a firmware reset 	

Table 84: States of the SYS-LED

LED state	Definition
Blinking	The LED turns on and off in phases.
Blinking, 3x yellow, 3x green	The LED turns on and off, with a frequency of approx. 1 Hz: <ul style="list-style-type: none"> 3x yellow "On" for 500 ms and "Off" for 500 ms and 3x green "On" for 500 ms and "Off" for 500 ms.
Blinking, yellow/green, 1 Hz, 4 Hz	The LED turns on in phases yellow or green, with a frequency of approx.: <ul style="list-style-type: none"> 1 Hz: 1 x yellow "On" for 500 ms and 1 x green "On" for 500 ms, 4 Hz: 1 x yellow "On" for 125 ms and 1 x green "On" for 125 ms.

Table 85: Definitions of the states of the SYS LED

11.1.2 APL LED

The application LED **APL** indicates the internal communication status as described below.






LED	Color	State	Description
APL	Duo LED red/green/yellow (yellow = red and green simultaneously)		
	 (green)	On	The IO-Link Wireless Master firmware is running.
	 (green)	Blinking, 4 Hz	Firmware update mode IO-Link Wireless Master components active: A firmware update is being installed.
	 (yellow)	On	IO-Link Wireless Master system error during initialization
	 (red)	On	IO-Link Wireless Master critical error
	 (gray)	Off	IO-Link Wireless Master off or not initialized

Table 86: APL LED states

11.1.3 Supply voltage status

The supply voltage status LEDs **1L** and **2L** indicate the states described below.





LED	Color	State	Description
1L	Duo LED red/green		
	 (green)	On	1L supply voltage ok
	 (gray)	Off	No 1L supply voltage
2L	Duo LED red/green		
	 (green)	On	2L supply voltage ok
	 (gray)	Off	No 2L supply voltage

Table 87: Supply voltage status 1L and 2L

11.1.4 PROFINET IO-Device status

The **SF** (system failure) and **BF** (bus failure) LEDs indicate the status of the PROFINET IO-Device. The LINK and ACT LEDs indicate the status of the Ethernet.

Communication status PROFINET IO-Device

The following table describes the LED states of the PROFINET IO-Device communication status.

LED	Color	State	Description
SF (System Failure) Position in the device overview: (7)	Duo LED red/green		
	● (off)	Off	No error
	☀ (red)	Flashing (1 Hz, 3 s)	DCP signal service is initiated via the bus.
	● (red)	On	Watchdog timeout; channel, generic or extended diagnosis present; system error
BF (Bus Failure) Position in the device overview: (8)	Duo LED red/green		
	● (off)	Off	No error
	☀ (red)	Flashing (2 Hz)	No data exchange
	● (red)	On	No configuration; or low speed physical link; or no physical link

Table 88: Communication status PROFINET IO-Device

LED state	Definition
Flashing (1 Hz, 3 s)	The LED turns on and off for 3 seconds with a frequency of 1 Hz: "on" for 500 ms, followed by "off" for 500 ms.
Flashing (2 Hz)	The LED turns on and off with a frequency of 2 Hz: "on" for 250 ms, followed by "off" for 250 ms.

Table 89: Definition LED states communication status

Ethernet status PROFINET IO-Device

The following table describes the LED states of the PROFINET IO-Device Ethernet status.

LED	Color	State	Description
LINK Ch0: (30) , Ch1: (29)	LED green		
	● (green)	On	The device is linked to the Ethernet.
	● (off)	Off	The device has no link to the Ethernet.
ACT Ch0: (31) , Ch1: (28)	LED yellow		
	● (yellow)	Flickering (load dependent)	The device sends/receives Ethernet frames.
	● (off)	Off	The device does not send/receive Ethernet frames.

Table 90: Ethernet status PROFINET IO-Device

LED state	Definition
Flickering (load dependent)	The LED turns on and off with a frequency of approximately 10 Hz to indicate high Ethernet activity: on for approximately 50 ms, followed by off for 50 ms. The LED turns on and off in irregular intervals to indicate low Ethernet activity

Table 91: Definition LED states Ethernet status

11.1.5 Wireless track status

The wireless track status LEDs **WT1 ... WT3** indicate the states for the wireless tracks 1, 2, and 3, as described below.





LED	Color	State	Description
WT1 ... WT3	Duo LED red/green/yellow (yellow = red and green simultaneously)		
	 (green)	On	Track operational mode and track service mode
	 (yellow)	On	Track inactive
	 (red)	Blinking	Track error
	 (gray)	Off	Track off

Table 92: Wireless track status WT1 ... WT3

11.1.6 Wireless port status

The wireless port status LEDs **WP01 ... WP16** indicate the states for the wireless ports 1 ... 16 as described below.








LED	Color	State	Description
WP01 ... WP16	Duo LED red/green/yellow (yellow = red and green simultaneously)		
	 (green)	On	Port operational
	 (green)	Blinking	Communication ready
	 (yellow)	On	Pairing success
	 (yellow)	Blinking	Port ready
	 (red)	Blinking	Port communication lost, pairing timeout
	 (red)	On	Port errors: Pairing wrong slot-type, revision fault, compatibility fault, serial number fault, process data fault, or cycle time fault.
	 (gray)	Off	Port inactive

Table 93: Wireless track status WP01 ... WP16

11.2 Diagnosis over IO-Link

11.2.1 Event Qualifier

The Event Qualifier is a bit-coded information about the event.

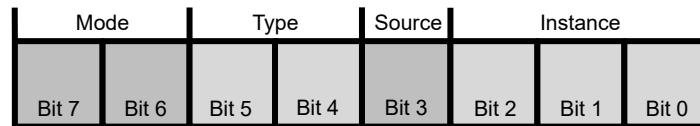


Figure 55: Event Qualifier

Bit	Name	Description
Bit 6–7	Mode	0: reserved 1: Event single shot 2: Event disappears 3: Event appears
Bit 4–5	Type	0: reserved 1: Notification 2: Warning 3: Error
Bit 3	Source	0: Device (remote) 1: Master/Port
Bit 0–2	Instance	0: unknown 1–3: reserved 4: Application 5–7: reserved

Table 94: Event Qualifier

11.2.2 IO-Link Wireless Master Event Codes

Event code	Description	Type	Remedy
0x0000	No malfunction	Notification	No action required
0xFF21	Communication to Wireless Device (IO-Link Device is connected to Bridge)	Event	No action required
0xFF22	Communication loss to IO-Link Device (IO-Link Device is disconnected from Bridge)	Error	Check connection from IO-Link Device to the Bridge
0xFFB1	Max Retry error, indicating a packet loss The W-Master cannot send a message to W-Device after MaxRetry attempts. This error indicates that one packet failed to be transmitted successfully. This can be for example the result of a noisy environment (RF-wise). It affects the PER (Packet Error Ratio) of the system.	Error	An excessive PER requires a check of the system configuration (ranges, operating channels, etc.).
0xFFB2	IMA timeout The W-Master did not receive a message from the connected W-Device within the IMA timeout. This error indicates that the IOLW connection failed. Possibly this leads to "Communication loss" 0xFF22.	Error	Check connection from IO-Link Device to the Bridge

Table 95: IO-Link Wireless Master Event Codes

11.2.3 IO-Link Device Event Codes (common)

The following table lists standard IO-Link Device Event Codes. For device-specific Event Codes or remedy, use the manual of the used IO-Link Device.

Event code	Description	Type	Remedy (common)
0x0000	No malfunction	Notification	No action required
0x1000	General malfunction (unknown error)	Error	See manual of the used IO-Link Device
0x1800 – 0x18FF	Vendor-specific	-	See manual of the used IO-Link Device
0x4000	Temperature fault – overload	Error	Check temperature, find source for overload
0x4210	Device temperature overrun	Warning	Clear source of heat
0x4220	Device temperature underrun	Warning	Insulate IO-Link Device
0x5000	Device hardware fault	Error	Exchange IO-Link Device
0x5010	Component malfunction	Error	Repair or exchange
0x5011	Non-volatile memory loss	Error	Check batteries
0x5012	Batteries low	Warning	Exchange batteries
0x5013	HMI button pressed	Notification	-
0x5100	General power supply fault	Error	Check availability of power supply
0x5101	Fuse blown/open	Error	Exchange fuse
0x5110	Primary supply voltage overrun	Warning	Check tolerance of 1L+ voltage
0x5111	Primary supply voltage underrun	Warning	Check tolerance of 1L+ voltage
0x5112	Secondary supply voltage fault (Port Class B)	Warning	Check tolerance of 2L+ voltage
0x6000	Device software fault	Error	Check firmware revision
0x6320	Parameter error	Error	Check data sheet and values
0x6321	Parameter missing	Error	Check data sheet
0x6350	Parameter changed	Error	Check configuration
0x7700	Wire break of a subordinate device	Error	Check installation
0x7701 – 0x770F	Wire break of subordinate device 1 ... device 15	Error	Check installation
0x7710	Short circuit	Error	Check installation
0x7711	Ground fault	Error	Check installation
0x8C00	Technology-specific application fault	Error	Reset Device
0x8C01	Simulation active	Warning	Check operational mode
0x8C10	Process variable range overrun – Process Data uncertain	Warning	Check configuration of device
0x8C20	Measurement range exceeded	Error	Check application
0x8C30	Process variable range underrun – Process Data uncertain	Warning	Check configuration of device
0x8C40	Maintenance required	Warning	Clean
0x8C41	Maintenance required	Warning	Refill
0x8C42	Maintenance required	Warning	Exchange wear and tear parts
0x8CA0 – 0x8DFF	Vendor-specific	-	See manual of the used IO-Link Device
0xB000 – 0xB0FF	Safety extensions	-	See manual of the used IO-Link Device
0xB100 – 0xBFFF	Profile-specific	-	See manual of the used IO-Link Device
0xFF91	Internal Data Storage upload request	Notification (single shot)	See manual of the used IO-Link Device

Event code	Description	Type	Remedy (common)
0xFFB9	Retry error	Error	See manual of the used IO-Link Device
Any other code	Reserved	-	See manual of the used IO-Link Device

Table 96: IO-Link Device Event Codes (common)

12 Technical data

12.1 Technical data device

Category	Parameter	Value			
Product	Part number	1912.102			
	Model	NFD-3090-PNS-IOLM\W			
	Description	netFIELD IO-Link Wireless Master PROFINET IO-Device			
	Function	IO-Link Master Wireless for PROFINET IO with 2 tracks for up to 16 channels			
Communication controller	Type	netX 90			
Integrated memory	RAM	16 MB SDRAM			
	FLASH	8 MB			
Ethernet communication	Real-Time Ethernet	PROFINET IO-Device			
Ethernet interface	Interface type	100BASE-TX, isolated			
	Auto-negotiation, Auto crossover	yes			
	Connectors	X31: Ethernet interface, M12, D-coded, PROFINET IO port 1 X32: Ethernet interface, M12, D-coded, PROFINET IO port 2			
LEDs	System and application	SYS	System status	green/ yellow	
		APL	Application status	red/green	
	Power supply	1L (X21)	1L power supply (DC 24 V)		red/green
		2L (X21)	2L power supply (DC 24 V)		red/green
	PROFINET IO communication	SF	Status failure		red/green
		BF	Bus failure		red/green
	Ethernet	LINK (X31)	Link status, connector X31		green
		ACT (X31)	Activity status, connector X31		yellow
		LINK (X32)	Link status, connector X32		green
		ACT (X32)	Activity status, connector X32		yellow
	Wireless tracks	WT01 ... WT03	IO-Link wireless track status, antenna X1 ... X3		red/yellow/ green
	Wireless ports	WP01 ... WP08	Port status, wireless IO-Link ports 1 to 8		red/yellow/ green
		WP09 ... WP16	Port status, wireless IO-Link ports 9 to P16		red/yellow/ green
	Power supply 1L, 2L	Voltage supply	24V DC, -25%/+30% (18 V DC ... 31.2 V DC)		
Power consumption		1L: 0.2 A (at 24 V DC), 2L: 0.1 A (at 24 V DC)			
Connectors		X21: Power supply input (Power In), M12, L-coded X22: Power supply output (Power Out), M12, L-coded			
Power consumption (power connectors)		Max. 16 A, Max. current of the device including pass through must not exceed 16 A for 1L and 2L. Observe derating for the maximum current depending on the ambient temperature.			
Revers polarity protection		Yes			

Category	Parameter	Value
Ambient conditions	Ambient temperature (operation), Air flow, during measurement	-25 °C ... +70 °C, V ≤ 0,5 m/s
	Ambient temperature (storage)	-40 °C ... +85 °C
	Max. temperature change	3 K / min
	Humidity	5 ... 95% relative humidity, no condensation permitted
	Operating height	0 ... 2000 m
	Over voltage category	II (EN 60664-1)
	Device	Dimensions (L x W x H)
Housing		Plastics
Weight		212 g, with 3 antennas: 227 g
Mounting/installation		Screw mounting, with 2x M4 screws to the 2 mounting holes. The upper screw makes contact to FE (functional earth).
Tightening torque		1.2 Nm
Protection class		IP67
Conformity	RoHS	EN IEC 63000:2018 / BS EN IEC 63000:2018
Compliance with EMC	CE sign	yes
	UKCA sign	yes
Approvals	FCC	FCC ID: 2ANEG002
	ISED	IC ID: 24152-0002
	RED	Certificate: In preparation
Firmware download	Web pages	netFIELD Wireless Web Server
Configuration	Software	PROFINET IO-Controller, netFIELD Wireless Web Server, IO-Link ET

Table 97: Technical data NFD-3090-PNS-IOLM/W

Category	Parameter	Value
Product data	Name	Wifi Antenna 2.4G rubber antenna
	Model	TLW2.5A-SMA-Male
	Type	Monopole whip antenna
	Manufacturer	Silram Technologies Ltd., Kfar Saba, Israel
Electrical specifications	Frequency Range	2400-2500 MHz
	Gain	1.6 dBi
	Polarization	Vertical
	Radiation	Omni
Mechanical specifications	Connector	Regular SMA-Male
	Height	25.6 mm

Table 98: Technical data SMA antenna

12.2 Technical data IO-Link Wireless Master

Parameter	Value
Tracks and IO-Link Devices	2 wireless tracks for up to 16 IO-Link Devices
Radio frequencies	RFch (RF channel center frequency): 2403 ... 2478 MHz (wireless channels 3 – 78, configurable). The IO-Link Wireless Master uses the frequencies (wireless channels) 2401 (1), 2402 (2), 2479 (79), 2480 (80) for network configurations purposes and cannot be configured for communication purposes.
Range of the wireless function	Max. 10 m distance
Masters per cell	Max. 3 masters within a circle of 20 m diameter
Antennas	3 SMA antennas

Table 99: Technical data IO-Link Wireless Master

12.3 Technical data protocol

Parameter	Value
Input data	8 bytes ... 568 bytes (including IOPS and IOCS)
Output data	8 bytes ... 552 bytes (including IOPS and IOCS)
Alarm types	Process Alarm, Diagnostic Alarm
Identification & Maintenance (I&M)	I&M0-4
Topology recognition	LLDP, SNMP V1, Physical Device Record Objects
Minimum cycle time (MinDeviceInterval)	RT_CLASS_1: 1 ms (min. SendClockFactor 32) RT_CLASS_3: 1 ms (min. SendClockFactor 32)
PROFINET IO specification	V2.3, "Legacy Startup" of the specification V2.2 is supported
Conformance Class	C
Data transport layer	Ethernet II, IEEE 802.3
Interface type	100BASE-TX, isolated
Auto negotiation, auto crossover	Yes

Table 100: Technical data PROFINET IO-Device for the NFD-3090-PNS-IOLMW device

12.4 Technical data netFIELD Wireless Web Server

Parameter	Value
HTTP	HTTP/1.1
Port	80
Connections	Max. 8 simultaneous connections One connection is being processed.
JavaScript	Required
HTTPS	Not supported

Table 101: Technical Data Web Server

12.5 OPC UA Server

Parameter	Description
OPC UA Server	According to "IO-Link Companion Specification": http://opcfoundation.org/UA/IOLink/ Vendor-specific information model: http://www.hilscher.com/UA/IOLink/Wireless
Server profile	Micro Embedded Device
Protocol	OPC UA TCP
User access	Anonymous (Read access only) User name / password (Read and write access)
Number of sessions	2
Number subscriptions per session	2
Number „Monitored Items“ per session	20
Data coding	UA binary

Table 102: OPC UA Server

12.6 MQTT Client

Parameter	Description
MQTT	Client
Client services	Publish
Protocols	MQTT over TCP
Topic size	Max. 256 bytes individually per MQTT publication and up to 256 bytes of common topic prefix of the associated MQTT connection
Topics	Topic: Printable UTF-8 string, NUL-terminated, multi-byte encoding (MBCS) Payload: JSON
Will Topic	Max. 256 bytes
Quality of Service	QoS 0, QoS 1, and QoS 2
IP standard	IPv4
Port	1883 (default), MQTT unencrypted
MQTT standard	V3.1.1
Restriction	The Subscribe service is not supported.

Table 103: Technical data MQTT Client

14 Approvals

14.1 FCC/ISED

CAUTION: Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The FCC Wants You to Know

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

FCC Warning

Hilscher Gesellschaft für Systemautomation mbH has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

ISED Warning

Hilscher Gesellschaft für Systemautomation mbH n'approuve aucune modification apportée à l'appareil par l'utilisateur, quelle qu'en soit la nature. Tout changement ou modification peuvent annuler le droit d'utilisation de l'appareil par l'utilisateur.

Interference statement

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Wireless notice

This device complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Le présent appareil est conforme à l'exposition aux radiations FCC / ISED définies pour un environnement non contrôlé et répond aux directives d'exposition de la fréquence de la FCC radiofréquence (RF) et RSS-102 de la fréquence radio (RF) ISED règles d'exposition. L'émetteur ne doit pas être colocalisé ni fonctionner conjointement avec à autre antenne ou autre émetteur.

15 Appendix

15.1 References

IO-Link Wireless

IO-Link Community, IO-Link Wireless System Extensions, Specification, Version 1.1, March 2018, Order No: 10.112

IO-Link

IO-Link Community, JSON Integration for IO-Link, Specification, Version 1.0.0, March 2020, Order No: 10.222

Documentation on Wireless Bridge

Hilscher Gesellschaft für Systemautomation mbH: User manual, netFIELD Device Wireless Bridge, NFD-BRIDGE-IOLSA\W, DOC2110904UMxxEN, English, 2022-xx

Safety standards

American National Standards Institute, Inc.: American National Standard, Product Safety Information in Product Manuals, Instructions, and Other Collateral Materials, ANSI Z535.6-2016, English, 2016.

DIN Deutsches Institut für Normung e. v. and VDE Verband der Elektrotechnik Elektronik Informationstechnik e. V.: German standard, Equipment for audio/video, information and communication technology - Part 1: Safety requirements, (IEC 62368-1:2014, modified + Cor.:2015); English version EN 62368-1:2014 + AC:2015, English, 2016-05.

15.2 Conventions in this manual

Instructions

1. Operation purpose
2. Operation purpose
 - Instruction

Results

- ↻ Intermediate result
- ⇒ Final result

Signal words





Signal word	Description
	Indicates a hazardous situation, which if not avoided, will result in death or serious injury.
	Indicates a hazardous situation, which if not avoided, could result in death or serious injury.
	Indicates a hazardous situation, which if not avoided, may result in minor or moderate injury.
	Indicates a property damage message.

Table 104: Signal words

Signs








Sign	Note	Safety sign	Warning, principle
	General note	  (USA)	Warning of hazardous voltage! Danger to life, risk of injury by electric shock
	Important note to be followed to rule out malfunctions		Warning of hot surface
	Note for further information		Caution is necessary when operating the device.

Table 105: Signs

15.3 Directives and standards

The following table lists the directives and standards applicable to the netFIELD IO-Link Wireless Master PROFINET IO-Device NFD-3090-PNS-IOLM\W device.

	European Union	United Kingdom
Directives/ statutory instrument	2014/53/EU RED Directive, 2014/30/EU EMC Directive, 2011/65/EU RoHS Directive changed by directive 2015/863/EU amending annex II	Electromagnetic Compatibility Regulations 2016, Radio Equipment Regulation 2017, Electrical Equipment (Safety) Regulation 2016, The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic, Equipment Regulations 2012
Emission	EN IEC 61000-6-3	BS EN IEC 61000-6-3
Electromagnetic compatibility of multimedia equipment	EN 55032:2015	BS EN 55032:2015
ElectroMagnetic Compatibility (EMC) standard for radio equipment and services	ETSI EN 301489-1 V2.2.3	ETSI EN 301489-1 V2.2.3
Part 17: Specific conditions for Broadband Data Transmission Systems	ETSI EN 301489-17 V3.2.4	ETSI EN 301489-17 V3.2.4
Human exposure restrictions for electromagnetic fields	EN IEC 62311:2020, EN 62479:2010 (German Version)	BS EN IEC 62311:2020, BS EN 62479:2010
Immunity	EN 61000-6-2:2019-11	BS EN 61000-6-2:2019-11
<ul style="list-style-type: none"> • Electrostatic discharge (ESD) (air and contact discharge method) • Radiated immunity • Fast transient interferences (Burst) • Surge immunity • Conducted immunity 	<ul style="list-style-type: none"> • EN 61000-4-2 • EN 61000-4-3 • EN 61000-4-4 • EN 61000-4-5 • EN 61000-4-6 	<ul style="list-style-type: none"> • BS EN 61000-4-2 • BS EN 61000-4-3 • BS EN 61000-4-4 • BS EN 61000-4-5 • BS EN 61000-4-6
General EMC Standards		
Wideband transmission systems	ETSI EN 300328 V2.2.2	ETSI EN 300328 V2.2.2
Safety standards		
Audio/video, information and communication technology equipment - Part 1: Safety requirements	EN 62368-1: 2020+A11:2020	BS EN 62368-1: 2020+A11:2020

Table 106: Directives and standards netFIELD IO-Link Wireless Master device

15.4 Legal notes

Copyright

© Hilscher Gesellschaft für Systemautomation mbH

All rights reserved.

The images, photographs and texts in the accompanying materials (in the form of a user's manual, operator's manual, Statement of Work document and all other document types, support texts, documentation, etc.) are protected by German and international copyright and by international trade and protective provisions. Without the prior written consent, you do not have permission to duplicate them either in full or in part using technical or mechanical methods (print, photocopy or any other method), to edit them using electronic systems or to transfer them. You are not permitted to make changes to copyright notices, markings, trademarks or ownership declarations. Illustrations are provided without taking the patent situation into account. Any company names and product designations provided in this document may be brands or trademarks by the corresponding owner and may be protected under trademark, brand or patent law. Any form of further use shall require the express consent from the relevant owner of the rights.

Important notes

Utmost care was/is given in the preparation of the documentation at hand consisting of a user's manual, operating manual and any other document type and accompanying texts. However, errors cannot be ruled out. Therefore, we cannot assume any guarantee or legal responsibility for erroneous information or liability of any kind. You are hereby made aware that descriptions found in the user's manual, the accompanying texts and the documentation neither represent a guarantee nor any indication on proper use as stipulated in the agreement or a promised attribute. It cannot be ruled out that the user's manual, the accompanying texts and the documentation do not completely match the described attributes, standards or any other data for the delivered product. A warranty or guarantee with respect to the correctness or accuracy of the information is not assumed.

We reserve the right to modify our products and the specifications for such as well as the corresponding documentation in the form of a user's manual, operating manual and/or any other document types and accompanying texts at any time and without notice without being required to notify of said modification. Changes shall be taken into account in future manuals and do not represent an obligation of any kind, in particular there shall be no right to have delivered documents revised. The manual delivered with the product shall apply.

Under no circumstances shall Hilscher Gesellschaft für Systemautomation mbH be liable for direct, indirect, ancillary or subsequent damage, or for any loss of income, which may arise after use of the information contained herein.

Liability disclaimer

The hardware and/or software was created and tested by Hilscher Gesellschaft für Systemautomation mbH with utmost care and is made available as is. No warranty can be assumed for the performance or flawlessness of the hardware and/or software under all application conditions and scenarios and the work results achieved by the user when using the hardware and/or software. Liability for any damage that may have occurred as a result of using the hardware and/or software or the corresponding documents shall be limited to an event involving willful intent or a grossly negligent violation of a fundamental contractual obligation. However, the right to assert damages due to a violation of a fundamental contractual obligation shall be limited to contract-typical foreseeable damage.

It is hereby expressly agreed upon in particular that any use or utilization of the hardware and/or software in connection with

- Flight control systems in aviation and aerospace;
- Nuclear fission processes in nuclear power plants;
- Medical devices used for life support and
- Vehicle control systems used in passenger transport

shall be excluded. Use of the hardware and/or software in any of the following areas is strictly prohibited:

- For military purposes or in weaponry;
- For designing, engineering, maintaining or operating nuclear systems;
- In flight safety systems, aviation and flight telecommunications systems;
- In life-support systems;
- In systems in which any malfunction in the hardware and/or software may result in physical injuries or fatalities.

You are hereby made aware that the hardware and/or software was not created for use in hazardous environments, which require fail-safe control mechanisms. Use of the hardware and/or software in this kind of environment shall be at your own risk; any liability for damage or loss due to impermissible use shall be excluded.

Warranty

Hilscher Gesellschaft für Systemautomation mbH hereby guarantees that the software shall run without errors in accordance with the requirements listed in the specifications and that there were no defects on the date of acceptance. The warranty period shall be 12 months commencing as of the date of acceptance or purchase (with express declaration or implied, by customer's conclusive behavior, e.g. putting into operation permanently).

The warranty obligation for equipment (hardware) we produce is 36 months, calculated as of the date of delivery ex works. The aforementioned provisions shall not apply if longer warranty periods are mandatory by law pursuant to Section 438 (1.2) BGB, Section 479 (1) BGB and Section 634a (1) BGB [Bürgerliches Gesetzbuch; German Civil Code] If, despite of all due care taken, the delivered product should have a defect, which already existed at the time of the transfer of risk, it shall be at our discretion to either repair the product or to deliver a replacement product, subject to timely notification of defect.

The warranty obligation shall not apply if the notification of defect is not asserted promptly, if the purchaser or third party has tampered with the products, if the defect is the result of natural wear, was caused by unfavorable operating conditions or is due to violations against our operating regulations or against rules of good electrical engineering practice, or if our request to return the defective object is not promptly complied with.

Costs of support, maintenance, customization and product care

Please be advised that any subsequent improvement shall only be free of charge if a defect is found. Any form of technical support, maintenance and customization is not a warranty service, but instead shall be charged extra.

Additional guarantees

Although the hardware and software was developed and tested in-depth with greatest care, Hilscher Gesellschaft für Systemautomation mbH shall not assume any guarantee for the suitability thereof for any purpose that was not confirmed in writing. No guarantee can be granted whereby the hardware and software satisfies your requirements, or the use of the hardware and/or software is uninterrupted or the hardware and/or software is fault-free.

It cannot be guaranteed that patents and/or ownership privileges have not been infringed upon or violated or that the products are free from third-party influence. No additional guarantees or promises shall be made as to whether the product is market current, free from deficiency in title, or can be integrated or is usable for specific purposes, unless such guarantees or promises are required under existing law and cannot be restricted.

Confidentiality

The customer hereby expressly acknowledges that this document contains trade secrets, information protected by copyright and other patent and ownership privileges as well as any related rights of Hilscher Gesellschaft für Systemautomation mbH. The customer agrees to treat as confidential all of the information made available to customer by Hilscher Gesellschaft für Systemautomation mbH and rights, which were disclosed by Hilscher Gesellschaft für Systemautomation mbH and that were made accessible as well as the terms and conditions of this agreement itself.

The parties hereby agree to one another that the information that each party receives from the other party respectively is and shall remain the intellectual property of said other party, unless provided for otherwise in a contractual agreement.

The customer must not allow any third party to become knowledgeable of this expertise and shall only provide knowledge thereof to authorized users as appropriate and necessary. Companies associated with the customer shall not be deemed third parties. The customer must obligate authorized users to confidentiality. The customer should only use the confidential information in connection with the performances specified in this agreement.

The customer must not use this confidential information to his own advantage or for his own purposes or rather to the advantage or for the purpose of a third party, nor must it be used for commercial purposes and this confidential information must only be used to the extent provided for in this agreement or otherwise to the extent as expressly authorized by the disclosing party in written form. The customer has the right, subject to the obligation to confidentiality, to disclose the terms and conditions of this agreement directly to his legal and financial consultants as would be required for the customer's normal business operation.

Export provisions

The delivered product (including technical data) is subject to the legal export and/or import laws as well as any associated regulations of various countries, especially such laws applicable in Germany and in the United States. The products / hardware / software must not be exported into such countries for which export is prohibited under US American export control laws and its supplementary provisions. You hereby agree to strictly follow the regulations and to yourself be responsible for observing them. You are hereby made aware that you may be required to obtain governmental approval to export, reexport or import the product.

15.5 Registered trademarks

PROFINET® is a registered trademark of PROFIBUS & PROFINET International (PI), Karlsruhe.

IO-Link™ and IO-Link wireless™ are trade names of the “IO-Link Community”.

All other brands mentioned are property of their respective owner of the rights. Any company names and product designations provided in this document may be brands (company names or trademarks) of the corresponding owner and may be protected under trademark or patent law.

List of figures

Figure 1:	Device overview, NFD-3090-PNS-IOLM\W	7
Figure 2:	QR code (example)	10
Figure 3:	Derating netFIELD IO-Link Wireless Master device	12
Figure 4:	Connection example with W-Bridge	22
Figure 5:	Dashboard page (example)	38
Figure 6:	Menu item SignIn - Input mask for user name and password	39
Figure 7:	User Administration screen mask (initial state)	40
Figure 8:	User Administration screen mask	41
Figure 9:	Device configuration tab (example)	42
Figure 10:	Maintenance information tab	43
Figure 11:	Firmware update tab (example)	44
Figure 12:	Firmware update is performed (example)	46
Figure 13:	Factory reset tab	47
Figure 14:	MQTT tab, Client Status, Client Configuration sub tab (example)	48
Figure 15:	MQTT tab, Connection1 > IP settings sub sub tab (example)	49
Figure 16:	MQTT tab, Connection1 > Session settings sub sub tab (example)	50
Figure 17:	MQTT tab, Connection1 > Will settings sub sub tab (example)	51
Figure 18:	MQTT tab, Connection1 > Advanced settings sub sub tab (example)	52
Figure 19:	Channel selection tab	54
Figure 20:	Channel selection tab, Expert settings (example)	56
Figure 21:	IO-Link Wireless Master > Configuration tab	57
Figure 22:	Scan tab	59
Figure 23:	“Scan tab”, scan result	59
Figure 24:	Information tab, Device information (example)	62
Figure 25:	Status tab, Port status (example)	63
Figure 26:	Settings tab, Port cycle sub tab (example)	65
Figure 27:	Settings tab, Validation level sub tab (example)	66
Figure 28:	Settings tab, Transmission sub tab (example)	67
Figure 29:	Settings tab, Miscellaneous sub tab (example)	68
Figure 30:	Pairing tab after port mode was set correctly	70
Figure 31:	Pairing successfully finished	71
Figure 32:	IOLWD update tab, IOLWD firmware successfully updated (example)	73
Figure 33:	Display of the On Request Data, read/write IO-Link Device parameters	74
Figure 34:	Display of the ISDU, read/write IO-Link Wireless Master parameters	76
Figure 35:	Display of the Process Data	79
Figure 36:	List of the devices found in the local network	80
Figure 37:	IP configuration dialog	81
Figure 38:	IO-Link Wireless Master > Configuration tab	83
Figure 39:	Scan tab	84
Figure 40:	Scan tab with result	84

Figure 41:	Settings tab > Port cycle sub tab (example)	85
Figure 42:	Settings tab > Validation level sub tab (example)	86
Figure 43:	Settings tab > Transmission sub tab (example)	87
Figure 44:	Settings tab > Miscellaneous sub tab (example)	88
Figure 45:	Tab and table "Port process data" (example PD input valid = OK)	89
Figure 46:	Status tab, Port status	89
Figure 47:	Information tab, Device information	90
Figure 48:	ISDU tab, read/write IO-Link Device parameters	92
Figure 49:	ISDU tab, read/write IO-Link Wireless Master parameters	93
Figure 50:	Node NtpClientUpdateConfiguration (1)	97
Figure 51:	Node NtpClientUpdateConfiguration (2)	98
Figure 52:	Dialog for configuring the NTP client	98
Figure 53:	Dialog for configuring the NTP client (successful)	98
Figure 54:	OPC UA: Information model of the device	104
Figure 55:	Event Qualifier	121
Figure 56:	Dimensions NFD-3090-PNS-IOLM\W device	128

List of tables

Table 1:	List of revisions	5
Table 2:	Legend to the device overview, NFD-3090-PNS-IOLMW	8
Table 3:	Hardware	9
Table 4:	Software	9
Table 5:	Firmware	9
Table 6:	IO-Link Wireless Master	9
Table 7:	Supply voltage	11
Table 8:	Ethernet	11
Table 9:	SMA antenna type	12
Table 10:	Overview for installation and commissioning	15
Table 11:	Overview Tool chains 1, 2, 3	25
Table 12:	PROFINET modules and submodules	28
Table 13:	Port submodules (PDCT), and (Expert)	29
Table 14:	Parameters of the submodules IO-Link Wireless Device XX I / XX O + PQI (PDCT)	30
Table 15:	Parameter IO-Link Wireless Master	31
Table 16:	Parameters of the submodules IO-Link Wireless Device XX I / XX O + PQI (Expert)	32
Table 17:	Calculation of the port cycle time of the IO-Link Wireless Master	33
Table 18:	Time base of I-Am-Alive time	34
Table 19:	Calculation of I-Am-Alive time	34
Table 20:	Functional overview of the netFIELD Wireless Web Server for IO-Link Devices ...	36
Table 21:	Data on "Dashboard" page	38
Table 22:	Maintenance information	43
Table 23:	Options to delete settings	47
Table 24:	MQTT in port configuration for IO-Link Device, Client Status	48
Table 25:	MQTT in port configuration for IO-Link Device, Client Configuration	49
Table 26:	MQTT in port configuration for IO-Link Device, Connection1 > IP settings	49
Table 27:	MQTT in port configuration for IO-Link Device, Connection1 > Session settings ...	50
Table 28:	MQTT in port configuration for IO-Link Device, Connection1 > Will settings	51
Table 29:	MQTT in port configuration for IO-Link Device, Connection1 > Advanced settings	52
Table 30:	IO-Link Wireless Master settings - Channel selection	54
Table 31:	IO-Link Wireless Master settings - Configuration	57
Table 32:	Scan result, pairing	59
Table 33:	Information, Status, Settings, Pairing, IOLWD Update, ISDU, or Process Data	61
Table 34:	Information tab, with Device information	62
Table 35:	Port status, overview	63
Table 36:	Port state, possible values	64
Table 37:	Settings in port configuration for IO-Link Device, Port cycle sub tab	65
Table 38:	Calculation of the port cycle time of the IO-Link Wireless Master	66

Table 39:	Settings in port configuration for IO-Link Device, Validation level sub tab	66
Table 40:	Validation and backup, possible values	67
Table 41:	Settings in port configuration for IO-Link Device, Transmission sub tab	67
Table 42:	Settings in port configuration for IO-Link Device, Miscellaneous sub tab	68
Table 43:	Process data, parameters	79
Table 44:	Configuration, possible values for IO-Link Wireless Master (example)	83
Table 45:	Scan result	84
Table 46:	Settings > Port cycle (example values)	85
Table 47:	Settings > Validation level (example values)	86
Table 48:	Settings > Transmission (example values)	87
Table 49:	Settings > Miscellaneous (example values)	88
Table 50:	Status tab, Port status, displayed values	89
Table 51:	Track and Slot – example 1 wireless device with slot type “double slot”	94
Table 52:	Dialog Add Server - tabs Discovery and Advanced	96
Table 53:	Input data of submodule “IO-Link Wireless Master (PDCT, Expert)”	99
Table 54:	Output data of submodule “IO-Link Wireless Master (PDCT, Expert)”	99
Table 55:	Input data of submodule “IO-Link Wireless Device X I / X O + PQI (PDCT, Expert)”	100
Table 56:	Output data of submodule “IO-Link Wireless Device X I / X O + PQI (PDCT, Expert)”	100
Table 57:	Input data of submodule “IO-Link Wireless Device X I + PQI (PDCT, Expert)”	101
Table 58:	Output data of submodule “IO-Link Wireless Device X I + PQI (PDCT, Expert)”	101
Table 59:	Input data of submodule “IO-Link Wireless Device X O + PQI (PDCT, Expert)”	102
Table 60:	Output data of submodule “IO-Link Wireless Device X O + PQI (PDCT, Expert)”	102
Table 61:	Port Qualifier Information	103
Table 62:	Provider and consumer status	103
Table 63:	Device identification	105
Table 64:	Identification of the connected IO-Link Devices	105
Table 65:	NTP client configuration	106
Table 66:	General parts of a topic	107
Table 67:	Gateway topics	107
Table 68:	Gateway Capabilities, "JSON key"	107
Table 69:	Gateway Configuration, "JSON key"	108
Table 70:	Master topics	109
Table 71:	Port List, "JSON key"	110
Table 72:	Port Capabilities, "JSON key"	111
Table 73:	Port Status, "JSON key"	111
Table 74:	Port Configuration, "JSON key"	111
Table 75:	Device topics	113
Table 76:	Device List (JSON object)	113
Table 77:	Device Process Data (JSON object)	114
Table 78:	Device Process Data Input (JSON object)	114

Table 79:	Device Process Data Output (JSON object).....	115
Table 80:	Device Events (JSON object)	115
Table 81:	MQTT topics	116
Table 82:	MQTT Configuration, "JSON key"	116
Table 83:	MQTT Connection Status, "JSON key"	116
Table 84:	States of the SYS-LED	117
Table 85:	Definitions of the states of the SYS LED	117
Table 86:	APL LED states	118
Table 87:	Supply voltage status 1L and 2L.....	118
Table 88:	Communication status PROFINET IO-Device	119
Table 89:	Definition LED states communication status	119
Table 90:	Ethernet status PROFINET IO-Device	119
Table 91:	Definition LED states Ethernet status	119
Table 92:	Wireless track status WT1 ... WT3.....	120
Table 93:	Wireless track status WP01 ... WP16	120
Table 94:	Event Qualifier	121
Table 95:	IO-Link Wireless Master Event Codes.....	121
Table 96:	IO-Link Device Event Codes (common)	122
Table 97:	Technical data NFD-3090-PNS-IOLM\W	124
Table 98:	Technical data SMA antenna.....	125
Table 99:	Technical data IO-Link Wireless Master	126
Table 100:	Technical data PROFINET IO-Device for the NFD-3090-PNS-IOLM\W device	126
Table 101:	Technical Data Web Server.....	127
Table 102:	OPC UA Server	127
Table 103:	Technical data MQTT Client	127
Table 104:	Signal words	132
Table 105:	Signs.....	132
Table 106:	Directives and standards netFIELD IO-Link Wireless Master device	133

Glossary

DCP	Discovery and basic configuration protocol: Protocol for identifying and configuring devices, which is defined within the PROFINET specification
DHCP	Dynamic host configuration protocol: protocol simplifying the configuration of IP networks by automatically assigning IP addresses
GSDML	Generic Station Description Markup Language
IODD	IO Device Description: Describes sensors and actuators with an IO-Link communication interface
IO-Link	Communication system to connect intelligent sensors and actuators to an automation system standardized in the IEC 61131-9 under the name Single-drop digital communication interface for small sensors and actuators (SDCI).
IO-Link wireless	Extension of the IO-Link base technology for IO-Link wireless communication according to the IO-Link Wireless System Specification
IP	Internet Protocol: Belongs to the TCP/IP family of protocols and is defined in RFC791 (available on http://www.ietf.org/rfc/rfc791.txt). It is based on layer 3 of the ISO/OSI 7 layer model of networking and is a connectionless protocol, i. e. you do not need to open a connection to a computer before sending an IP data packet to it. Therefore, IP is not able to guarantee that the IP data packets really arrive at the recipient. On IP level, neither the correctness of data nor the consistence and completeness are checked. IP defines special addressing mechanisms; see IP address.
IP adresse	Identifies a device or a computer within an IP-based network and is defined in the Internet Protocol Version 4 (IPv4) as a 32-bit number. For ease of notation the address is usually divided into four 8-bit numbers represented in decimal notation and separated by points: a.b.c.d. Each letter stands for an integer value between 0 and 255, e.g. 192.168.30.16. However, not all combinations are allowed, some are reserved for special purposes. The IP address 0.0.0.0 is defined as invalid.
ISDU	Indexed Service Data Unit: Used for acyclic transmission of parameters (IO-Link wireless communication)
MAC-ID	Media Access Control-ID: unique (physical) Ethernet address of the device on delivery, defined as 48 bit number; for ease of notation it is divided into six 8 bit numbers which are represented in hexadecimal notation and separated by "minus"-signs (-): A-B-C-D-E-F (A-B-C-D-E-F each are integer values between 0 and 0xFF=255), Example:00-02-A2-20-91-18
MQTT	Message Queuing Telemetry Transport: Publish-subscribe based "light weight" M2M (machine to machine) messaging protocol for use on top of the TCP/IP protocol and for telemetry data transmission with a very low footprint. As protocol of the Internet of Things (IoT), it has been standardized by OASIS (Organization for the Advancement of Structured Information Standards) since 2013. Additional features:

	Ease of use, efficient use of resources, security mechanisms, support for several cloud systems, session-aware, data-agnostic (i.e. flexible structures allow to transmit multiple types of information)
netFIELD	Technology platform for the industry 4.0 integration of field devices and sensors developed by Hilscher Gesellschaft für Systemautomation mbH
OPC UA	Open Platform Communications Unified Architecture; is a platform-independent standard through which various kinds of systems and devices can communicate by sending Messages between Clients and Servers over various types of networks. It supports robust, secure communication that assures the identity of Clients and Servers and resists attacks.
OPC UA Server for netPROXY	Task-based firmware component integrating the open source project open62541 stack, as well as an additional layer from Hilscher as netPROXY package.
PDCT	Port and Device Configuration Tool
PELV	Protective Extra Low Voltage with safe disconnection
PER	Packet Error Ratio
PLC	Programmable Logic Controller: Industrial digital computer for the control of manufacturing processes
PNIO	PROFINET IO
PROFINET	Communication system for Industrial Ethernet, designed and developed by PROFIBUS & PROFINET International (PI), which uses some mechanisms similar to those of the PROFIBUS field bus
PROFINET IO	PROFINET IO (Input - Output) has been created for the connection of remote peripheral to a controller
PROFINET IO-Controller	PROFINET control unit responsible for the defined run-up of an I/O subsystem and the cyclic or acyclic data exchange
PROFINET IO-Device	PROFINET field device that cyclically receives output data from its IO-Controller and responds with its input data
QR code	Quick response code according ISO/IEC 18004 standard. A type of two-dimensional barcode that can use up to 4000 alphanumeric characters, often used with smartphone camera.
SELV	Safety Extra Low Voltage
SMI	Standard Master Interface
UUID	Universally Unique Identifier

Contacts

HEADQUARTER

Germany

Hilscher Gesellschaft für
Systemautomation mbH
Rheinstraße 15
65795 Hattersheim
Phone: +49 (0) 6190 9907-0
Fax: +49 (0) 6190 9907-50
E-mail: info@hilscher.com

Support

Phone: +49 (0) 6190 9907-990
E-mail: hotline@hilscher.com

SUBSIDIARIES

China

Hilscher Systemautomation (Shanghai) Co. Ltd.
200010 Shanghai
Phone: +86 (0) 21-6355-5161
E-mail: info@hilscher.cn

Support

Phone: +86 (0) 21-6355-5161
E-mail: cn.support@hilscher.com

France

Hilscher France S.a.r.l.
69800 Saint Priest
Phone: +33 (0) 4 72 37 98 40
E-mail: info@hilscher.fr

Support

Phone: +33 (0) 4 72 37 98 40
E-mail: fr.support@hilscher.com

India

Hilscher India Pvt. Ltd.
Pune, Delhi, Mumbai
Phone: +91 8888 750 777
E-mail: info@hilscher.in

Support

Phone: +91 8108884011
E-mail: info@hilscher.in

Italy

Hilscher Italia S.r.l.
20090 Vimodrone (MI)
Phone: +39 02 25007068
E-mail: info@hilscher.it

Support

Phone: +39 02 25007068
E-mail: it.support@hilscher.com

Japan

Hilscher Japan KK
Tokyo, 160-0022
Phone: +81 (0) 3-5362-0521
E-mail: info@hilscher.jp

Support

Phone: +81 (0) 3-5362-0521
E-mail: jp.support@hilscher.com

Republic of Korea

Hilscher Korea Inc.
13494, Seongnam, Gyeonggi
Phone: +82 (0) 31-739-8361
E-mail: info@hilscher.kr

Support

Phone: +82 (0) 31-739-8363
E-mail: kr.support@hilscher.com

Austria

Hilscher Austria GmbH
4020 Linz
Phone: +43 732 931 675-0
E-mail: skuljici@hilscher.com

Support

Phone: +43 732 931 675-0
E-mail: skuljici@hilscher.com

Switzerland

Hilscher Swiss GmbH
4500 Solothurn
Phone: +41 (0) 32 623 6633
E-mail: info@hilscher.ch

Support

Phone: +41 (0) 32 623 6633
E-mail: support.swiss@hilscher.com

USA

Hilscher North America, Inc.
Lisle, IL 60532
Phone: +1 630-505-5301
E-mail: info@hilscher.us

Support

Phone: +1 630-505-5301
E-mail: us.support@hilscher.com